



10 MHz-520 MHz AM/FM
SIGNAL GENERATOR
TF 2015

Instruction Manual
No. EB 2015
for
10 MHz - 520 MHz AM/ FM
Signal Generator
TF 2015



1973

MARCONI INSTRUMENTS LIMITED
ST. ALBANS HERTFORDSHIRE ENGLAND



Contents

Chapter 1 GENERAL INFORMATION

1.1	Introduction	***	***	***	***	***	***	***	***	5
1.2	Data summary	***	***	***	***	***	***	***	***	6
1.3	Versions and accessories	***	***	***	***	***	***	***	***	8

Chapter 2 OPERATION

2.1	Preliminary requirements	***	***	***	***	***	***	***	***	10
2.2	AC supply cable	***	***	***	***	***	***	***	***	10
2.3	Battery operation	***	***	***	***	***	***	***	***	10
2.4	Fuses	***	***	***	***	***	***	***	***	10
2.5	Controls and connectors	***	***	***	***	***	***	***	***	10
2.6	Setting frequency	***	***	***	***	***	***	***	***	12
2.7	CW output	***	***	***	***	***	***	***	***	13
2.8	Internal amplitude modulation	***	***	***	***	***	***	***	***	13
2.9	Internal frequency modulation	***	***	***	***	***	***	***	***	13
2.10	External a.m. or f.m.	***	***	***	***	***	***	***	***	13
2.11	Internal a.m. with external f.m.	***	***	***	***	***	***	***	***	13
2.12	Internal f.m. with external a.m.	***	***	***	***	***	***	***	***	13
2.13	Internal modulation output	***	***	***	***	***	***	***	***	14
2.14	Operation with digital synchronizer	***	***	***	***	***	***	***	***	14
2.15	Sweep facility	***	***	***	***	***	***	***	***	14
2.16	Attenuator calibration	***	***	***	***	***	***	***	***	14
2.17	Matching to high impedance loads	***	***	***	***	***	***	***	***	14
2.18	Use of i.f. probes	***	***	***	***	***	***	***	***	15
2.19	Quieting sensitivity measurements	***	***	***	***	***	***	***	***	15
2.20	Correct use of the +6dB output facility	***	***	***	***	***	***	***	***	15
Decibel conversion tables										16 & 17

Chapter 3 TECHNICAL DESCRIPTION

3.1	Mechanical characteristics	***	***	***	***	***	***	***	***	19
3.2	Overall function	***	***	***	***	***	***	***	***	19
3.3	Circuit functions	***	***	***	***	***	***	***	***	20
3.4	RF oscillators	***	***	***	***	***	***	***	***	20
3.5	Tuning and frequency modulation	***	***	***	***	***	***	***	***	20
3.6	First a.l.c. loop	***	***	***	***	***	***	***	***	20
3.7	Pre-amplifier	***	***	***	***	***	***	***	***	20
3.8	Modulator and amplitude modulation	***	***	***	***	***	***	***	***	21
3.9	Counter amplifier	***	***	***	***	***	***	***	***	21
3.10	AM driver and d.c. offset circuits	***	***	***	***	***	***	***	***	21
3.11	Wide band amplifier	***	***	***	***	***	***	***	***	21
3.12	Second a.l.c. circuit	***	***	***	***	***	***	***	***	21
3.13	Fine r.f. output control	***	***	***	***	***	***	***	***	21
3.14	Modulation oscillator	***	***	***	***	***	***	***	***	22
3.15	Predistortion circuit	***	***	***	***	***	***	***	***	22
3.16	+6 dB output	***	***	***	***	***	***	***	***	22
3.17	Monitor circuits	***	***	***	***	***	***	***	***	23
3.18	Coarse r.f. output control	***	***	***	***	***	***	***	***	23
3.19	Power unit	***	***	***	***	***	***	***	***	23
3.20	Supply filters	***	***	***	***	***	***	***	***	23

NOTES AND CAUTIONS

ELECTRICAL SAFETY PRECAUTIONS

This equipment is protected in accordance with IEC Safety Class 1. It has been designed and tested according to IEC Publication 348, 'Safety Requirements for Electronic Measuring Apparatus', and has been supplied in a safe condition. The following precautions must be observed by the user to ensure safe operation and to retain the equipment in a safe condition.

Defects and abnormal stresses

Whenever it is likely that protection has been impaired, for example as a result of damage caused by severe conditions of transport or storage, the equipment shall be made inoperative and be secured against any unintended operation.

Removal of covers

Removal of the covers is likely to expose live parts although reasonable precautions have been taken in the design of the equipment to shield such parts. The equipment shall be disconnected from the supply before carrying out any adjustment, replacement or maintenance and repair during which the equipment shall be opened. If any adjustment, maintenance or repair under voltage is inevitable it shall only be carried out by a skilled person who is aware of the hazard involved.

Note that capacitors inside the equipment may still be charged when the equipment has been disconnected from the supply. Before carrying out any work inside the equipment, capacitors connected to high voltage points should be discharged; to discharge mains filter capacitors, if fitted, short together the L (live) and N (neutral) pins of the mains plug.

Mains plug

The mains plug shall only be inserted in a socket outlet provided with a protective earth contact. The protective action shall not be negated by the use of an extension lead without protective conductor. Any interruption of the protective conductor inside or outside the equipment is likely to make the equipment dangerous. Before fitting a non-soldered plug to the mains lead, cut off the tinned ends of the mains lead. Otherwise cold flowing of the solder could cause intermittent connections.

Fuses

Note that there is a supply fuse in both the live and neutral wires of the supply lead. If only one of these fuses should rupture, certain parts of the equipment could remain at supply potential.


To provide protection against breakdown of the supply lead, its connectors, and filter where fitted, an external supply fuse (e.g. fitted in the connecting plug) should be used in the live lead. The fuse should have a continuous rating not exceeding 6 A.

Make sure that only fuses with the required rated current and of the specified type are used for replacement. The use of mended fuses and the short-circuiting of fuse holders shall be avoided.

RADIO FREQUENCY INTERFERENCE

This equipment conforms with the requirements of IEC Directive 76/889 as to limits of r.f. interference.

CAUTION : STATIC SENSITIVE COMPONENTS

Components identified with the symbol  on the circuit diagrams and/or parts lists are static sensitive devices. The presence of such devices is also indicated in the equipment by orange discs, flags or labels bearing the same symbol. Certain handling precautions must be observed to prevent these components being permanently damaged by static charges or fast surges.

- (1) If a printed board containing static sensitive components (as indicated by a warning disc or flag) is removed, it must be temporarily stored in a conductive plastic bag.
- (2) If a static sensitive component is to be removed or replaced the following anti-static equipment must be used.

A work bench with an earthed conductive surface.

Metallic tools earthed either permanently or by repeated discharges.

A low-voltage earthed soldering iron.

An earthed wrist strap and a conductive earthed seat cover for the operator, whose outer clothing must not be of man-made fibre.

- (3) As a general precaution, avoid touching the leads of a static sensitive component. When handling a new one, leave it in its conducting mount until it is required for use.

WARNING : HANDLING HAZARDS

This equipment is formed from metal pressings and although every endeavour has been made to remove sharp points and edges care should be taken, particularly when servicing the equipment, to avoid minor cuts.

WARNING : TOXIC HAZARD

Many of the electronic components used in this equipment employ resins and other chemicals which give off toxic fumes on incineration. Appropriate precautions should therefore be taken in the disposal of these items.

Beryllia (beryllium oxide) is used in the construction of the following components in this equipment :

Chapter 4 MAINTENANCE

4.1	Introduction	24
4.2	Screw fasteners	24
4.3	Access to sub-assemblies and components	24
4.4	Preliminary checks	24
4.5	Test equipment	24
4.6	Performance checks	27
4.6.1	Power supply Unit A20	27
4.6.2	Frequency calibration Unit A12 (sub-assemblies A1 to A11)	28
4.6.3	RF output (normal)	28
4.6.4	RF output (+6 dB)	28
4.6.5	Checking v.s.w.r. (frequencies 350 to 500 MHz)	28
4.6.6	Checking v.s.w.r. (frequencies 10 to 350 MHz)	29
4.6.7	Modulation oscillator performance	29
4.6.8	Checking f.m. deviation	29
4.6.9	Checking a.m. depth	30
4.6.10	Checking f.m. tracking	30
4.6.11	Checking a.l.c. system	30
4.6.12	Counter output level	30
4.6.13	External modulation sensitivity	30
4.6.14	AM distortion	31
4.6.15	FM distortion	31
4.6.16	Spurious f.m. on c.w.	31
4.6.17	Spurious a.m. on c.w.	32
4.6.18	Spurious a.m. on f.m.	32
4.6.19	Spurious f.m. on a.m.	33
4.6.20	Carrier harmonics	33
4.6.21	Coarse r.f. output control	33
4.6.22	Fine r.f. output control	33
4.7	Cleaning rotary switches	33

Chapter 5 REPAIR

5.1	Introduction	34
5.2	Fault location	34
5.3	Replacing tuning drive cord	39
5.4	Replacing transformers A16, T1, T2	40
5.5	Additional information	40

Chapter 6 REPLACEABLE PARTS

Introduction and ordering	41
Index to units	54

Chapter 7 CIRCUIT DIAGRAMS

Circuit notes	56
Fig. 7.1	RF oscillators	57
7.2	Wide band amplifiers - modulator - a.l.c. circuits	59
7.3	Tuning - modulation - monitor circuits	61
7.4	Power unit and coarse attenuator	63

1.1 INTRODUCTION

TF 2015 is a general purpose a.m./f.m. signal generator covering the frequency range 10 MHz to 520 MHz in eleven switched bands. Fundamental frequency generation is by voltage tuned oscillators which, in conjunction with the panel mounted controls, enable easy tuning to narrow band communication receivers up to the highest carrier frequencies.

Outputs up to 200 mV e.m.f. can be obtained with up to 80% a.m. or up to 400 mV e.m.f. for c.w. or f.m. Output is maintained constant over the whole frequency range by an automatic level control loop and is adjustable by coarse and fine

attenuators calibrated in dBm in 50 Ω . An auxiliary output is available for driving a counter or digital synchronizer.

Amplitude modulation and frequency modulation are both derived from an internal 1 kHz oscillator. AM depth is variable up to 80% by a directly calibrated control. FM is directly calibrated in two full-scale ranges of 10 kHz and 100 kHz peak deviation. External modulation may also be applied and a mixed a.m. and f.m. facility is available.

The instrument, which is compact and portable, can be operated from a.c. supplies or from an external battery.

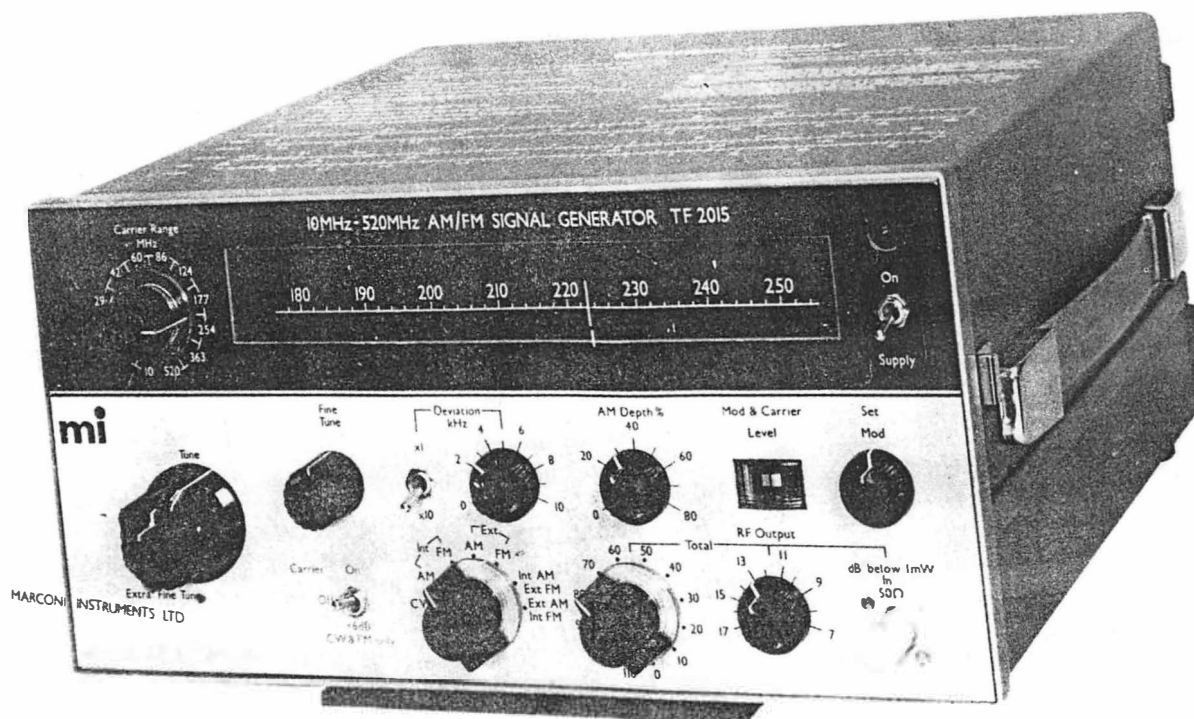


Fig. 1.1 10 MHz - 520 MHz AM FM Signal Generator TF 2015

1.2 DATA SUMMARY

FREQUENCY

Range :	10 MHz to 520 MHz in 11 ranges :
	10.0 MHz to 14.3 MHz 86 MHz to 124 MHz
	14.3 MHz to 20.5 MHz 124 MHz to 177 MHz
	20.5 MHz to 29.4 MHz 177 MHz to 254 MHz
	29.4 MHz to 42.0 MHz 254 MHz to 363 MHz
	42.0 MHz to 60.0 MHz 363 MHz to 520 MHz
	60.0 MHz to 86.0 MHz
Discrimination :	Suitable for tuning into a receiver with a 6 kHz bandwidth (± 3 kHz at -3 dB points).
Calibration accuracy :	$\pm 1.5\%$ with extra fine tune control centred.
Stability :	At a constant ambient temperature in the range $+10^{\circ}\text{C}$ to $+35^{\circ}\text{C}$ and after 2 hours from switch on the drift does not exceed 2 parts in 10^5 in 5 minutes.

RF OUTPUT

Level :	-127 dBm to -7 dBm ($0.2\text{ }\mu\text{V}$ to 200 mV e. m. f.) with up to 80% a. m.; up to -1 dBm (400 mV e. m. f.) with no a. m.
Attenuators :	Coarse : 11 steps of 10 dB. Fine : 0 to 10 dB continuously variable, directly calibrated in dBm.
ALC :	With a terminated output, automatic level control maintains the level meter indication substantially constant.
Total level accuracy : (above $2\text{ }\mu\text{V}$ e. m. f.)	With carrier switch in the on position : ± 1 dB up to 100 MHz ± 2 dB above 100 MHz
Source impedance :	$50\text{ }\Omega$. VSWR better than 1.3:1 with 10 dB or more in the coarse attenuator.
Counter output :	Greater than 80 mV into $50\text{ }\Omega$
Leakage radiation :	Up to 520 MHz with a receiver sensitivity set at $1.0\text{ }\mu\text{V}$, a 1 inch 2-turn loop feeding the receiver cannot detect a signal of this level at a distance greater than 1 inch from generator. Allows measurements to be made on receivers with sensitivities down to $0.1\text{ }\mu\text{V}$.

AMPLITUDE MODULATION

Depth :	Continuously variable up to an indicated 80% by directly calibrated control.
Monitor :	Reference level indicator.
Calibration accuracy :	$\pm 5\%$ modulation depth at an indicated 30% rising to $\pm 10\%$ modulation depth at an indicated 80%.
Envelope distortion :	Less than 5% at modulation depths up to 30%.
Internal frequency :	1 kHz $\pm 10\%$.
AF output :	Fixed level greater than 1.5 V r.m.s. into 10 k Ω .
External frequency range :	50 Hz to 20 kHz.
External input requirement :	Less than 1.5 V r.m.s. into 1 k Ω to set reference level.

FREQUENCY MODULATION

Deviation :	Continuously variable in two ranges with full-scale settings of 10 kHz and 100 kHz.
Frequency modulation performance :	Accuracy within $\pm 15\%$ of range full-scale at 1 kHz modulating frequency. Distortion less than 3% using internal modulating oscillator. However, between 11 MHz and 60 MHz the maximum deviation is 15 kHz for 3% distortion and $\pm 15\%$ accuracy. Within this frequency range deviation above 15 kHz may be subject to an additional 2% distortion and an additional -5% deviation error.
Monitor :	Reference level indicator.
Internal frequency :	1 kHz $\pm 10\%$.
External frequency response characteristics :	50 Hz to 20 kHz within ± 1 dB of the response at 1 kHz. Usable over modulation frequency range 30 Hz to 100 kHz.
External input requirement :	Less than 1.5 V r.m.s. into 1 k Ω to set reference level.

SPURIOUS SIGNALS

Carrier harmonics :	At least 26 dB below the carrier at output levels up to -7 dBm.
Non-harmonic components : (coherent)	None.
FM on c.w. :	With telephone psophometric weighting, equivalent deviation is less than 60 Hz up to 254 MHz and less than 100 Hz up to 520 MHz.

AM on c.w. :	With telephone psophometric weighting, less than 0.2% modulation depth.
FM on a.m. :	With telephone psophometric weighting, less than 500 Hz deviation at 30% modulation depth with 1 kHz modulation frequency.
AM on f.m. :	With telephone psophometric weighting, at 30 kHz deviation, less than 3% a.m. above 21 MHz and 5% a.m. below.

POWER REQUIREMENTS

AC mains :	Any voltage within the extreme limits 190 to 264 V or 95 to 132 V, at any frequency between 45 Hz and 500 Hz. Consumption : approx. 10 VA.
External d.c. :	24 V to 32 V (negative earth).

SAFETY

Complies with IEC and BS 4743 safety requirements.

RADIO FREQUENCY INTERFERENCE

Conforms to the requirements of EEC directive 76/889 as to limits of r.f. interference.

LIMIT RANGE OF OPERATION

Temperature :	0 to 55°C
---------------	-----------

CONDITIONS OF STORAGE AND TRANSPORT

Temperature :	-40°C to +70°C.
Humidity :	Up to 90% relative humidity.
Altitude :	Up to 2500 m (pressurized freight at 25 kN/m ² differential, i.e. 3.7 lbf/m ²).

DIMENSIONS & WEIGHT

Height	Width	Depth	Weight
140 mm	286 mm	311 mm	5.4 kg
5½ in	11¼ in	12¼ in	12 lb

1.3 VERSIONS AND ACCESSORIES

Code No

52015-015

52015-301

Versions

Standard version.

(Joint Services designation : Generator Signal CT584/2). Alternative version with BNC counter output connector and additional accessories.

Accessories supplied

43129-071	Mains cable.
23443-814	Adapter BNC to TNC.
43126-012	RF cable TM 4969/3, BNC plug to BNC plug.
41690-102	Protective front panel cover.
46883-209	(Supplied with 52015-301 only) Spare fuses kit comprising :- 2 off 23411-054, 160 mA time lag, 2 off 23411-055, 250 mA time lag, 2 off 23411-056, 0.5A time lag.

Accessories available

41690-044	Carrying case.
44411-001	Matching unit TM 5569; a series $25\ \Omega$ resistor that converts the effective source impedance of the generator from $50\ \Omega$ to $75\ \Omega$. BNC socket to Belling-Lee type L734/P plug.
44411-019	Matching T pad TM 5573/3, for matching to $75\ \Omega$ loads. Input/output voltage ratio 2:1. BNC plug to BNC socket.
44425-501	20 dB attenuator pad TM 5573; BNC plug to BNC socket.
43281-007	RF fuse unit TM 9884; for protecting attenuator resistors when connecting to active loads. BNC plug to BNC socket.
54451-121	455 kHz i.f. probe
54451-061	470 kHz i.f. probe
54451-071	10.7 MHz i.f. probe
	<div style="display: flex; align-items: center;"> <div style="font-size: 3em; margin-right: 10px;">}</div> <div> each provides a crystal controlled signal at a standard i.f. for use in receiver alignment. </div> </div>
54127-231	Shelf rack mounting kit (single)
54127-241	Shelf rack mounting kit (double)
	<div style="display: flex; align-items: center;"> <div style="font-size: 3em; margin-right: 10px;">}</div> <div> Fitting instructions are included in the kit. </div> </div>

2.1 PRELIMINARY REQUIREMENTS

Prior to connecting the instrument to the a. c. supply check that :

- (1) The voltage selector switch is set to accept the local supply (voltage regulation eliminates transformer tap changing except between 95/132 V and 190/264 V ranges).

To change the range, remove the locking plate, set the switch correctly, reverse the plate and refit.

- (2) Fuses are of the required rating – see Sect. 2.4 – and secure in the holders.

2.2 AC SUPPLY CABLE

The a. c. supply cable is fitted at one end with a female plug which connects with the instrument. When fitting the supply plug ensure that the conductors are connected as follows :

Earth	–	Green/yellow
Neutral	–	Blue
Live	–	Brown

2.3 BATTERY OPERATION

For battery operation it is only required to connect a 24 V battery to the appropriate terminals located at the rear of the instrument.

A mains/battery switch is not provided since this input functions automatically and the circuits are protected against reverse polarity. This feature could be used for emergency standby battery operation which would cut in automatically in the event of a mains supply failure.

2.4 FUSES

For a. c. operation the instrument is normally supplied with 2 fuses (FS1 & FS3) rated at 160 mA and with the mains selector switch set for supply voltages of 190 to 264 V. For mains voltages of 95 to 132 V change the fuses for those rated at 250 mA.

For battery operation, the input circuit incorporates a fuse (FS2) rated at 500 mA.

All fuses are slow blow (time lag) types.

Note. To avoid damage to the resistors in the coarse RF OUTPUT attenuator RF Fuse Unit TM 9884 (43281-007) should be used when TF 2015 is applied to the testing of transceivers.

2.5 CONTROLS AND CONNECTORS

Front panel Fig. 2.1

- ① AC SUPPLY switch. Positioned up to switch ON.
- ② PILOT LAMP. Lit when a. c. supply is switched on or when external battery is connected.
- ③ CARRIER switch. Set at ON for normal c. w., f. m., or a. m. operation. The +6 dB position provides a high output for c. w. or f. m. only. The OFF position allows the carrier to be switched off without switching the instrument off. (See Sect. 2.20)
- ④ CARRIER RANGE switch. Selects the required frequency range and exposes the appropriate tuning scale.

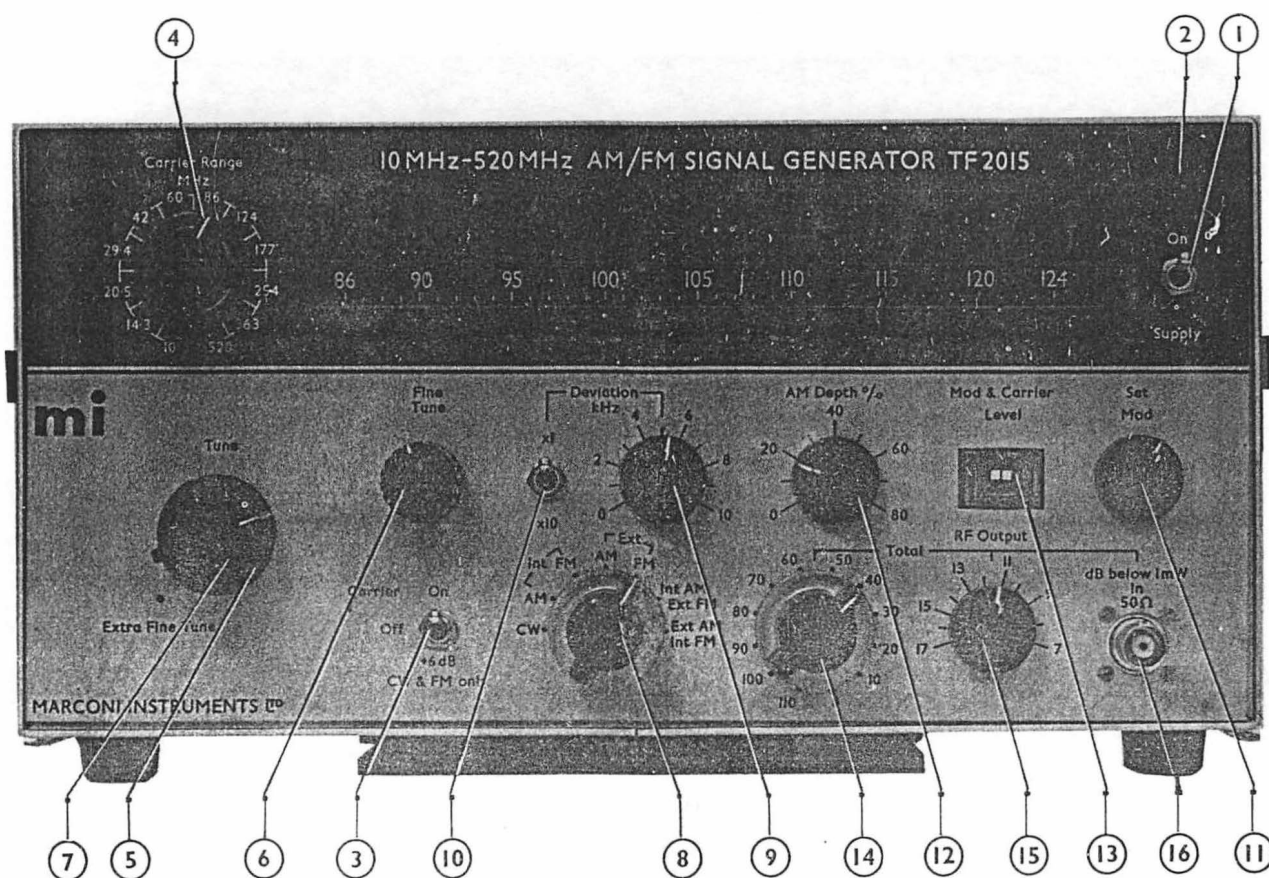


Fig. 2.1 Front panel controls

- ⑤ TUNE control. This is a nineteen position switch to set the generator approximately to the required frequency.
- ⑥ FINE TUNE control. Provides continuous tuning between each of the nineteen positions of (5) above.
- ⑦ EXTRA FINE TUNE control. An uncalibrated fine tuning control which allows very precise setting of the carrier frequency.
- ⑧ FUNCTION switch. Selects c.w., internal or external a.m. or f.m. or simultaneous f.m. and a.m.
- ⑨ DEVIATION control. Full-scale value is 10 or 100 kHz depending on setting of x1, x10 multiplier.
- ⑩ DEVIATION x1, x10. Multiplier for use with DEVIATION control.
- ⑪ SET MOD control. Adjusted to set the pointer of the MOD & CARRIER LEVEL meter to the reference mark for f.m. or a.m.
- ⑫ AM DEPTH. Adjusted to provide the desired a.m. depth from 0 to 80%.
- ⑬ MOD & CARRIER LEVEL meter. Indicates correct reference level for a.m. and f.m. and also correct a.l.c. operation in the c.w. mode.
- ⑭ RF OUTPUT (coarse). Stepped attenuator providing increments of 10 dB from 0 to 110 dB.
- ⑮ RF OUTPUT (fine). Continuously variable to interpolate between 10 dB steps.
- ⑯ RF OUTPUT connector. BNC 50 Ω . Output in -dBm given by sum of coarse and fine RF OUTPUT control settings. Add +6 dB when CARRIER switch is in +6 dB position. (See Sect. 2.20)

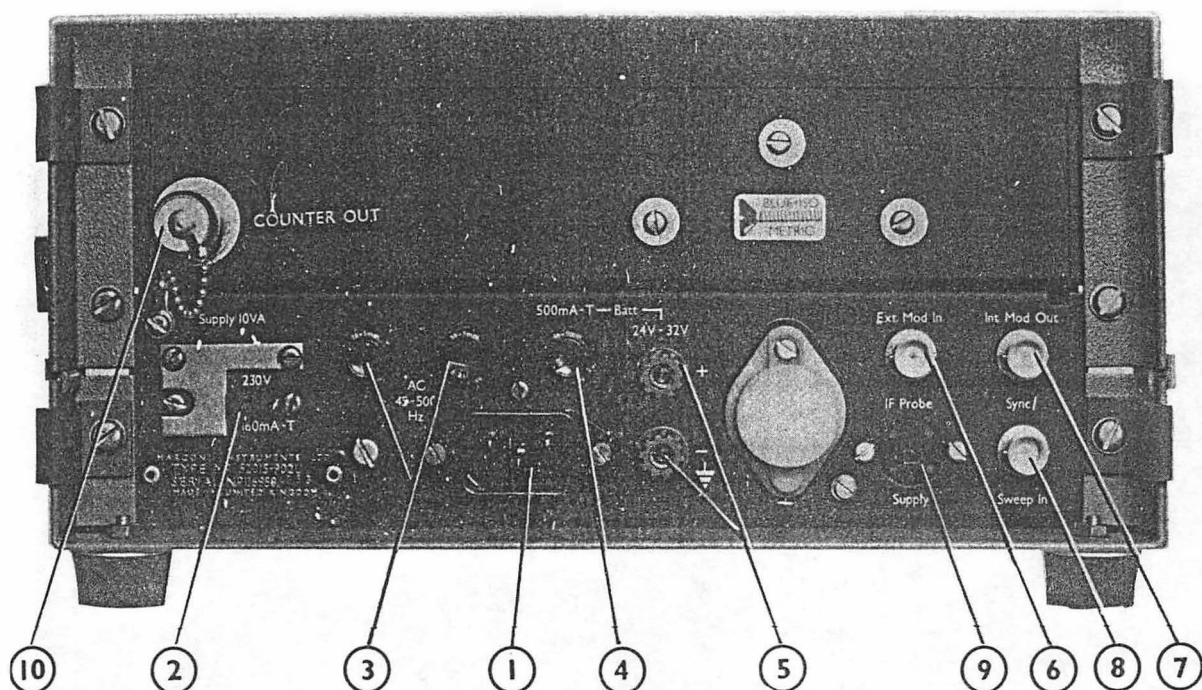


Fig. 2.2 Rear panel connectors

Rear panel Fig. 2.2

- ① MAINS INPUT connector. Bulgin P580. The a.c. supply is connected through this plug which mates with the connector fitted to the supplied mains cable.
- ② VOLTAGE SELECTOR switch. Selects either 95 to 132 V or 190 to 264 V to suit local a.c. supply.
- ③ AC FUSES (FS1 & FS3). Mains input fuses rated at 160 mA (time lag) for 190 to 264 V or 250 mA (time lag) for 90 to 132 V.
- ④ BATTERY FUSE (FS2). Battery input fuse rated at 500 mA (time lag).
- ⑤ BATTERY TERMINALS. Battery input terminals (negative is connected to chassis).
- ⑥ EXT MOD IN connector. BNC input for external modulation.
- ⑦ INT MOD OUT connector. BNC. 1 kHz internal modulation oscillator output when FUNCTION switch is set at INT AM or FM.

- ⑧ SYNC/SWEEP IN connector. BNC, accepts a frequency sweep voltage or the control voltage from a digital synchronizer.
- ⑨ IF PROBE SUPPLY connector. DIN loud-speaker socket provides +22 V for external i.f. probe.
- ⑩ COUNTER OUT. BNC (or TNC) 50 Ω . For connection to an external counter or digital synchronizer.

2.6 SETTING FREQUENCY

- (1) Set SUPPLY switch at ON and check that the pilot lamp is lit.
- (2) Using the output cable supplied connect TF 2015 to the equipment under test.
- (3) Set FUNCTION switch at CW and the CARRIER RANGE switch to select the desired frequency range.
- (4) Set CARRIER switch at ON and check that the meter pointer is within the white box.

- (5) Rotate the stepped TUNE control to position the pointer of the tuning scale as close as possible to the desired frequency. Then adjust the FINE TUNE control to position the pointer correctly. For final precise adjustment use the EXTRA FINE TUNE control.

Note : After thermal equilibrium has been reached the typical band switching restabilization time is 10 minutes.

2.7 CW OUTPUT

For an unmodulated c. w. output.

- (1) Set FUNCTION switch at CW.
- (2) For normal operation set CARRIER switch at ON and check that the meter pointer is within the white box. For extra output set CARRIER switch at +6 dB. (See Sect. 2.20)
- (3) Set RF OUTPUT controls as required.

2.8 INTERNAL AMPLITUDE MODULATION

- (1) Set FUNCTION switch at INT AM and CARRIER switch at ON. Note: amplitude modulation is not possible when CARRIER switch is at +6 dB.
- (2) Adjust SET MOD control to position the meter pointer at the centre of the white box.
- (3) Adjust AM DEPTH control to provide desired modulation. This control is direct reading with an accuracy which varies such that the true modulation depth may lie between 25% and 35% when 30% is indicated or between 70% and 90% when 80% is indicated.

2.9 INTERNAL FREQUENCY MODULATION

- (1) Set FUNCTION switch at INT FM and CARRIER switch at ON. For extra output set CARRIER switch at +6 dB.
- (2) Adjust SET MOD control to position the meter pointer at the centre of the white box.
- (3) Adjust DEVIATION control to provide a deviation from 0 to 10 kHz (with multiplier at x1) or 0 to 100 kHz (with multiplier at x10).

2.10 EXTERNAL AM OR FM

- (1) Set FUNCTION switch to appropriate position i. e. : EXT AM or EXT FM and CARRIER switch at ON.

Note: external a. m. is not possible when CARRIER switch is at +6 dB.

- (2) Connect the external modulation source to EXT MOD IN (on rear panel); then adjust its level to position the meter pointer at the centre of the white box.
- (3) The desired modulation depth or deviation is then obtained by adjusting the relevant controls i. e. : AM DEPTH or DEVIATION.

2.11 INTERNAL AM WITH EXTERNAL FM

- (1) Set FUNCTION switch at INT AM and CARRIER switch at ON.

Note: amplitude modulation is not possible when CARRIER switch is at +6 dB.

- (2) Adjust the SET MOD control to position the meter pointer at the centre of the white box.
- (3) Connect the external modulation source to EXT MOD IN (on rear panel).
- (4) Set FUNCTION switch at EXT FM. Then adjust the level of the external modulation to position the meter pointer at the centre of the white box.
- (5) Set FUNCTION switch at INT AM/EXT FM. Then adjust AM DEPTH and DEVIATION controls to provide the required levels of modulation.

2.12 INTERNAL FM WITH EXTERNAL AM

- (1) Set FUNCTION switch at INT FM and CARRIER switch at ON.

Note: amplitude modulation is not possible when CARRIER switch is at +6 dB.

- (2) Adjust the SET MOD control to position the meter pointer at the centre of the white box.

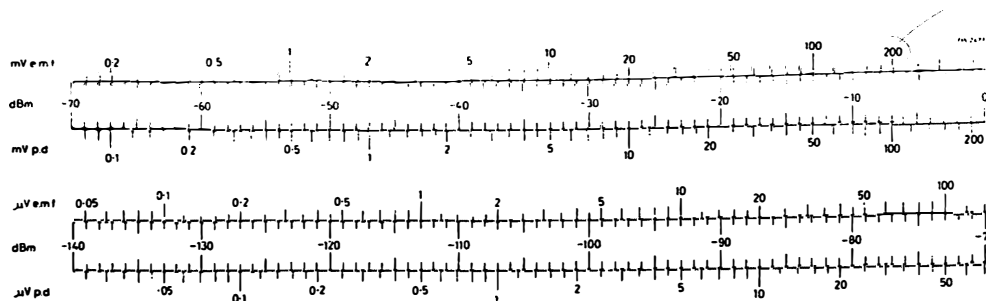


Fig. 2.3 Conversion scale: dBm to e.m.f. and p.d.

- (3) Connect the external modulation source to EXT MOD IN (rear panel).
- (4) Set FUNCTION switch at EXT AM. Then adjust the level of the external modulation to position the meter pointer at the centre of the white box.
- (5) Set FUNCTION switch at EXT AM/INT FM. Then adjust AM DEPTH and DEVIATION controls to provide the required levels of modulation.

non-linear waveform must be used and to maintain the r.f. levelling accuracy, slow sweep speeds are necessary.

2.16 ATTENUATOR CALIBRATION

The RF OUTPUT controls (coarse and fine attenuators) are calibrated in dBm. Where e.m.f. or p.d. levels are to be used reference should be made to the conversion scale on the top of the instrument. The scale is as shown in Fig. 2.3.

2.13 INTERNAL MODULATION OUTPUT

When FUNCTION switch is at INT AM, INT FM, INT AM/EXT FM, or EXT AM/INT FM, the 1 kHz modulating signal at a nominal 1 V (into a high impedance load), is available at the INT MOD OUT connector on rear panel. This signal may be used, for example, to trigger an oscilloscope at the modulating frequency or for a.f. tests.

2.14 OPERATION WITH DIGITAL SYNCHRONIZER

TF 2015 can be used with a digital synchronizer for a high degree of frequency stability. The synchronizer is driven from the COUNTER OUTPUT socket (rear of instrument) and its control voltage is applied to the SYNC/SWEEP connector.

2.15 SWEEP FACILITY

A voltage swing of 0 to +18 V applied to the SYNC/SWEEP IN connector will vary the carrier frequency over the frequency coverage of any one range. If a linear sweep is required, a suitable

2.17 MATCHING TO HIGH IMPEDANCE LOADS

To match a load that is greater than 50 Ω to the output of TF 2015 a resistor R_s is required to be added in series with the generator output as in Fig. 2.4. The value of R_s is given by the difference between the load and the generator impedances, i.e.

$$R_s = R_L - R_o$$

in which case the voltage across the load, V_L , is given by

$$V_L = \frac{E}{2}$$

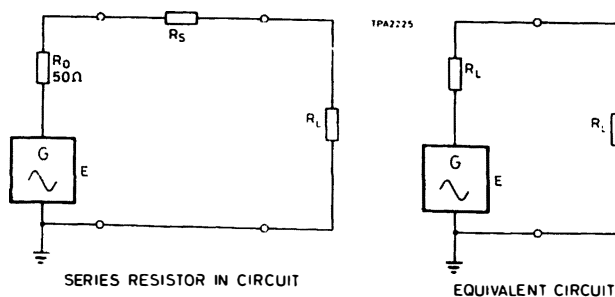


Fig. 2.4 High impedance matching

When a series resistor is employed to match a receiver input impedance of $75\ \Omega$ the output impedance of the signal generator will be mismatched. Therefore it is preferable to use Matching Pad type TM 5573/3 giving a convenient 2:1 attenuation. Using this pad both the output impedance of the generator and the input impedance of the receiver are correctly matched.

2.18 USE OF IF PROBES

The i. f. probes generate crystal controlled signals at customary receiver i. f.'s of 470 kHz and 10.7 MHz. They are powered from the 22 V IF PROBE plug on the generator. IF probes with other crystal frequencies can be supplied to special order.

The probes provide an auxiliary test signal for use in conjunction with the normal r. f. signal from the generator in receiver testing. In operation, the probe is positioned close to the receiver so that its signal is inductively coupled into the receiver i. f. circuit while the r. f. output from the generator is connected in the normal way to the receiver input.

This facilitates a number of receiver tests such as the following :

- (1) Checking receiver i. f. When the signal generator is tuned to the nominal frequency of a receiver channel, any difference between the receiver i. f. and the probe frequency will produce a beat note in the receiver output. Readjusting the signal generator for zero beat, using the EXTRA FINE TUNE control, ensures that the generator is correctly tuned to the r. f. circuits in the receiver.
- (2) Overriding receiver de-sensitization. It is often difficult to tune a signal generator to a receiver incorporating some forms of de-sensitization, such as squelch or a battery economizer, which respond to the presence of an i. f. signal. This is because the varying r. f. signal may traverse the receiver pass band too quickly, so that an i. f. signal is not

present for long enough to sensitize the squelch or economizer circuit. By using the i. f. probe to inject an i. f. signal the receiver can be held in the sensitive condition while the r. f. generator is tuned into the pass band.

2.19 QUIETING SENSITIVITY MEASUREMENTS

- (1) When making quieting sensitivity measurements on broadband equipments the carrier signal into the equipment under test can be removed by setting the CARRIER switch at OFF.
- (2) For narrowband equipments e.g. mobile transceivers, the following procedure is preferable :
 - (a) Tune TF 2015 to the centre of the receiver pass band.
 - (b) Using the TUNE switch detune TF 2015 and note the noise output level of the receiver.
 - (c) Return the TUNE switch to its original position and then adjust the attenuator controls for the required quieting ratio - note the quieting sensitivity.

2.20 CORRECT USE OF THE +6 dB OUTPUT FACILITY

It should be noted that use of the +6 dB output facility is necessary only when c.w. outputs greater than 100 mV into $50\ \Omega$ are required e.g. :

With the CARRIER switch at ON and the coarse and fine RF OUTPUT controls at 0 and 7 dB respectively the output developed across a $50\ \Omega$ load will be 100 mV or 50 mV with the fine control at 13 dB (-6 dB). With the CARRIER switch at +6 dB and with the fine control at 13 dB the signal output level across $50\ \Omega$ then becomes 100 mV. Therefore, by adjusting the fine control from 13 dB to 7 dB the output level can be progressively increased from 100 mV to 200 mV.

Decibel conversion table

Ratio Down			Ratio Up		
VOLTAGE	POWER	DECIBELS	VOLTAGE	POWER	
1·0	1·0	0	1·0	1·0	
·9886	·9772	·1	1·012	1·023	
·9772	·9550	·2	1·023	1·047	
·9661	·9333	·3	1·035	1·072	
·9550	·9120	·4	1·047	1·096	
·9441	·8913	·5	1·059	1·122	
·9333	·8710	·6	1·072	1·148	
·9226	·8511	·7	1·084	1·175	
·9120	·8318	·8	1·096	1·202	
·9016	·8128	·9	1·109	1·230	
·8913	·7943	1·0	1·122	1·259	
·8710	·7586	1·2	1·148	1·318	
·8511	·7244	1·4	1·175	1·380	
·8318	·6918	1·6	1·202	1·445	
·8128	·6607	1·8	1·230	1·514	
·7943	·6310	2·0	1·259	1·585	
·7762	·6026	2·2	1·288	1·660	
·7586	·5754	2·4	1·318	1·738	
·7413	·5495	2·6	1·349	1·820	
·7244	·5248	2·8	1·380	1·905	
·7079	·5012	3·0	1·413	1·995	
·6683	·4467	3·5	1·496	2·239	
·6310	·3981	4·0	1·585	2·512	
·5957	·3548	4·5	1·679	2·818	
·5623	·3162	5·0	1·778	3·162	
·5309	·2818	5·5	1·884	3·548	
·5012	·2512	6	1·995	3·981	
·4467	·1995	7	2·239	5·012	
·3981	·1585	8	2·512	6·310	
·3548	·1259	9	2·818	7·943	
·3162	·1000	10	3·162	10·000	
·2818	·07943	11	3·548	12·59	
·2512	·06310	12	3·981	15·85	
·2239	·05012	13	4·467	19·95	
·1995	·03981	14	5·012	25·12	
·1778	·03162	15	5·623	31·62	

Decibel conversion table (continued)

<i>Ratio Down</i>			<i>Ratio Up</i>	
VOLTAGE	POWER	DECIBELS	VOLTAGE	POWER
·1585	·02512	16	6·310	39·81
·1413	·01995	17	7·079	50·12
·1259	·01585	18	7·943	63·10
·1122	·01259	19	8·913	79·43
·1000	·01000	20	10·000	100·00
·07943	$6·310 \times 10^{-3}$	22	12·59	158·5
·06310	$3·981 \times 10^{-3}$	24	15·85	251·2
·05012	$2·512 \times 10^{-3}$	26	19·95	398·1
·03981	$1·585 \times 10^{-3}$	28	25·12	631·0
·03162	$1·000 \times 10^{-3}$	30	31·62	1,000
·02512	$6·310 \times 10^{-4}$	32	39·81	$1·585 \times 10^3$
·01995	$3·981 \times 10^{-4}$	34	50·12	$2·512 \times 10^3$
·01585	$2·512 \times 10^{-4}$	36	63·10	$3·981 \times 10^3$
·01259	$1·585 \times 10^{-4}$	38	79·43	$6·310 \times 10^3$
·01000	$1·000 \times 10^{-4}$	40	100·00	$1·000 \times 10^4$
$7·943 \times 10^{-3}$	$6·310 \times 10^{-5}$	42	125·9	$1·585 \times 10^4$
$6·310 \times 10^{-3}$	$3·981 \times 10^{-5}$	44	158·5	$2·512 \times 10^4$
$5·012 \times 10^{-3}$	$2·512 \times 10^{-5}$	46	199·5	$3·981 \times 10^4$
$3·981 \times 10^{-3}$	$1·585 \times 10^{-5}$	48	251·2	$6·310 \times 10^4$
$3·162 \times 10^{-3}$	$1·000 \times 10^{-5}$	50	316·2	$1·000 \times 10^5$
$2·512 \times 10^{-3}$	$6·310 \times 10^{-6}$	52	398·1	$1·585 \times 10^5$
$1·995 \times 10^{-3}$	$3·981 \times 10^{-6}$	54	501·2	$2·512 \times 10^5$
$1·585 \times 10^{-3}$	$2·512 \times 10^{-6}$	56	631·0	$3·981 \times 10^5$
$1·259 \times 10^{-3}$	$1·585 \times 10^{-6}$	58	794·3	$6·310 \times 10^5$
$1·000 \times 10^{-3}$	$1·000 \times 10^{-6}$	60	1,000	$1·000 \times 10^6$
$5·623 \times 10^{-4}$	$3·162 \times 10^{-7}$	65	$1·778 \times 10^3$	$3·162 \times 10^5$
$3·162 \times 10^{-4}$	$1·000 \times 10^{-7}$	70	$3·162 \times 10^3$	$1·000 \times 10^7$
$1·778 \times 10^{-4}$	$3·162 \times 10^{-8}$	75	$5·623 \times 10^3$	$3·162 \times 10^7$
$1·000 \times 10^{-4}$	$1·000 \times 10^{-8}$	80	$1·000 \times 10^4$	$1·000 \times 10^8$
$5·623 \times 10^{-5}$	$3·162 \times 10^{-9}$	85	$1·778 \times 10^4$	$3·162 \times 10^8$
$3·162 \times 10^{-5}$	$1·000 \times 10^{-9}$	90	$3·162 \times 10^4$	$1·000 \times 10^9$
$1·000 \times 10^{-5}$	$1·000 \times 10^{-10}$	100	$1·000 \times 10^5$	$1·000 \times 10^{10}$
$3·162 \times 10^{-6}$	$1·000 \times 10^{-11}$	110	$3·162 \times 10^5$	$1·000 \times 10^{11}$
$1·000 \times 10^{-6}$	$1·000 \times 10^{-12}$	120	$1·000 \times 10^6$	$1·000 \times 10^{12}$
$3·162 \times 10^{-7}$	$1·000 \times 10^{-13}$	130	$3·162 \times 10^6$	$1·000 \times 10^{13}$
$1·000 \times 10^{-7}$	$1·000 \times 10^{-14}$	140	$1·000 \times 10^7$	$1·000 \times 10^{14}$

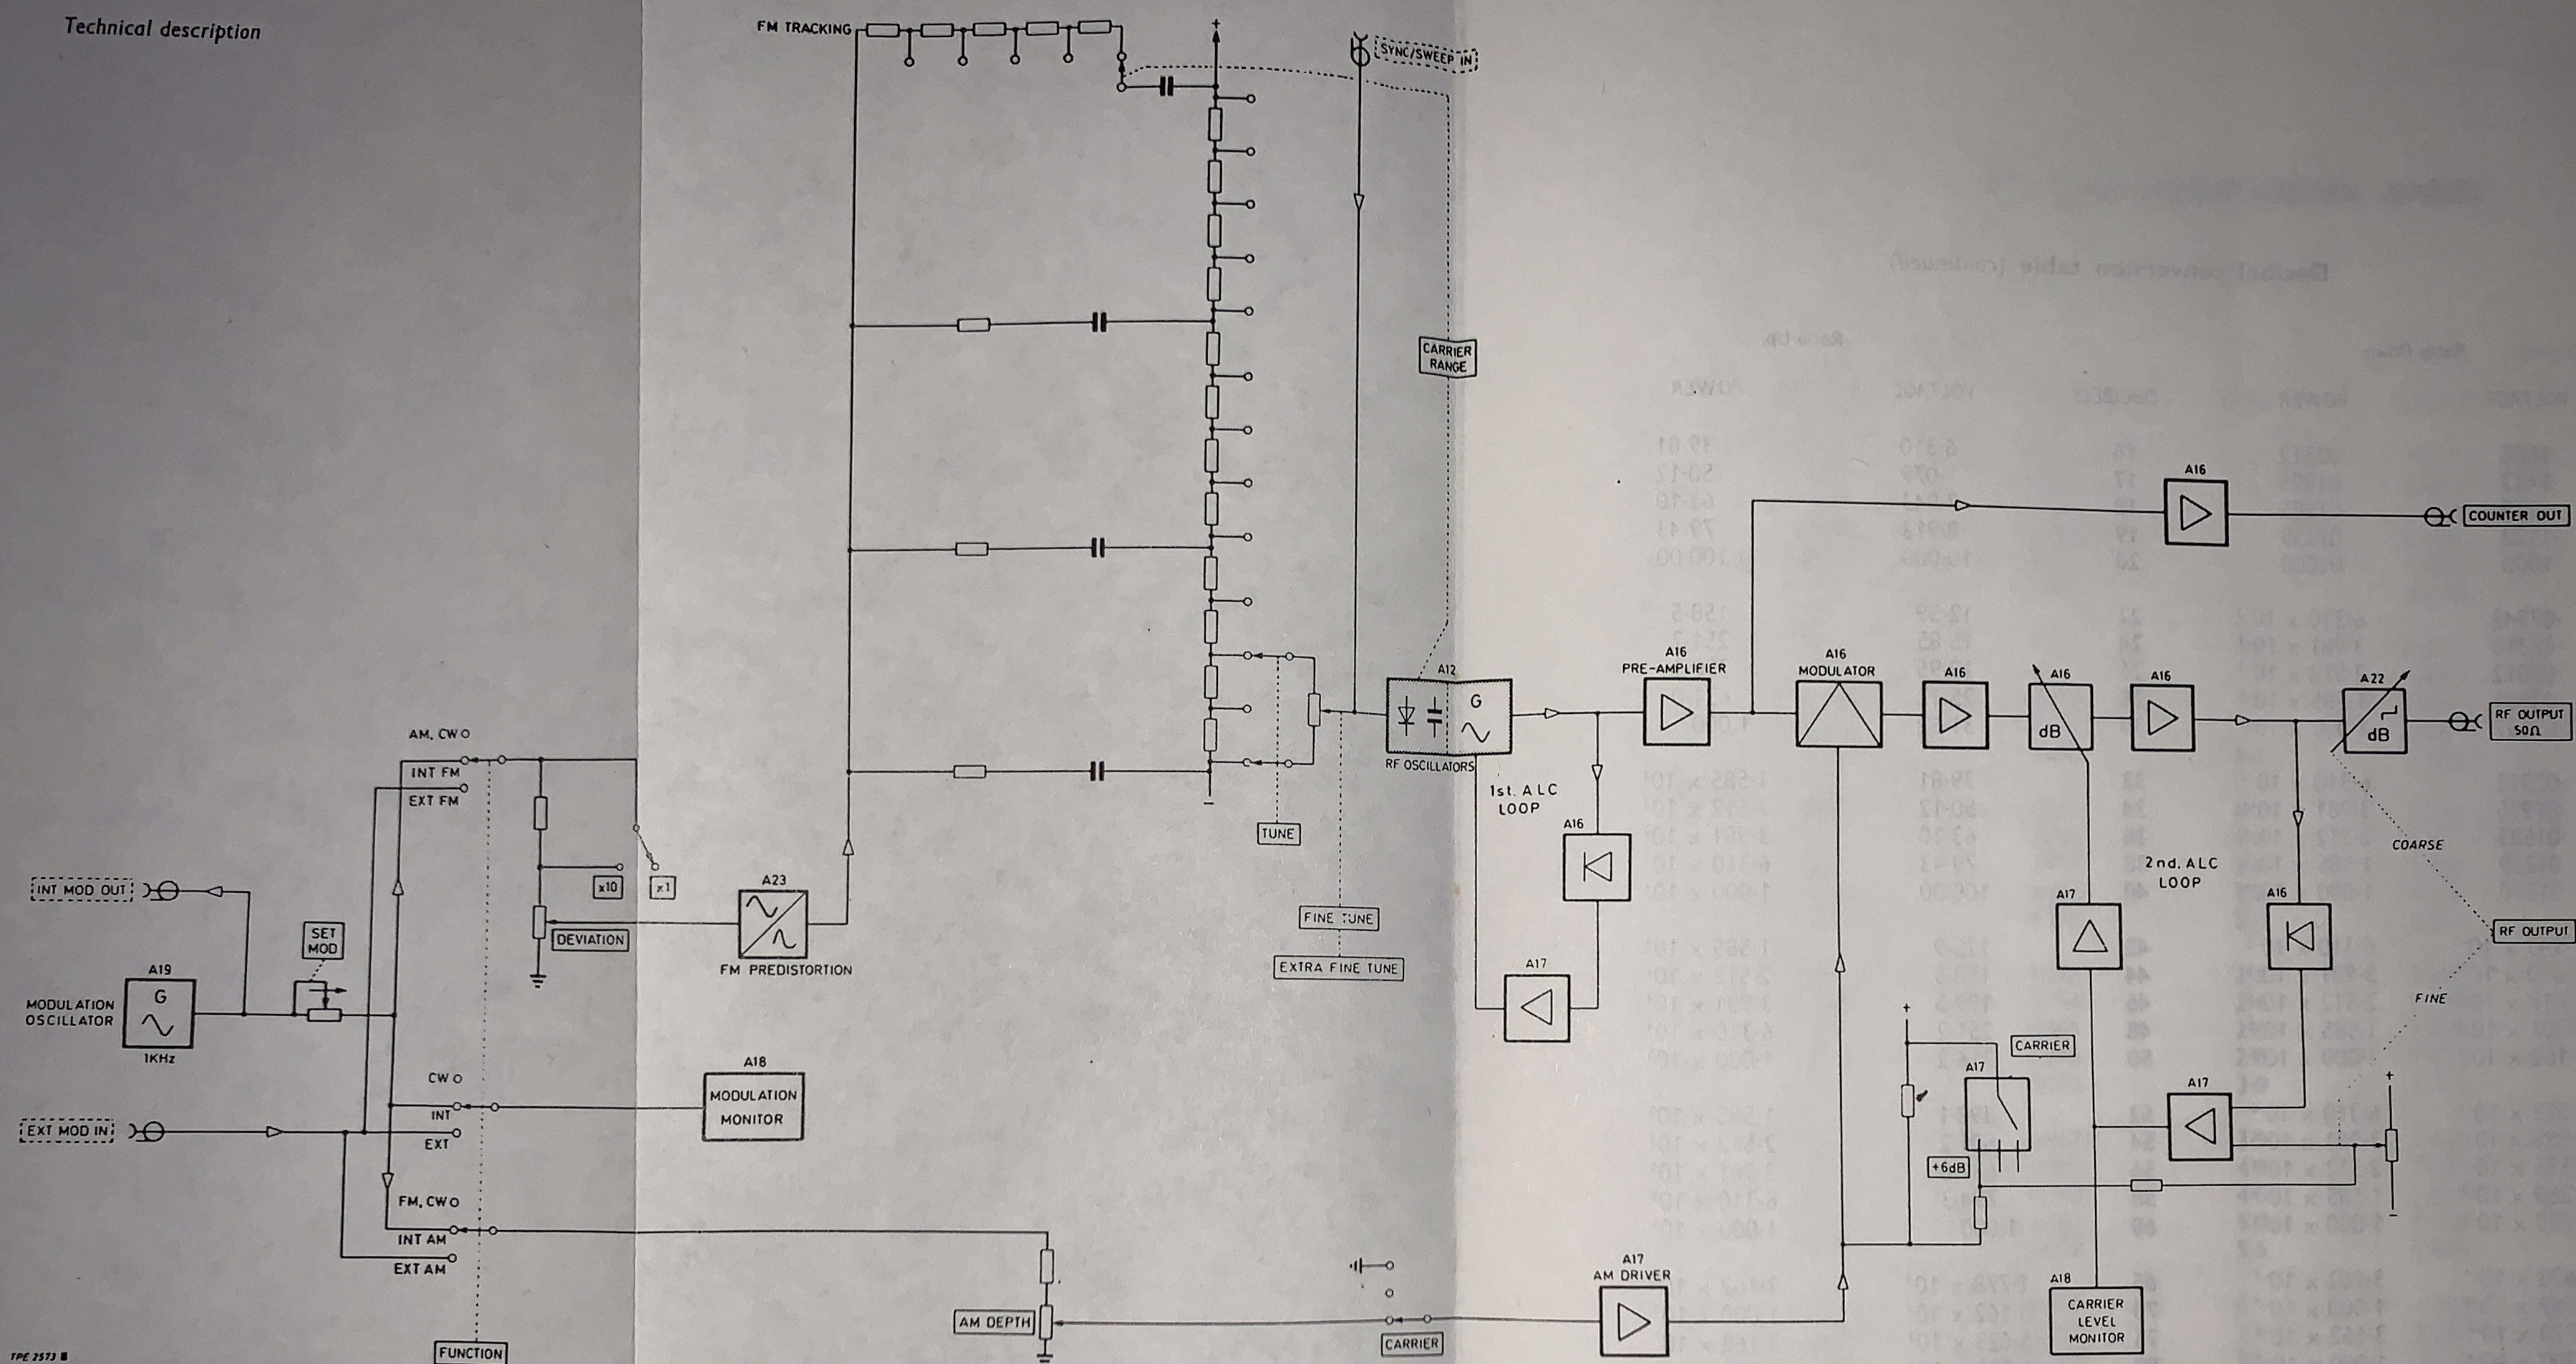


Fig. 3.1 Block diagram

Technical description

This chapter, which outlines the overall and circuit functions of TF 2015, is intended to be read with reference to the circuit diagrams and illustrations contained within this manual.

3.1 MECHANICAL CHARACTERISTICS

All printed circuit boards and sub-assemblies in the instrument are allocated a unit identification number in the sequence A0 to A12 and A16 to A23 and where practical the assembly is marked with this number. The main sub-assembly layout is shown in Figs. 4.3 and 4.4.

Construction consists of front and rear panels supported by side frames which also carry an r. f. box. The r. f. box contains eleven separate oscillator circuits A1 to A11 mounted on a mother board A12 which is hinged to allow access to the associated components. The box also contains a screened compartment A16 containing the r. f. amplifier, modulator and counter amplifier circuits. The automatic level control (a. l. c.) circuits A17 are mounted on top of this compartment. The low r. f. leakage lid is retained by four fixing screws. The underside of the r. f. box carries the filter box and units A18, A19 and A20.

Units A21 and A23 are mounted on one of the side frames and the opposite frame carries the mains transformer. Inputs and outputs are conveyed through BNC connectors and terminals located on the front panel and at the rear of the instrument.

Since TF 2015 is a portable instrument, a removable cover is clasp fitted to the case to provide front panel protection and also stowage space for some accessories. A prop fixed to the lower section of the case enables the instrument to be tilted for easy operation of the controls.

3.2 OVERALL FUNCTION

A separate voltage tuned oscillator is used for each of the eleven ranges. Output from the selected oscillator, which is maintained at a constant level by the first automatic level control (a. l. c.) loop, is applied to a pre-amplifier.

The frequency of each oscillator is controlled by means of a pair of varactor diodes across the tuned circuit. The capacitance of the diodes, and hence the resonant frequency of the tuned circuit, is determined by the control voltage applied to the diodes. This arrangement provides for both tuning and frequency modulation, a variable d. c. control voltage being applied for tuning purposes and an a. f. modulating signal for f. m.

Output from the pre-amplifier is applied to a modulator and at a suitable level to a counter amplifier. The r. f. output from the modulator which is approximately 30 mV is passed to a wide band amplifier incorporating an interstage current controlled attenuator.

Output from the amplifier is applied to the input of the coarse attenuator (coarse r. f. output control) and through a detector circuit to a second a. l. c. loop which, operating in conjunction with the fine attenuator (fine r. f. output control) sets and then maintains the level of the r. f. input to the coarse attenuator.

The r. f. carrier can be amplitude or frequency modulated using either the internal modulation oscillator or an external signal. For a. m. the a. f. signal is applied to the modulator through a push-pull driver circuit and for f. m. to the tuning circuits. To ensure that deviation is maintained acceptably constant over each frequency range and to minimize distortion, tracking and pre-distortion circuits are employed.

A Wien bridge oscillator operating at a nominal frequency of 1 kHz is used for internal modulation and to provide an a. f. output. For both a. m. and f. m. the internal a. f. signal is routed through the SET MOD control which is adjusted to obtain a modulation reference level. The desired a. m. depth or f. m. deviation is then obtained by adjustment of the appropriately indicated controls.

Inputs are provided for connection of an external modulating signal and for application of a suitable sweep waveform. A 22 V d. c. output is available as a supply for certain associated equipments, e. g. i. f. probes, and an output is provided for connection to a frequency counter.

In c. w. operation the meter indicates correct operation of the a. l. c. In the modulated modes it monitors the a. f. reference level.

3.3 CIRCUIT FUNCTIONS

Block schematic diagram Fig. 3.1 inter-relates the various circuits employed in TF 2015 whilst the sections which follow explain the function of each.

3.4 RF OSCILLATORS

Circuit diagram Fig. 7.1 Unit A12 (sub-assemblies A1 to A11)

All the oscillators use a modified Hartley circuit and differ only in the value of components. Oscillators A1 to A9 employ a field effect transistor, A10 and A11 use bipolar transistors. Feedback is established by inductive coupling between the two sections of the primary winding of transformer T1.

Frequency is determined by varactor diodes D1 and D2 operating as variable capacitors to tune the primary winding of T1. The capacitance values of D1 and D2 are varied by application of d. c. voltage levels set by the tuning circuit A21.

For ranges 1 to 9, trimmer capacitor C4 is adjusted to correctly set the high frequency end of the range with the core of T1 adjusted at the low frequency end. On ranges 10 and 11 only C4 is adjustable.

The oscillators are individually activated by switched application of the d. c. supply whilst output from the selected oscillator is obtained from the secondary winding of T1 through the appropriate steering diode, D1 to D11. Diode D12 is incorporated to reduce the effective capacitance of D1 to D7 which could influence the frequency coverage of ranges 8 to 11.

3.5 TUNING AND FREQUENCY MODULATION

Circuit diagram Fig. 7.3 Units A19 and A21

Because the varactors used for tuning have a non-linear capacitance/voltage characteristic, a 19-position switch with a chain of selected resistors is used to provide a stepped linear change of frequency. Potentiometer A0R 38 interpolates between switch positions. The additional potentiometer A0R37 enables TF 2015 to be precisely

tuned to a receiver under test.

For a frequency modulated output the a. f. signal is routed to the varactors through the f. m. controls, tracking resistors A0, R5 to R15, the pre-distortion circuit A23, amplifier TR3, TR4, TR5 and the tuning control circuits. The tracking resistors are automatically selected by the range selector switch to maintain equal deviation over each frequency range. A21 TR1 is used as a low impedance source for the f. m. drive.

3.6 FIRST ALC LOOP

Circuit diagram Fig. 7.2 Units A16 and A17

Output from the selected oscillator is maintained at a nominal level of 50 mV by the first automatic level control (a. l. c.) loop. The oscillator output is applied to a detector circuit, D1 and D2, which is referenced by the set voltage at the junction of R1 and R2 on A17.

Output from the detector is applied to one input of a differential pair, TR1 and TR2, where it is compared with a reference level preset by network R4, R5, R6 and R7. Any difference in the level of the signals either towards positive or negative appropriately varies the bias to TR3 which then varies the current in the f. e. t. in the selected oscillator to re-establish the required output level.

Diodes A17D1 and D2 compensate for the temperature changes of the detector diodes, A16D1 and D2. Capacitors A17, C2 and C11 are incorporated to minimize spurious f. m. which could be produced by a. l. c. circuit noise.

3.7 PRE-AMPLIFIER

Circuit diagram Fig. 7.2 Unit A16

The controlled output level from the selected oscillator is applied to a wide band pre-amplifier providing a gain of approximately 12 dB, i. e. a nominal output of 200 mV.

The circuit consists of four stages, TR1, TR2, TR3 and TR4, and employs both common base and common emitter configurations. The common base circuits and screens mounted on the printed circuit board are incorporated to provide the required inter-stage isolation.

3.8 MODULATOR AND AMPLITUDE MODULATION

Circuit diagram Fig. 7.2 Unit A16

The circuit configuration is basically that of a single balanced bridge modulator employing p-i-n diodes operating as variable (current controlled) r.f. resistors to achieve minimum r.f. carrier distortion.

Initially, with no d.c. or a.f. inputs, the two inputs from T1 are 180° out of phase and, since R17 and R18 are equal, the bias currents and consequently the resistance of the diodes are equal. With these conditions the bridge is balanced so no signal is present at T2.

To provide a constant r.f. output for c.w., d.c. offsets from circuits A17 TR7 and TR8 are applied to partially unbalance the bridge. For amplitude modulation the a.f. signal from the push-pull driver circuit A17 TR4, TR5 and TR6 is applied to the bridge modulator. The a.f. signal produces offset levels proportional to its amplitude so the bridge becomes progressively unbalanced to an extent which is greater or less during each positive and negative half cycle of the a.f. waveform.

3.9 COUNTER AMPLIFIER

Circuit diagram Fig. 7.2 Unit A16

Part of the r.f. signal voltage at the output of the pre-amplifier is applied to a common emitter amplifier, TR6, which serves to drive an external frequency counter. Output at the COUNTER OUT connector is nominally 100 mV into 50 Ω.

3.10 AM DRIVER AND DC OFFSET CIRCUITS

Circuit diagram Fig. 7.2 Unit A17

The two circuits TR7 and TR8 operate to set the level of the d.c. offsets applied to the modulator and consequently the r.f. level to A16 TR5.

With the CARRIER switch at ON (normal r.f. output) TR7 and TR8 are non-conducting so the d.c. offset levels to the modulator are determined by R23 and R24. When the CARRIER switch is at +6 dB TR7 and TR8 are switched on to connect R25 and R26 in parallel with R23 and R24 to further unbalance the modulator, reducing its insertion loss by approximately 8 dB. Diode D3 is incor-

porated to prevent current flowing in R26 when TR7 and TR8 are in the off condition.

The a.m. driver serving the modulator consists of a push-pull a.f. amplifier, TR4 and TR6, which applies offset levels proportional to the varying amplitude of the a.f. cycle to produce an amplitude modulated output as explained in Section 3.8. TR5 maintains the amplifier current constant during the a.f. cycle.

3.11 WIDE BAND AMPLIFIER

Circuit diagram Fig. 7.2 Unit A16

This consists of three common emitter stages TR5, TR7 and TR8 with an interstage current controlled variable attenuator. This operates in conjunction with the second a.l.c. loop and fine r.f. output control to set and maintain constant the signal level at the input to the coarse r.f. output attenuator unit A22.

The attenuator which controls the gain of the amplifier employs p-i-n diodes D7 and D8 as current controlled variable resistors, their resistance being determined by bias levels controlled by A17 TR9 and TR10 (see section 3.12).

3.12 SECOND ALC CIRCUIT

Circuit diagram Fig. 7.2 Unit A17

The signal level at the output of the wide band amplifier is detected by diodes D9 and D10 and then passed to A17 IC1 where it is compared with a level dictated by the setting of the fine r.f. output control, A0R16. Any difference in level between the two applied signals causes the output of IC1 to change. This changes the currents through TR9 and TR10 which controls the resistance of the variable attenuator diodes, D7 and D8, and establishes the required input to the coarse r.f. output control (see Section 3.13).

3.13 FINE RF OUTPUT CONTROL

Circuit diagram Fig. 7.2 Units A16, A17, A18

The calibration accuracy of the fine r.f. output control is primarily dependent upon correct performance of the second a.l.c. loop incorporating circuits A18 TR2, the a.l.c. amplifier A17, the interstage attenuator circuit A16 D7 and D8 and the detector circuit A16 D9 and D10.

The circuit A18 TR2 provides a fixed reference voltage to the detector D9 and D10 to produce a voltage level at A17 IC1 pin 2 which is determined by the difference between the reference voltage and the detected r. f. voltage. It also provides a pre-set voltage to A17 IC1 pin 3 at a level which is dictated by the setting of the fine r. f. output control A0 R16. Output from IC1 pin 6, which depends on the voltage levels at pins 2 and 3, controls the current through the differential pair TR9 and TR10 such that the resistances of D7 and D8 in the interstage attenuator are set to establish the required amplifier gain and therefore the desired r. f. output level.

When the fine attenuator control A0 R16 is adjusted for a different r. f. output, the voltage levels at IC1 pins 2 and 3 will momentarily be unequal, which causes the output at IC1 pin 6 to change and consequently the current through TR9 and TR10. The increased or decreased current sets the attenuator D7 and D8 to appropriately vary the gain of the wide band amplifier to re-establish equal voltage levels at IC1 pins 2 and 3 and a higher or lower signal level to the input of A22.

3.14 MODULATION OSCILLATOR

Circuit diagram Fig. 7.3 Unit A19

A Wien bridge circuit operating at a nominal frequency of 1 kHz is employed for internal modulation of the r. f. signal and to provide an a. f. output at the INT MOD OUT connector.

The input of TR1 is connected across the shunt arm R2, C1 of the bridge and its output is passed to the amplifier circuit TR2. The oscillator output signal is across R8 and it is applied to the series arm of the bridge C2, R6 to obtain positive feedback. During the non-oscillating condition prior to 'switch on' the amplifier gain is high. At 'switch on' oscillation commences readily, causing the resistance of thermistor R7 to fall and the amplifier gain to stabilize at a value just sufficient to maintain oscillation.

For amplitude modulation the 1 kHz signal is routed through the SET MOD control and AM DEPTH control to the a. m. driver circuit A17.

For frequency modulation the 1 kHz signal is applied through the SET MOD control and DEVIATION controls to the switched f. m. tracking resistors A0 R5 to R15 (ganged to range selec-

tor switch) and then through the predistortion circuits A23 and f. m. driver TR3, TR4, TR5 to the tuning circuits A21.

3.15 PREDISTORTION CIRCUIT

Circuit diagram Fig. 7.3 Unit A23

This circuit, which is especially applicable to ranges 1 and 2, minimizes f. m. distortion by predistorting the a. f. waveform to compensate for the capacitance/voltage characteristic of the varactors. The circuit is designed to expand the positive half of the a. f. waveform and compress the negative half.

Circuit performance is largely dependent upon the attenuator R2 and R3 which is set by the shunt diodes D1 and D2.

During the positive half of the a. f. waveform D1 is caused to conduct by the positive signal level at A21 pin 13 and since D1 is effectively in parallel with R2 the insertion loss of the attenuator is reduced to increase the amplitude of the positive half of the waveform to the f. m. driver. During the negative half of the waveform D2 is caused to conduct, effectively reducing the value of R3 and limiting the waveform excursion.

The circuit consisting of R7 to R10 is designed to reduce frequency drift by appropriately varying the d. c. supply to the tuning network R17-R36 to compensate for temperature rise within the instrument.

3.16 6 dB OUTPUT

Circuit diagram Figs. 7.2 and 7.3 Units A16, A17, A18

When the CARRIER switch is at +6 dB the levels of the d. c. offsets to the modulator A16 are increased to reduce its insertion loss (see Section 3.10). Resistor R25 in the circuit A18 TR2 is connected (through D6) in parallel with R24 to increase the current through the network R22, R23 and A0 R16 and consequently the set voltage output from A0 R16 to IC1 pin 3. The a. l. c. loop then operates to increase the r. f. output by 6 dB.

With the CARRIER switch at -6 dB amplitude modulation is not possible and is prevented by connecting the a. m. drive line to earth.

3.17 MONITOR CIRCUITS

Circuit diagram Figs. 7.2 and 7.3 Unit A18

When the FUNCTION selector is set for a. m. or f. m. modulation the output from the internal or external modulation oscillator is routed to the monitor circuit A18 TR1.

The a. f. is rectified by the circuit D1 and D2 and the positive d. c. output is applied to the meter ME1 through the emitter follower TR1 and diode D3. To obtain the desired sensitivity the meter is backed off by a set d. c. level from the network R10, R11 and R12 and by preset adjustment of R5 which sets a reference level to the detector circuit D1 and D2. Thermistor R9 provides the necessary temperature compensation to the network R10, R11 and R12 while D3 prevents the application of reverse currents to TR1.

Since the calibration accuracy of the fine r. f. control is largely dependent upon the performance of the a. l. c. loop A17, the meter (when the FUNCTION selector is set at CW) serves only to indicate correct operation of the a. l. c. loop. The circuit R12 to R16 with R18 and R19 forms a limits bridge with R17 preset to position the pointer of the meter at the centre of the white box on the meter scale. Provided the output from A17 IC1 pin 6 remains within certain limits, diodes D4 and D5 are non-conducting.

Incorrect operation of the a. l. c., which could be caused by malfunction of the preceding r. f. circuits, produces an output from IC1 which will be above or below the expected limits. The appropriate diode then conducts causing the bridge condition to change such that the meter pointer will be positioned at zero or f. s. d.

3.18 COARSE RF OUTPUT CONTROL

Circuit diagram Fig. 7.4 Unit A22

This provides a loss of 110 dB in steps of 10 dB. The pad sections consist of resistive networks with a characteristic impedance of 50 Ω .

The unit is divided into compartments to ensure maximum shielding between pads. Pads are connected into circuit by microswitches housed in screened compartments and operated in pairs by leaf springs actuated by cams on the control spindle.

3.19 POWER UNIT

Circuit diagram Fig. 7.4 Unit A20

The power unit, which operates by switch selection from a. c. supplies of 95 to 132 V or 190 to 264 V, 45 to 500 Hz, consists basically of mains transformer A0T1, a full wave rectifier circuit A20 D1, D2, D3 and D4 and a conventional voltage regulator circuit. The +22 V output from the regulator supplies all the circuits except the frequency control sections which are supplied from a second sub-stabilizer which provides +19 V. The 19 V regulator sampling lines maintain the voltage across the tuning network. TR6 and R9 provide a low noise voltage reference for the sub-stabilized supply.

3.20 SUPPLY FILTERS

Filters are incorporated in supply lines to various units to ensure that spurious r. f. signals are not introduced into the circuits.

All the filters are contained in a separately screened box which consists of two screen divided sections. Each filter employs two series connected chokes and lead-through type shunt capacitors.

4.1 INTRODUCTION

This chapter contains information for keeping the equipment in good working order and for checking its overall performance. Before attempting any maintenance on the equipment you are advised to read the preceding Technical Description chapter.

4.2 SCREW FASTENERS

The majority of screw threads used in the instrument are metric of various sizes but in some positions BA threads are used. All chromium plated screws and all screws tinted blue are metric. Ensure that screws removed are refitted in original positions.

4.3 ACCESS TO SUB-ASSEMBLIES AND COMPONENTS

Removal of case

The case is in two sections. Remove the six screws at the rear of the instrument and then slide off top and bottom sections.

Sub-assemblies A1 to A12

A1 to A11 are r.f. oscillator assemblies mounted on a mother board. A12, which is contained within the r.f. box. To obtain access remove the cover of the r.f. box by removing the four fixing screws. Unit A12 is hinged to provide access to the oscillator assemblies as shown in Fig. 4.1. The component layout for each assembly is as shown in Fig. 4.2 and Fig. 4.4.

Units A16 and A17

The position of these units is shown in Figs. 4.1 and 4.4. Access to A16 is obtained by re-

moving the four screws holding the screening plate and then by carefully folding this back with A17 attached. A17 is directly accessible - see Fig. 4.4.

Units A18, A19, A20, A21, A23

The position of these units is shown in Fig. 4.3 and all are directly accessible from the underside of the instrument.

Supply filters

These are contained in a separately screened compartment. Inputs and outputs can be accessed through the associated capacitors which are accessible by carefully lifting A18 upwards and folding A12 back as shown in Fig. 4.1.

Unit A22

To remove the attenuator, carefully disconnect the two semi-rigid coaxial cables, remove the control knob and nut holding the unit to the panel, remove the bracket screw then lift the unit from the chassis.

4.4 PRELIMINARY CHECKS

- (1) Check to ensure that all switches are undamaged and operating correctly and verify that connectors are securely mated.
- (2) Check that fuses are of the correct rating and type, and fit correctly in the holders.

4.5 TEST EQUIPMENT

The test equipment required for maintenance and repair of the instrument is listed in Table 4.1.

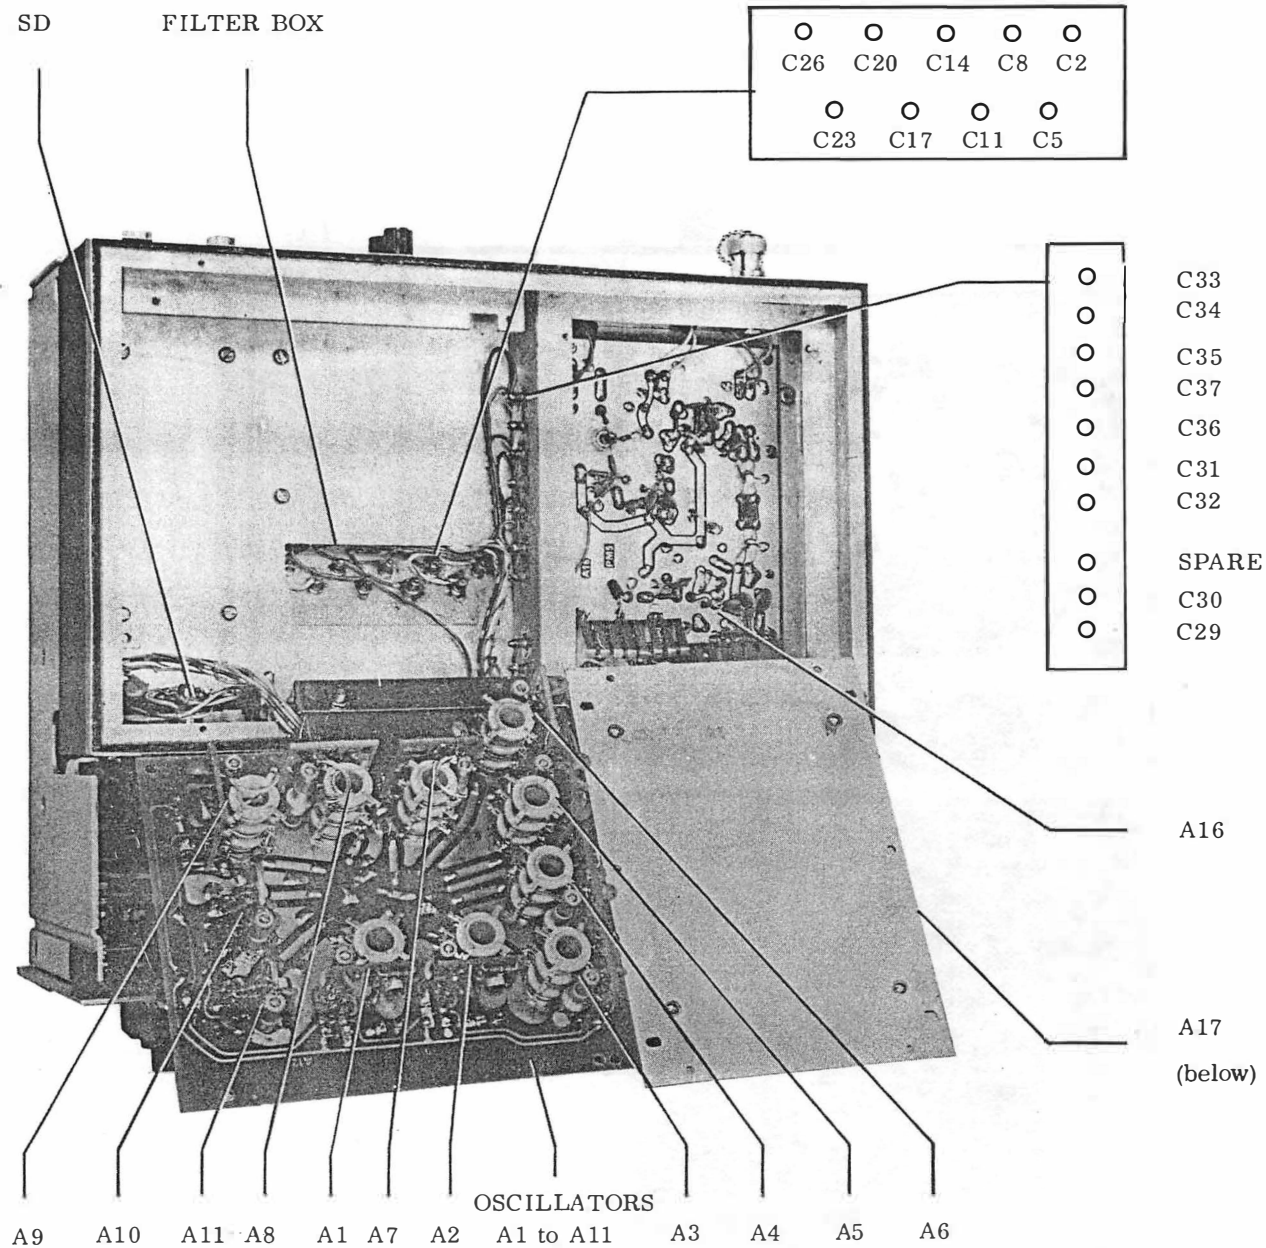


Fig. 4.1 Layout, top view with boards A12 and A17 hinged back

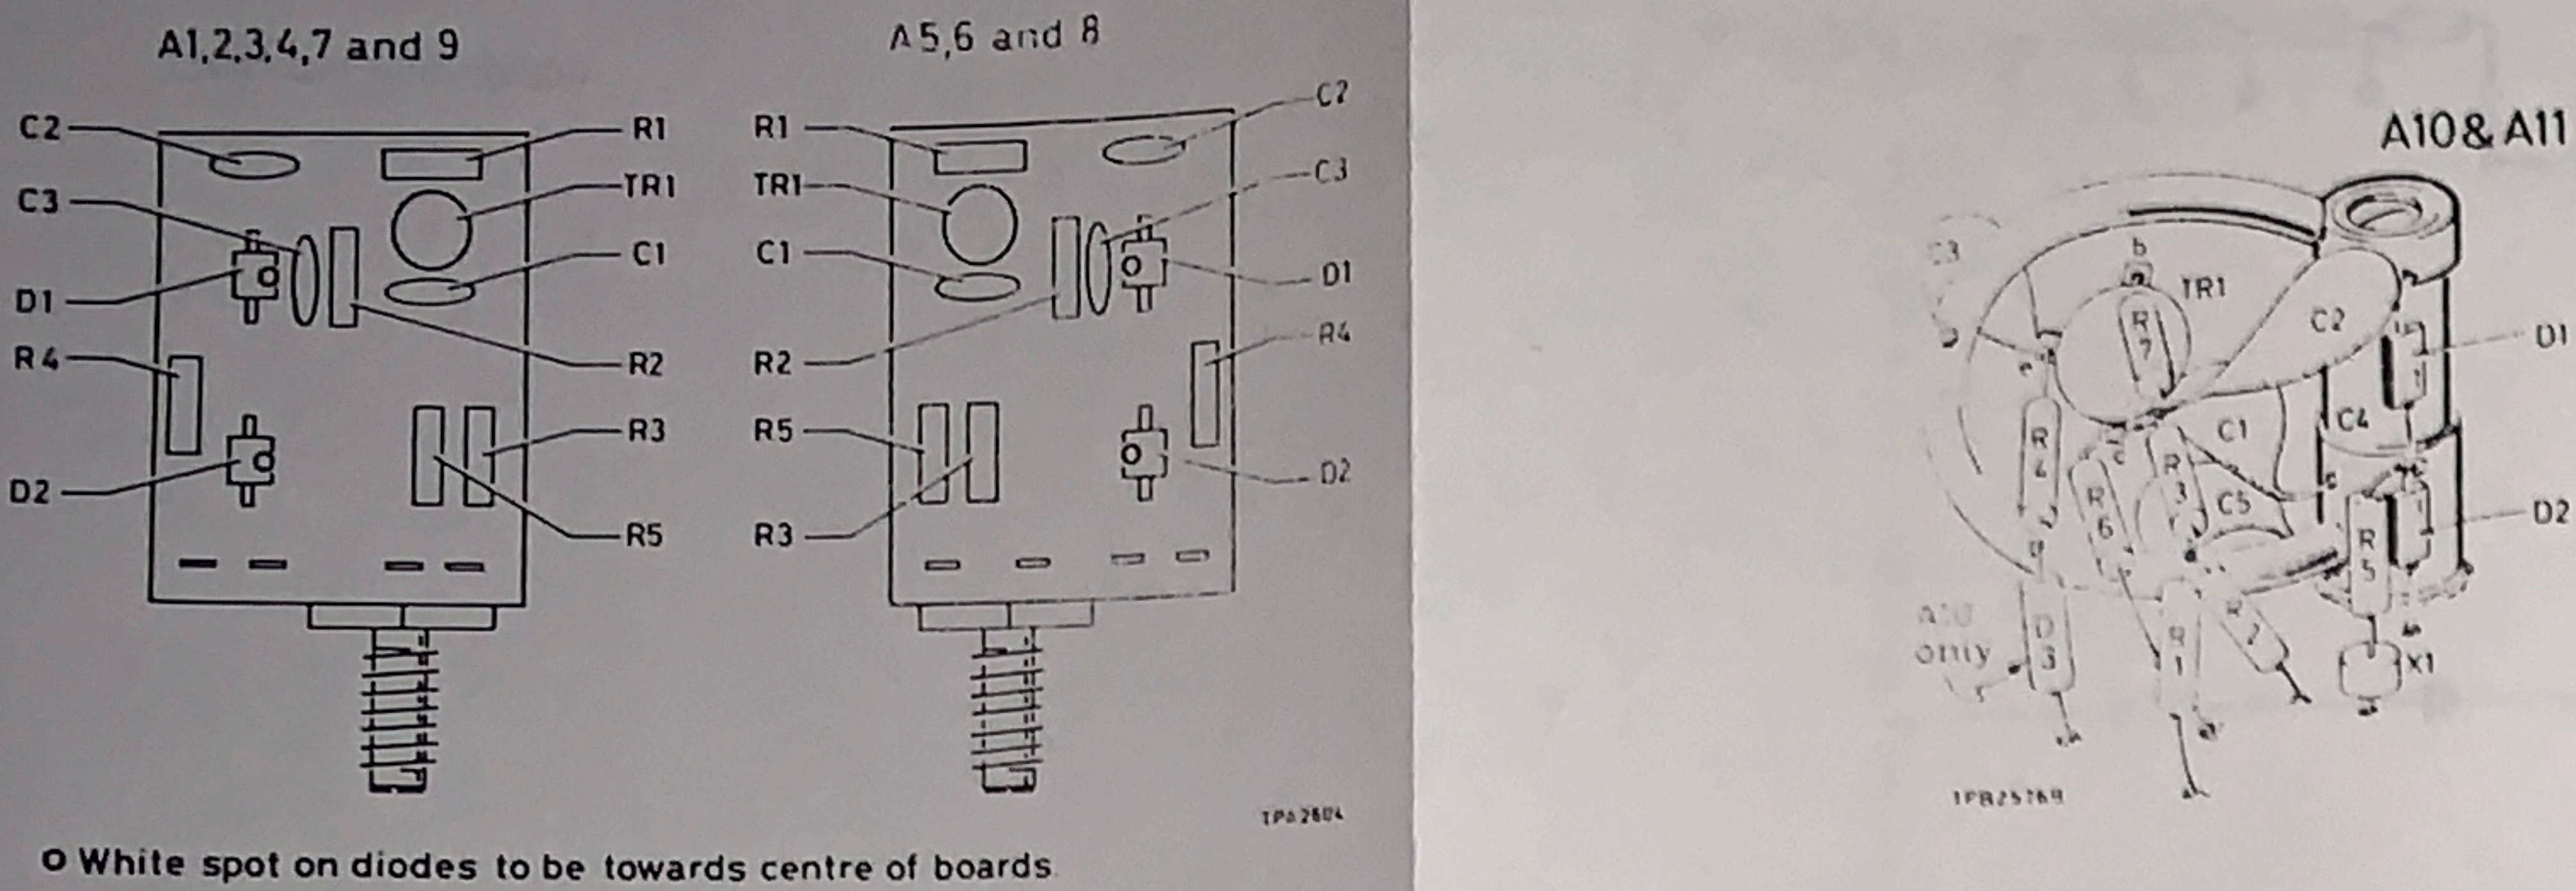


Fig. 4.2 Layout of oscillator assemblies

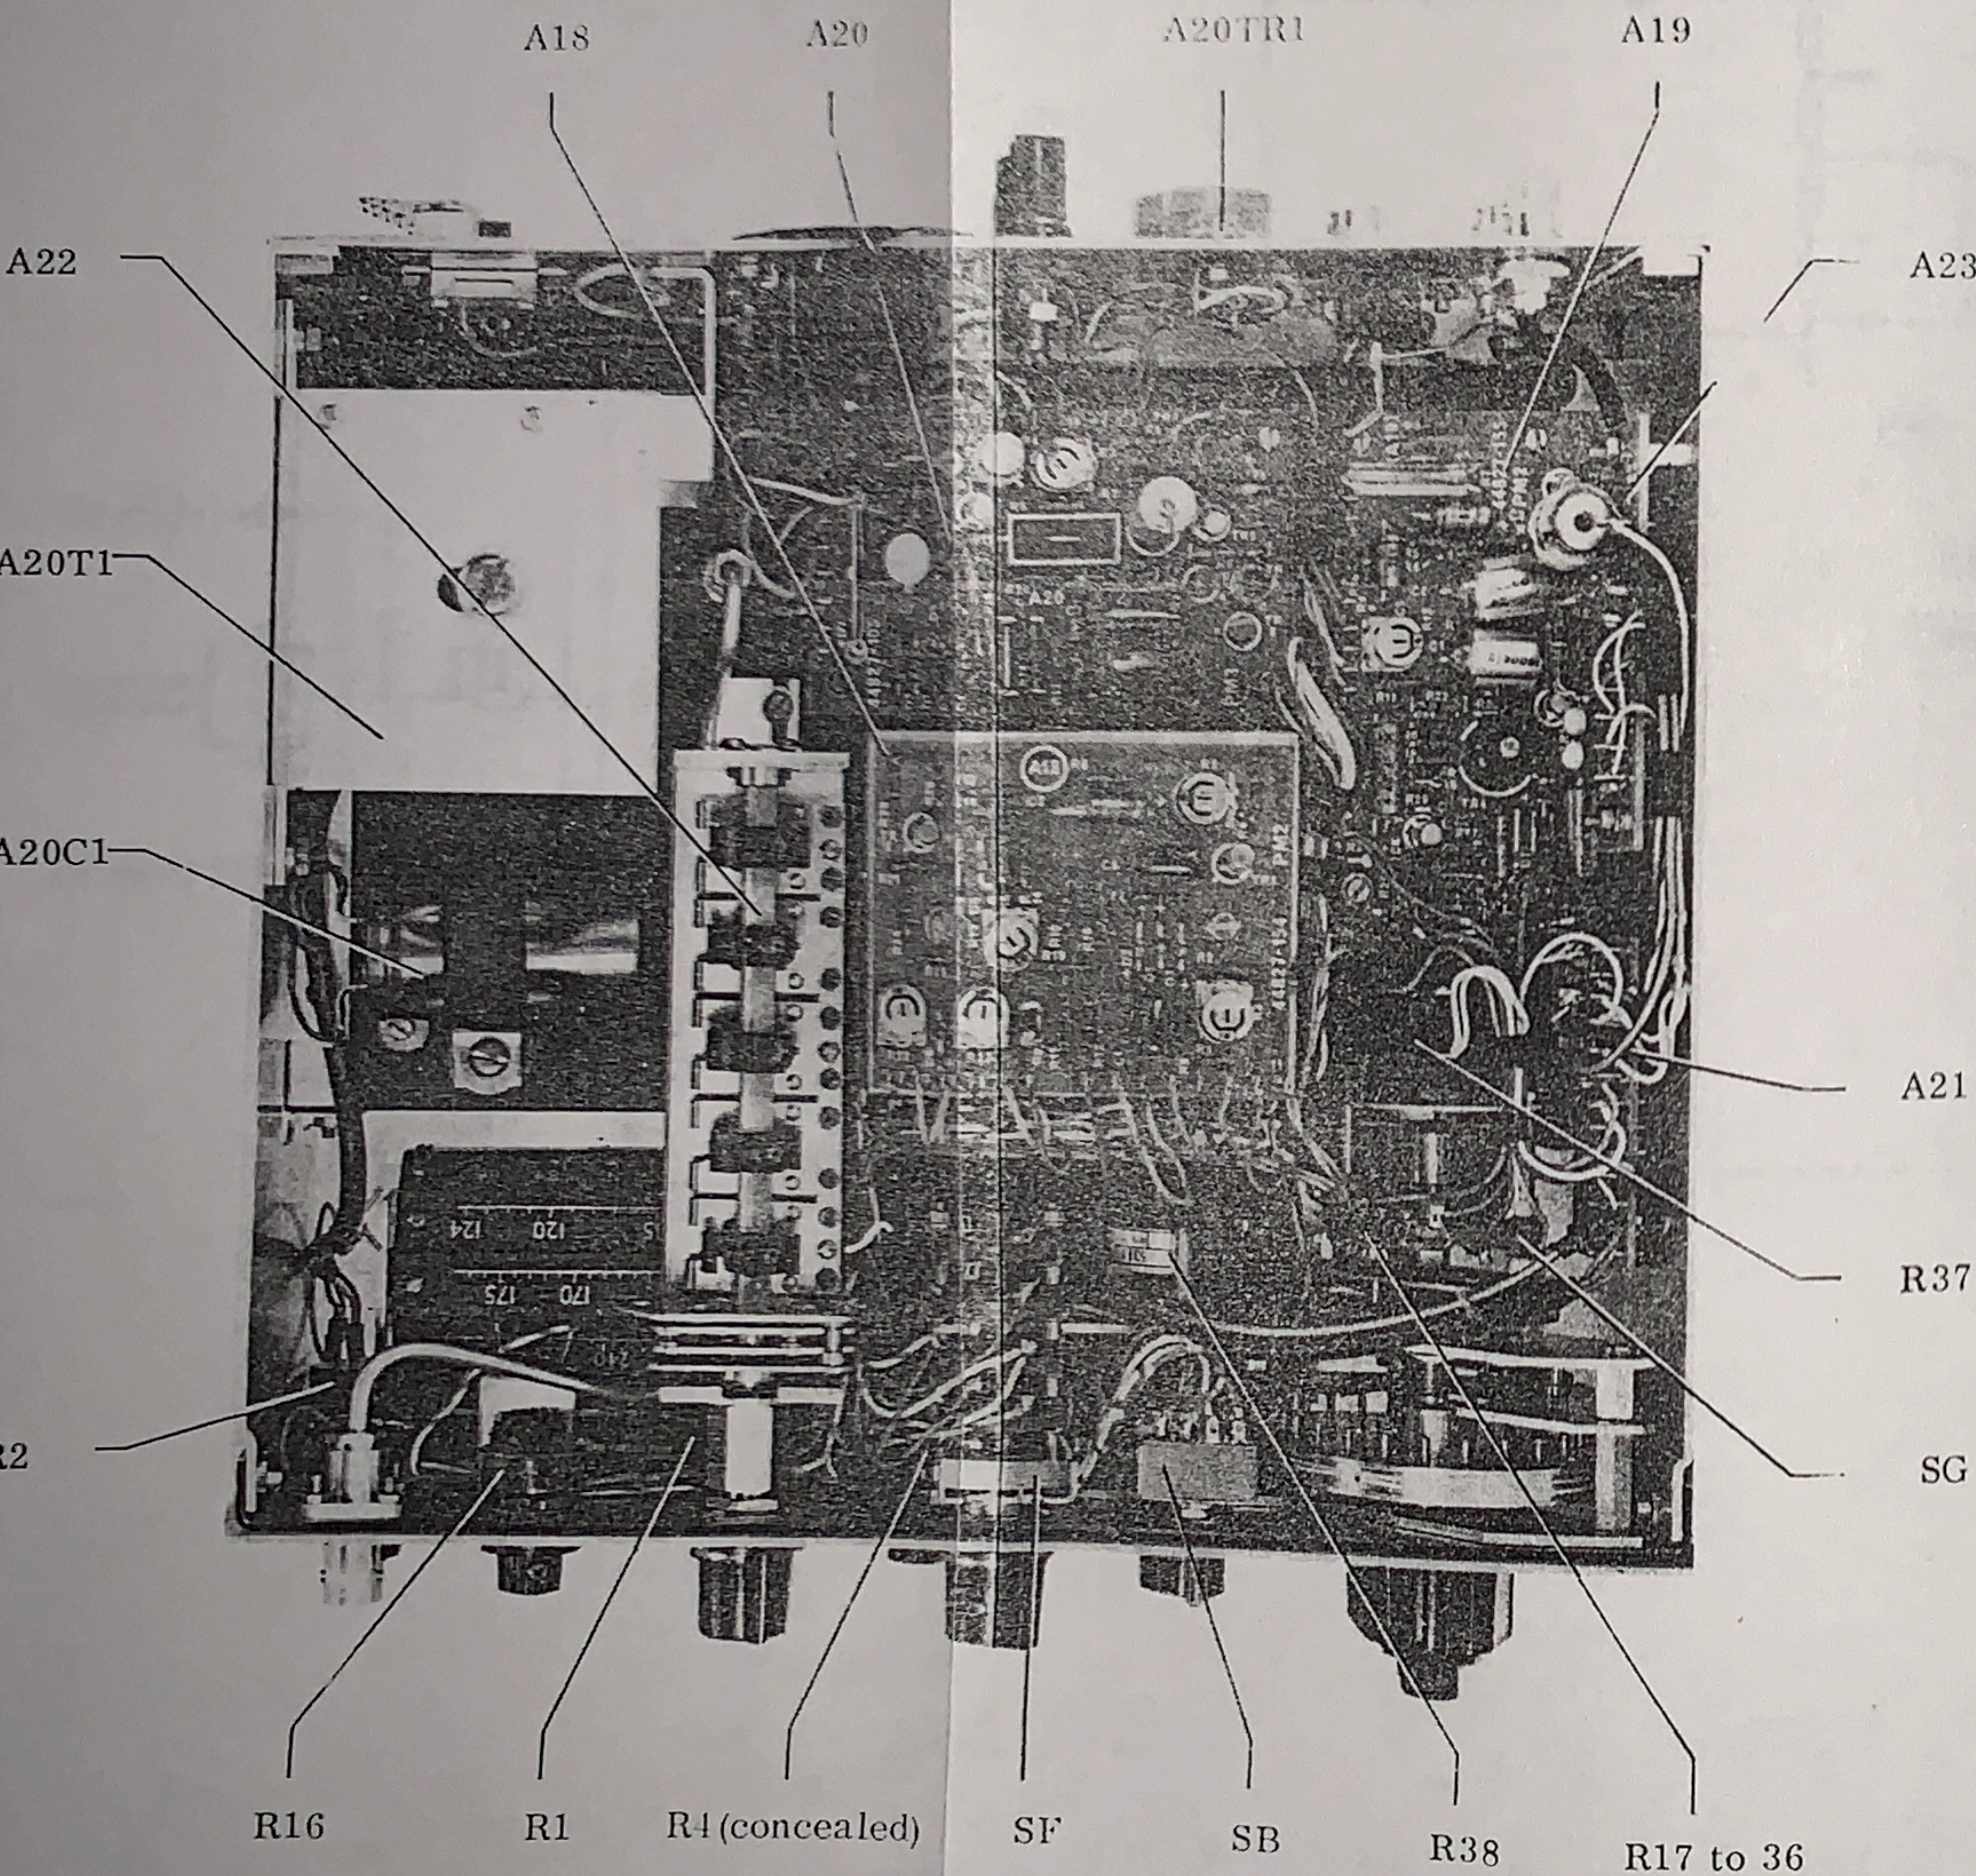


Fig. 4.3 Layout, bottom view

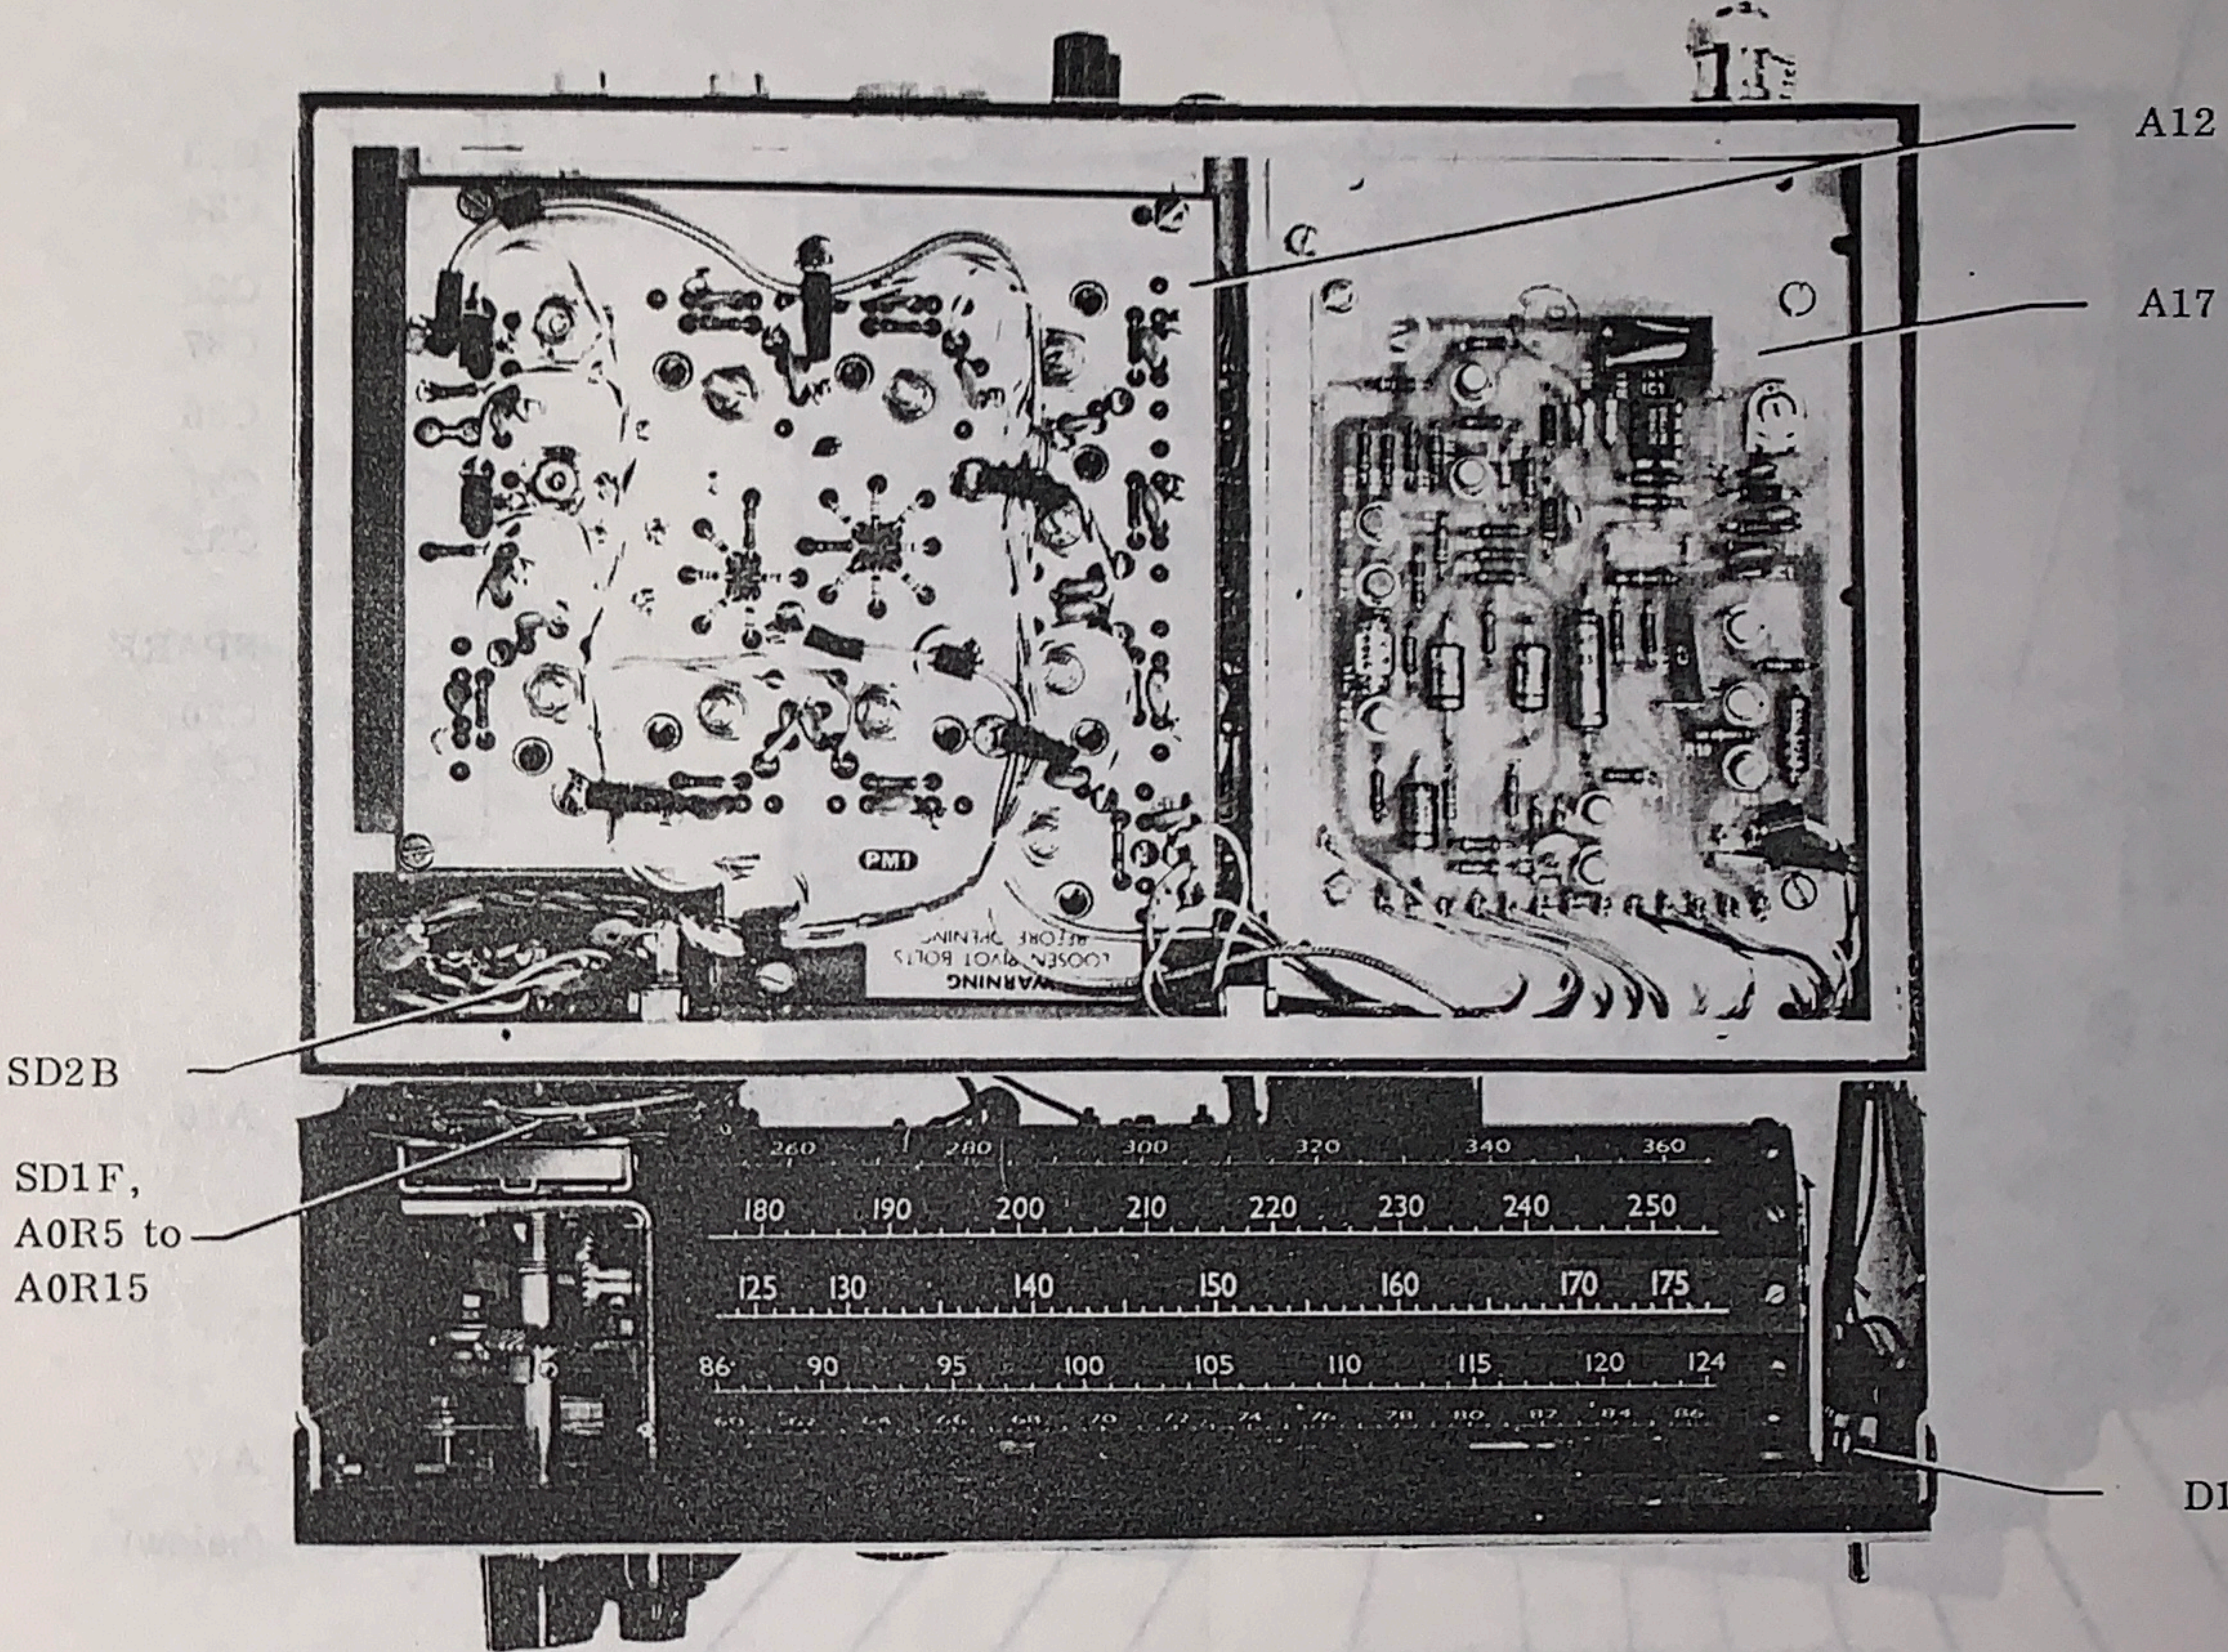


Fig. 4.4 Layout, top view

Table 4.1
Test equipment

Item	Description	Recommended model
a	50 MHz counter	MI TF 2410
b	500 MHz converter	MI TM 8334
c	'N' type 50 Ω load	MI TM 7967
d	Digital voltmeter, up to 50 V with resolution of 1%	MI TF 2670
e	30 MHz oscilloscope	MI TF 2201
f	Wave analyser	MI TF 2330A
g	RF millivoltmeter	MI TF 2603
h	'T' connector	MI TM 7948
i	RF milliwattmeter	MI-Sanders type 6460
j	22 cm air spaced line	General Radio type 874-LO
k	DC microvoltmeter	MI TF 2655
l	Distortion factor meter	MI TF 2331
m	AM/FM modulation meter	MI TF 2300B
n	AF oscillator	MI TF 1101
o	Psophometer	Hatfield Instruments type MBC 1000
p	RF detector	MI TM 9650
q	Short circuit current monitor	- See Fig. 4.5
r	Spectrum analyser	Hewlett Packard type 8554L, 8552A, 140T
s	Multimeter	GEC Selectest
t	Variable voltage transformer	Variac

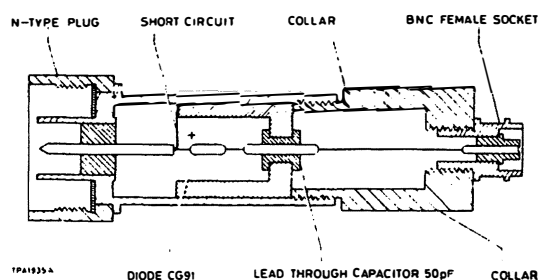


Fig. 4.5 Short circuit load

4.6 PERFORMANCE CHECKS

Many of the methods in this section are simplified and of restricted range compared with those which would be needed to demonstrate complete compliance with the specification. They should be regarded only as providing a check procedure, for

use during routine maintenance, to determine whether adjustment or repair is necessary. Any figures given are for guidance only and should not be taken as guaranteed performance figures unless they are quoted in the Data Summary Sect. 1.2.

NOTE. If the results quoted in the following sections are not obtainable, refer to the related section in Chapter 5.

4.6.1 Power supply unit A20

Test equipment : items d. f. t

1. With TF 2015 connected to the a.c. supply and switched on, connect the digital voltmeter between tag 17 (positive) and tag 15 (negative) and check that the meter indicates 22 V \pm 100 mV. If necessary adjust R4 to obtain this requirement.

2. Connect the digital voltmeter between tag 12 (positive) and tag 15 (negative) and check that the meter indicates 19 V \pm 100 mV. If necessary, select values for R14 and R17 to obtain this requirement.

3. Apply the a.c. input through a variable voltage transformer and check, using the digital voltmeter, that with inputs to the power supply of between 190 and 260 V the voltage between tag 12 and tag 15 is maintained to within \pm 40 mV of that obtained in (2).

4. Disconnect the digital voltmeter and with the a.c. input at 230 V connect the wave analyser set for battery operation, in turn to the 22 V and 19 V outputs. The 100 Hz ripple should not be greater than 100 μ V r.m.s. and 1 μ V r.m.s. at the respective outputs.

5. Disconnect the a.c. supply and connect a 24 V d.c. supply to the battery terminals and check that the 19 V output at tag 12 is within \pm 100 mV.

Disconnect the d.c. supply and re-connect TF 2015 directly to the a.c. supply.

4.6.2 Frequency calibration unit A12 (sub-assemblies A1 to A11)

Test equipment : items a, b.

1. Set the FUNCTION selector at CW and CARRIER switch at ON then ensure that the pointer of the MOD/CARRIER meter is within the white box on the meter scale.

2. Connect the counter to the COUNTER OUT socket (rear of instrument). Set the CARRIER RANGE selector in turn to ranges 1 to 11 and check, using the TUNE, FINE TUNE and EXTRA FINE TUNE controls, that the scale calibrations at three points on each range i.e. low and high frequency ends and at a centre frequency are within \pm 1.5% of counter indication.

If necessary, for ranges 1 to 9 inclusive adjust the appropriate core of T1 for low frequency correction and the appropriate capacitor C4 for high frequency correction. Since the core and C4 are interdependent ensure that after the second adjustment the first adjustment remains correct. For ranges 10 or 11 only C4 can be adjusted for high frequency correction. The oscillators are positioned as shown in Fig. 4.1.

4.6.3 RF output (normal)

Test equipment : item i.

1. With the FUNCTION selector and CARRIER switch set as in 4.6.2 (1) connect the power meter to the output of TF 2015.

2. Set the RF OUTPUT controls at 0 and -7 dBm respectively.

3. Verify that the pointer of the MOD/CARRIER LEVEL meter is within the white box. Using the TUNE control to step through each frequency range, verify that the output level is held at -7 dBm \pm 1 dB up to 100 MHz and within \pm 2 dB from 100 MHz to 520 MHz.

4. Ensure that when making each check the pointer of the MOD/CARRIER meter remains within the white box.

4.6.4 RF output (+6 dB)

Test equipment : item i.

1. With the FUNCTION selector, CARRIER switch, RF OUTPUT controls, set as in 4.6.2 and with the power meter connected to the RF OUTPUT socket set the frequency of TF 2015 at 100 MHz.

Note the indicated output then set the CARRIER switch at +6 dB and check that the output level has been increased by 6 dB \pm 1 dB.

2. Repeat the check with TF 2015 tuned to 500 MHz and check that with the CARRIER switch at +6 dB the output level has been increased by 6 dB \pm 1 dB.

4.6.5 Checking v.s.w.r. (frequencies 350 to 500 MHz)

Test equipment : items j, k, q.

1. Connect the test equipment as in Fig. 4.6.

2. Set the FUNCTION selector at CW, the CARRIER switch at +6 dB, the RF OUTPUT controls at 10 dBm and 7 dBm respectively and the output frequency at 500 MHz.

3. Ensure that the pointer of the MOD/CARRIER meter is within the white box.

- Set the adjustable line to $\frac{1}{2}\lambda$ (half wavelength) of the signal by applying the formula :

$$\lambda = \frac{300}{f}$$

where λ = wavelength in metres
and f = frequency in MHz

Adjust the line length for a maximum indication on the microvoltmeter and note its reading. Adjust the line length for minimum indication on the microvoltmeter, at $\frac{1}{4}$ wavelength away from the maximum response. Again note the voltmeter reading.

By definition, v. s. w. r. is the ratio of the maximum to minimum line voltage. The r. f. voltage developed across the virtual short circuit is detected by the diode and the corresponding d. c. maximum and minimum (e max and e min) are measured on the microvoltmeter. As the diode is being used on the lowest part of its characteristic a square law voltage applies, the v. s. w. r. being equal to

$$\text{v. s. w. r.} = \sqrt{\frac{e_{\text{max}}}{e_{\text{min}}}}$$

The v. s. w. r. should be better than 1.3:1

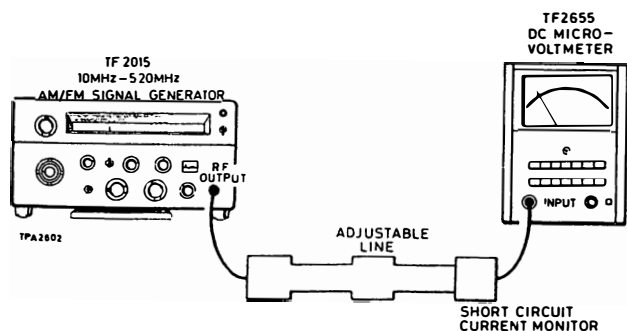


Fig. 4.6 Test gear arrangement to check v.s.w.r.

4.6.6 Checking v.s.w.r. (frequencies 10 to 350 MHz)

Test equipment : items c, g, h.

- With the TF 2015 controls set as in 4.6.2, connect the voltmeter to the RF OUTPUT of TF 2015 using the T connector and note the indicated output level.

- Connect the 50 Ω load to the T connector and again note the indicated output level.

- Compute the impedance Z using the following formula :

$$Z = \frac{50E}{V} - 50$$

where E = the open circuit output level

and V = the output across the 50 Ω load.

From the above,

$$\text{v. s. w. r.} = \frac{Z}{50}$$

The v. s. w. r. should be better than 1.3:1.

4.6.7 Modulation oscillator performance

Test equipment : items a, g, l.

- Set the FUNCTION selector at INT MOD and the CARRIER switch at OFF.
- Connect the counter to the INT MOD OUT socket (rear of instrument) and check that the indicated frequency is between 920 Hz and 1080 Hz.
- Disconnect the counter and connect the distortion factor meter (d. f. m.) to the INT MOD OUT socket.

The measured distortion should not be greater than 0.25%.

Set the d. f. m. to measure voltage and check that the measured voltage closely approximates 1.5 V r. m. s.

4.6.8 Checking f.m. deviation

Test equipment : item m.

- Set the FUNCTION switch at INT FM, set the CARRIER switch at ON, set the frequency of TF 2015 at 20 MHz then adjust SET MOD control to position the pointer of MOD/CARRIER meter at centre of white box on meter scale.
- Connect the modulation meter tuned to 20 MHz to the RF OUTPUT on TF 2015.
- Set the DEVIATION controls at x10 and 10 kHz respectively. The measured deviation should be within $\pm 15\%$ of 100 kHz. If necessary adjust SET

MOD to obtain this requirement then reset A18 R5 to position the pointer of the meter at centre of white box.

4. Set the DEVIATION multiplier at x1. The measured deviation should now be within $\pm 15\%$ of 10 kHz. If necessary adjust A19 R12 to obtain this requirement.

4.6.9 Checking a.m. depth

Test equipment : item m or e.

1. Set the FUNCTION selector at INT AM, set the CARRIER switch at ON. Set the frequency of TF 2015 at 20 MHz then adjust the SET MOD control to position the pointer of the MOD/CARRIER meter at the centre of the white box.

2. Set the AM DEPTH control at 80%.

3. Connect the modulation meter to the RF OUTPUT on TF 2015. Set the RF OUTPUT controls to provide a suitable input to the modulation meter then tune the modulation meter to TF 2015.

4. Check that the measured a.m. depth is between 70% and 90%.

5. Repeat with the AM DEPTH control at 30% and check that the measured a.m. depth is between 25% and 35%.

If necessary adjust A18 R3 to obtain the best results for both 80% and 30% depths.

NOTE. If a modulation meter is not available the a.m. depth can be assessed by using the oscilloscope to measure the peak and trough values of the modulation envelope. The a.m. depth is then determined by

$$\text{AM depth \%} = \frac{V_p - V_t}{V_p + V_t} \times 100$$

where V_p and V_t are the measured peak-to-peak and trough-to-trough amplitudes respectively.

4.6.10 Checking f.m. tracking

Test equipment : item m.

1. Connect the modulation meter to the RF OUTPUT of TF 2015.

2. Set the FUNCTION selector at INT FM and the CARRIER switch at ON.

3. Adjust the SET MOD control to position the pointer of the MOD/CARRIER meter at the centre of the white box. Then set the DEVIATION multiplier at x10 and the deviation control at 10 kHz.

4. Set the CARRIER RANGE selector at 10-14.3 and check that at frequencies 10, 12 and 14 MHz the measured deviation is 100 kHz $\pm 15\%$.

4.6.11 Checking a.l.c. system

Correct operation of the a.l.c. system can be quickly proved as follows :

1. Set the FUNCTION selector at CW and the CARRIER switch at ON then check that the pointer of the MOD/CARRIER meter is within the white box.

2. Switch to each CARRIER RANGE in turn then use the TUNE control to check that over each frequency range the pointer of the MOD/CARRIER meter remains within the white box.

4.6.12 Counter output level

Test equipment : item i.

1. Set the FUNCTION selector at CW and the CARRIER switch at ON.

2. Connect the power meter to COUNTER OUT socket (rear of instrument) then check that with TF 2015 tuned to 100 MHz the output level is not less than -7 dBm.

4.6.13 External modulation sensitivity

Test equipment : item n.

1. Set the FUNCTION selector at EXT AM and the CARRIER switch at ON:

2. Using the external a.f. generator connected to the EXT MOD IN socket (rear of instrument) check that, with an input signal between 1.2 V and 1.8 V r.m.s. at frequencies of 30 Hz, 1.5 kHz, 10 kHz and 50 kHz, the pointer of the MOD/CARRIER meter can be positioned at the centre of the white box on scale.

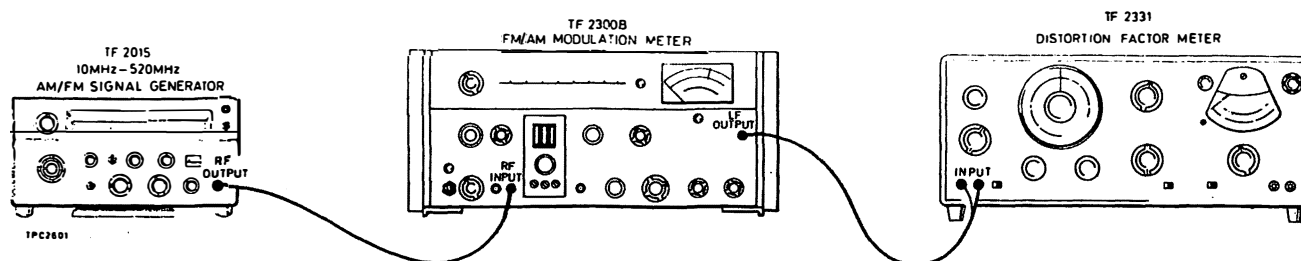


Fig. 4.7 Test gear arrangement to check f.m. and a.m. distortion and f.m. on a.m.

3. Repeat the above with FUNCTION selector at EXT FM.

NOTE. The TF 2015 meter can be overloaded if the applied a. f. input exceeds 10 V.

4.6.14 AM distortion

Test Equipment : items l, m.

1. Connect the test equipment as shown in Fig. 4.7.
2. Set the FUNCTION selector at CW, the CARRIER switch at ON and the frequency of TF 2015 at 100 MHz. Then check that the pointer of the MOD/CARRIER meter is within the white box on meter scale.
3. Set the FUNCTION selector at INT AM. Then adjust SET MOD control to position the pointer of the MOD/CARRIER meter at the centre of the white box on scale.
4. Set the AM DEPTH control at 30%. Then tune the modulation meter to TF 2015 and check that the distortion indicated on the distortion factor meter is not greater than 5%.
5. If required, repeat the check using the external a. f. generator for modulation frequencies at 50 Hz and 20 kHz.

4.6.15 FM distortion

Test equipment : items l, m.

1. With the test equipment connected as in Fig. 4.7 repeat 4.6.14 (2). Then set the FUNCTION selector at INT FM and the SET MOD control to position the pointer of the MOD/CARRIER meter at the centre of the white box.
2. Set the DEVIATION multiplier at x10 and the DEVIATION control at 10 kHz.
3. Ensure that the modulation meter is tuned to TF 2015. Then check that the distortion indicated on the distortion factor meter is not greater than 5%.
4. If desired, repeat the check using the external a. f. generator for modulation frequencies at 50 Hz and 20 kHz.

4.6.16 Spurious f.m. on c.w.

Test equipment : items m, o.

1. Connect the test equipment as in Fig. 4.8.

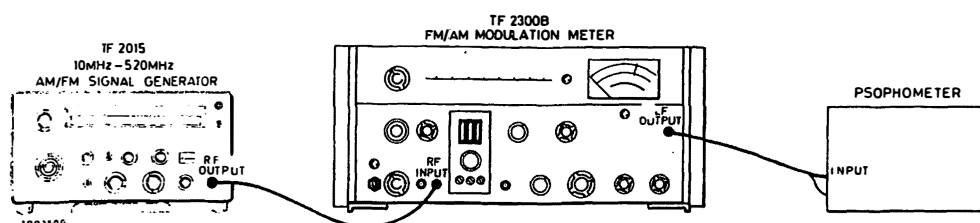


Fig. 4.8 Test gear arrangement to check spurious f.m. on c.w.

2. Set the FUNCTION selector at CW and the CARRIER switch at ON. Then tune TF 2015 to 174.5 MHz and ensure that the pointer of the MOD/CARRIER meter is within the white box.

3. Set the FUNCTION selector at INT FM. Then adjust the SET MOD control to position the pointer of the MOD/CARRIER meter at the centre of the white box.

4. Set the DEVIATION multiplier at x1 and the DEVIATION control at 5 kHz.

5. Set the psophometer controls as follows :

INPUT SELECTOR : Terminated
WEIGHTING : FILTER NO.1
ATTENUATOR : 0 dB

6. Using 44 MHz crystal, tune and crystal lock the modulation meter to TF 2015 (modulation meter at 176.0 MHz). Then set the ADJUST CALIBRATION control on the psophometer for a meter indication of 0 dB.

7. Set the FUNCTION selector at CW. Then adjust the psophometer attenuator to restore the meter pointer at 0 dB, and check that the change is greater than 38 dB (less than 61 Hz).

8. If desired repeat the check at a carrier frequency of 481.5 MHz and check that the change is greater than 34 dB (less than 100 Hz).

4.6.17 Spurious a.m. on c.w.

Test equipment : items p, o.

1. Connect the test equipment as shown in Fig. 4.9. Then with the FUNCTION selector at CW, the CARRIER switch at ON and TF 2015 tuned to 100 MHz check that the pointer of the MOD/CARRIER meter is within the white box.

2. Set the FUNCTION selector at INT AM. Then adjust the SET MOD control to position the pointer of the MOD/CARRIER meter at the centre of the white box on meter scale.

3. Set the AM DEPTH control at 20% and the TF 2015 output at maximum.

4. Set the Psophometer controls as follows:-

INPUT SELECTOR : THRO
WEIGHTING : FILTER NO.1
(Telephone)

VOLTAGE/dBm
RANGE 10 mV

5. Switch the psophometer to INTERNAL SUPPLY. Then adjust the VOLTAGE/dBm RANGE switch and the ADJUST CALIBRATION control for a convenient indication on the meter.

Note the setting of the VOLTAGE/dBm RANGE switch and the meter indication.

6. Set the TF 2015 FUNCTION selector at CW. Then increase the VOLTAGE/dBm RANGE switch on psophometer by 40 dBm. The meter should indicate a level which is less than that noted in 5.

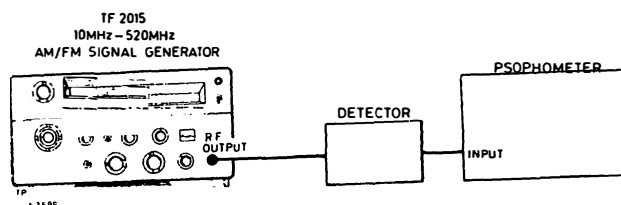


Fig. 4.9 Test gear arrangement to check spurious a.m. on c.w. and a.m. on f.m.

4.6.18 Spurious a.m. on f.m.

Test equipment : items p, o.

1. With the test equipment connected as in Fig. 4.9 repeat 4.6.17 (1) and (2)

2. Set the AM DEPTH control at 30% and the TF 2015 output at maximum.

3. Set the psophometer controls as follows:-

INPUT SELECTOR : THRO
WEIGHTING : FILTER NO.1

VOLTAGE/dBm
RANGE : 10 mV

4. Switch the psophometer to INTERNAL SUPPLY. Then adjust the VOLTAGE/dBm RANGE switch and the ADJUST CALIBRATION control for a convenient indication on the meter. Note the setting of the VOLTAGE/dBm RANGE switch and the meter indication.

5. Set the TF 2015 FUNCTION selector at INT FM. Adjust the SET MOD control to position the pointer of the MOD/CARRIER Meter at the centre of the white box. Then set DEVIATION Multiplier at x10 and DEVIATION control at 3(i.e. 30 kHz).

6. Increase the VOLTAGE/dBm RANGE switch on psophometer by 20 dB.

The meter should indicate a level which is not greater than that noted in 4.

4.6.19 Spurious f.m. on a.m.

Test equipment : items l, m.

1. Connect the test equipment as in Fig. 4.7.
2. Set the FUNCTION selector at INT FM, the CARRIER switch at ON, the TF 2015 frequency at 100 MHz and its output at maximum. Then adjust the SET MOD control to position the pointer of the MOD/CARRIER meter at the centre of the white box on meter scale.
3. Set the DEVIATION multiplier at x1 and the DEVIATION control at 1 kHz then tune the modulation meter (preferably using crystal lock) to TF 2015 and ensure that the indicated deviation is 1 kHz.
4. Set the FUNCTION selector on the distortion factor meter (d.f.m.) at SET REF LEVEL, the INPUT switch at HI Z, the INPUT range at 1 V - 10 V and the METER RANGE switch at 0.1 V. Then adjust the SET REF (d.f.m.) level control to give a meter indication of 0 dB.
5. Set the TF 2015 FUNCTION selector at INT AM and adjust the SET MOD control to position the pointer of the MOD/CARRIER meter at the centre of the white box. Then set the AM DEPTH control at 30%.
6. Note the difference in level shown on the d.f.m., using a more sensitive range if necessary, and ensure that it is greater than 6 dB, i.e. deviation less than 500 Hz.

$$(\text{Deviation in Hz} = \frac{1000}{\text{d.f.m. voltage ratio}})$$

4.6.20 Carrier harmonics

Test equipment : item r.

1. Connect the RF OUTPUT of TF 2015 to the r.f. input of the spectrum analyser.
2. Set the FUNCTION selector at CW, the CARRIER switch at ON and the RF OUTPUT controls fully clockwise. Then ensure that the pointer of the MOD/CARRIER meter is within the white box.
3. Tune TF 2015 through each r.f. range and

check that the amplitude of any harmonic is greater than 26 dB down on the fundamental.

4.6.21 Coarse r.f. output control

Test equipment : items i, s.

Provided the attenuator pads have not been damaged (see Sect. 2.4) it is only necessary to prove correct operation of the associated micro-switches and this can be satisfied by making a series of resistance measurements as follows :

1. With the SUPPLY switch at OFF, connect the multimeter set at low ohms range to the RF OUTPUT socket.
2. Set both RF OUTPUT controls fully clockwise and check that the multimeter indicates a resistance of $1050 \Omega \pm 2\%$ (resistor tolerance).
3. Position the COARSE control in turn to each dB setting and check that the measured resistance at the 10 dB position is 60Ω and at 20 dB position 51Ω and each following position $50 \Omega \pm 2\%$ (resistor tolerance).

4.6.22 Fine r.f. output control

Test equipment : items i, s.

1. Connect the power meter to the RF OUTPUT socket.
2. Set the SUPPLY switch at ON, the FUNCTION selection at CW, the CARRIER switch at ON. Tune TF 2015 to 100 MHz and check that the pointer of the MOD/CARRIER meter is within the white box.
3. Set the COARSE control at 0 and the FINE control at -7 dBm then note the reading obtained on the power meter.
4. Repeat check 3 with the FINE control in turn at 9, 11, 13, 15, 17 dBm.

4.7 CLEANING ROTARY SWITCHES

If it is necessary to clean the contacts of any rotary switches, this should be done with benzine or white spirit (not carbon tetrachloride) and the contacts should afterwards be wiped with a suitable lubricant such as a 1% solution of petroleum jelly in white spirit. Avoid lubricants containing soap or solid materials.

5.1 INTRODUCTION

Since the functional checks given in Chapter 4 serve to localize the cause of incorrect performance of the instrument, this chapter is intended to assist in tracing the fault to the particular part of the suspect circuit.

The information given, should be read with reference to Chapter 3 and 4 and the circuit diagrams contained within this manual.

CARRIER FREQUENCY : at 14 MHz RANGE 1

CARRIER switch : at ON

FUNCTION selector : at INT AM

RF OUTPUT controls : at 0 and -7 dBm

Prior to making measurements ensure that screws on Unit A12 are tight.

Voltage levels at A12 pin 12 are dictated by the a.l.c. voltage at A17 pin 5 and should approximate those given in Table 5.1.

5.2 FAULT LOCATION

Some aid to fault finding is provided by the typical d. c. voltage and signal levels given in Sections 5.2.1, 5.2.2, 5.2.3 and by the fault tables included in each of the following sections. The tables are not extensive but are intended as a pointer to further investigation. It is to be emphasized that each fault table should be studied having regard for the others since incorrect operation of a circuit may be caused by malfunction of an associated circuit.

5.2.1. D.C. Voltages

Test equipment : item s.

Voltages given on the circuit diagrams and in Tables 5.1 and 5.2 approximate those which can be expected using a 20 k Ω /V meter on a typical TF 2015 connected to an a. c. supply of 240 V, 50 Hz and unless stated otherwise were measured with the controls of TF 2015 positioned as follows :

Table 5.1

Range TF 2015	Frequency MHz	Voltage (V d.c.) at A12 pin 12
1-7	10 - 124	9-11
8	124	8.6
	177	9.7
9	177	9.2
	250	9.8
10	250	4.3
	320	8.0
	360	6.5
11	360	7.0
	410	9.2
	520	8.3

Voltage levels on Unit A23 which were measured with TF 2015 set in turn at 10 MHz and 14 MHz (RANGE 1) with CARRIER switch at ON and f. m. at 100 kHz deviation should approximate those given in Table 5.2.

Table 5.2

Test point	Voltage (V d.c.)		Meter range (V)	Remarks
	10 MHz	14 MHz		
Junction R1/D1	4.7	7.5	100	negative with respect to chassis
Junction C2/D1	0	7.5	100	
Junction R4/D2	0.2	0.25	2.5	
Junction R2/D2	0.03	0.03	2.5	

5.2.2. R.F. Signal levels

an a.c. supply of 240 V, 50 Hz.

Test equipment : item g.

The r.f. signal levels listed in Table 5.3 approximate those which can be expected using the specified meter on a typical TF 2015 connected to

Measurements were made with the TF 2015 FUNCTION selector at CW, the RF OUTPUT controls at 0 and -7 dBm and with the earth probe of TF 2603 connected to a position on the earth track on the printed board close to the test point.

Table 5.3

Unit	Test point	Range 1		Range 11	
		Signal level (mV) 14 MHz		Signal level (mV) 520 MHz	
		Carrier switch		Carrier switch	
		On	+6dB	On	+6dB
A12	Pin 14	54	—	69	—
A16	Pin 1	53	—	24	—
	Junction R2/R4	9	—	28	—
	TR1e	2	—	1.8	—
	TR1c	20	—	28	—
	TR2c	140	—	145	—
	TR3e	7	—	46	—
	TR3c	37	—	38	—
	TR4c	330	—	230	—
	Junction D3/D5	175	180	94	65
	Junction D3/D4	23	67	27	125
	Junction D4/D6	170	180	103	158
	Junction D5/D6	24	68	31	118
	Junction C19/T2	45	125	15.5	77
	TR5b	5.5	11	20	90
	TR5c	80	260	84	310
	TR7b	6.2	13.5	37	81
	TR7c	105	210		205
	TR8b	9.4	19.5	96	200
	TR8c	205*	400	265*	490
	TR6b	67*	—	38*	—
	TR6c	690*	—	155*	—
	Pin 7	2 ϕ	2.5 ϕ	8.5 ϕ	24 ϕ

* SKF (COUNTER OUTPUT) loaded with 50 Ω .

ϕ Spurious r.f. levels present on the +22 V d.c. line measured with TF 2603 earth probe connected to earth track on printed board and close to TR8.

5.2.3. A.F. Signal levels

typical TF 2015 connected to an a.c. supply of 240 V, 50 Hz.

Test equipment : item c.

The a.f. signal levels listed in Table 5.4. approximate those which can be expected on a

Unless stated otherwise, measurements were made with TF 2015 set at 14 MHz RANGE 1 and CARRIER switch at ON.

Table 5.4

Unit	Control settings	Test point	Signal level	Remarks
A19	FUNCTION - INT FM DEVIATION - 100 kHz	Pin 3	6.7 V p-p	
		Pin 7	3.2 V p-p	negative peak compressed
		Pin 18	6.4 V p-p	
		Pin 17	1 V p-p	negative peak compressed
		Pin 9	3 V p-p	
A21	FUNCTION - INT FM DEVIATION - 100 kHz	Pin 15	0.5 V p-p	
		Pin 13	205 mV p-p	carrier frequency 10 MHz
A21	FUNCTION - INT AM AM DEPTH - 80%	Pin 6	850 mV p-p	
		Pin 8	58 mV p-p	negative peak compressed
		Pin 9	70 mV p-p	negative peak compressed

5.2.4 Power supply

Circuit diagram Fig. 7.4 Unit A20

Table 5.5

Fault	Probable cause
(a) Fuse FS1 or FS3 blows when instrument is switched on.	Short in a.c. input circuit. A0 C1 or C2 short-or partial short-circuit.
(b) No 22 V output	A0 TR1 open-circuit (check 22 V line for short) A0 C1, C2 or C5 short-or partial short-circuit.
(c) No 19 V output	TR4 open-circuit (check 19 V line for short).
(d) Inability to set 22 V ± 100 mV.	TR2, TR3 or TR5 faulty. Resistor open-circuit or value changed. C3 or C4 short-or partial short-circuit.
(e) Incorrect 19 V ± 100 mV output.	Faulty TR5, TR6, TR8 Resistor open circuit or value changed especially R9, R14 or R17.
(f) 100 Hz supply on 22 V line greater than 100 μ V r.m.s.	A0 C1, C2 or C3 open-circuit or low capacitance. D1, D2, D3 or D4 faulty.
(g) 100 Hz supply on 19 V line greater than 1 μ V r.m.s.	C8 open circuit or low capacitance.

5.2.5 RF calibrations

Circuit diagram Fig. 7.1 Unit A12 (sub-assemblies A1 to A11)

Table 5.6

Fault	Probable cause
(a) Calibrations incorrect all ranges.	Incorrect d.c. voltage at A19 pin 8 (Fig. 7.3). Check d.c. path to switch SG (Fig. 7.3).
(b) Inability to set scale calibrations on any selected range.	Incorrect d.c. voltage to R4 (A1 to A9) R5 (A10 and A11). Check output A21 pin 13. Faulty varactor D1 or D2.

5.2.6 RF output (normal)

Circuit diagram Fig. 7.2 Units A16, A17, A18

Table 5.7

Fault	Probable cause
Meter pointer not within white box	Incorrect d.c. outputs A18 pins 12 or 13. Check circuit A18 TR2. Faulty resistor or diode in circuit A18 R13 to R21, D4 or D5. Incorrect operation of circuit A17, R1 to R7, TR1, TR2 or TR3. DC offsets to A16 modulator from A17 TR7 and TR8 at incorrect level. Check circuit TR7 and TR8. Fault in amplifier circuit A16 TR5, TR7 and TR8. D7 or D8 faulty. Fault in a d.c. circuit of A17. Check TR9, TR10, IC1 and A16 D9 and D10.

5.2.7 RF output (: 6 dB)

Table 5.8

Fault	Probable cause
+6dB output not obtainable	Faulty carrier switch. Faulty diode A18 D6 or R25. Recheck operation of circuits A17 TR7, TR8 for increased d.c. offsets to A16 modulator and operation of a.l.c. loop with carrier switch at +6dB.

5.2.8 VSWR

Check that A16 R39 is $50 \Omega \pm 1\%$ and recheck A22 as given in Sect. 4.6.21.

5.2.9 Modulation oscillator

Circuit diagram Fig. 7.3 Unit A19

Table 5.9

<i>Fault</i>	<i>Probable cause</i>
(a) No output or incorrect output	No 22 V at pin 1: check switch SA1F TR1 or TR2 faulty.
(b) Frequency incorrect	R1, R2, C1 or C2 faulty; check values.
(c) Distortion greater than 0.25%	Faulty thermistor R7. Check C3, C4.

5.2.10 Amplitude modulation

Circuit diagram Figs. 7.2 and 7.3 Units A16, A17, A18

Table 5.10

<i>Fault</i>	<i>Probable cause</i>
(a) Inability to set meter pointer at centre of white box by adjusting SET MOD control.	A0R2 faulty. Fault in monitor circuit A18 TR1.
(b) Inability to obtain required modulation depth.	Fault in a.m. driver circuit A17 TR4, TR5 or TR6. Incorrect operation of modulator : check A16 D3 to D6, L1 and L2. Check A16 C17, C18 and a.f. path from SET MOD control to driver.
(c) Envelope distortion	Fault in modulation oscillator. Fault in a. m. driver circuit.

5.2.11 Frequency modulation

Circuit diagram Figs. 7.2 and 7.3 Units A19 and A23

Table 5.11

<i>Fault</i>	<i>Probable cause</i>
No frequency modulation.	Check a.f. path from SET MOD control to A23. Incorrect operation of circuits A19 or A23. Switch SG faulty.
Incorrect deviation	Faulty resistor A0 R5 to R15, A19 R18 to R22 or R17.
FM distortion	Incorrect operation of circuits A19 or A23.

5.2.12 ALC system

Circuit diagram Fig. 7.2 Units A16, A17, A18

Table 5.12

<i>Fault</i>	<i>Probable cause</i>
Meter pointer at zero or full scale - all ranges.	Fault in r.f. signal path. Check outputs from circuits on A16. Fault in circuit A17 TR7, TR8. Fault in circuit A17 TR9, TR10, IC1. Fault in circuit A18 TR2 : check outputs. Check diodes D4, D5 and associated resistors.
- on one range only.	No input to A16 pin 1 : suspect appropriate oscillator output.

5.2.13 Carrier harmonics

Circuit diagram Fig. 7.2 Units A16 and A17

Table 5.13

<i>Fault</i>	<i>Probable cause</i>
Amplitude too high - all ranges.	Incorrect operation of first a.l.c. loop, causing high oscillator outputs to overload pre-amplifier. Amplifier distortion: check circuits TR1 to TR4 and TR5, TR7 and TR8.

5.2.14 Spurious modulation

Table 5.14

<i>Fault</i>	<i>Probable cause</i>
Spurious f.m. or a.m. too high.	Excess ripple on 22 V or 19 V d.c. supplies or increased circuit noise. Check transistors, diodes, and if necessary resistors especially those incorporated in a.l.c. loops.

5.3 REPLACING TUNING DRIVE CORD

Drive cord : 1 metre nylon cord MI code No. 16410 - 604.

Tension spring : MI code No. 31119-017.

To gain access to the drive cord assembly proceed as follows.

- | | |
|---|---|
| <p>(1) Remove the case from the instrument and remove the attenuator unit (see Sect. 4.3).</p> <p>(2) Remove the scale plates for the three highest frequency ranges.</p> | <p>(3) Set the RANGE switch to the 14.3 - 20.5 MHz position.</p> <p>(4) Stand the instrument upside-down on the bench.</p> <p>(5) Referring to Fig. 5.1, slacken the grub screws and unscrew the nut to pull aside R38. With the TUNE control three steps away from the fully counter-clockwise position, slacken one of the grub screws in the cord-drum boss.</p> |
|---|---|

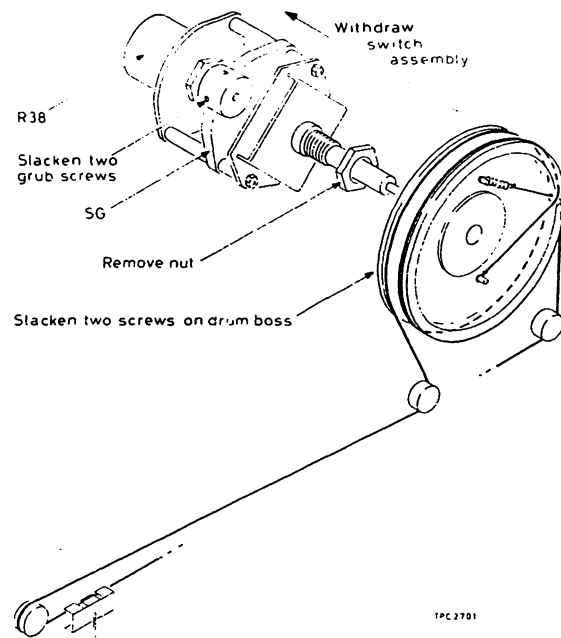
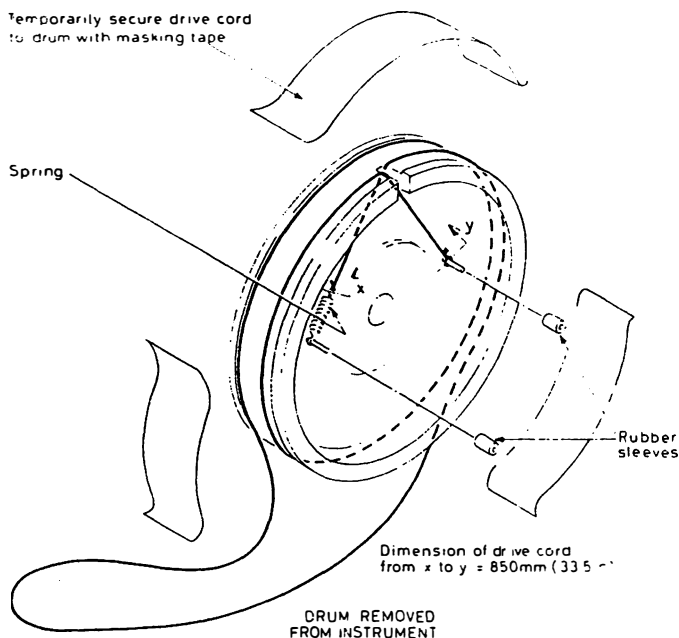


Fig. 5.1 Replacing cord drive

Turn the TUNE control fully clockwise and slacken the other grub screw. Remove the TUNE and EXTRA FINE TUNE knobs. Unscrew the nut and pull away the switch assembly SG from the drum.

- (6) Remove the drum and attach the drive cord as shown in Fig. 5.1, temporarily holding it in place with adhesive tape. Seal the cord knots with bakelite varnish.
- (7) Replace the drum and completely refit the switch SG and R38 assemblies.
- (8) Fit the loop of cord around the three pulleys. Check that the cord spring is under tension. If the cord has been properly dimensioned, the expanded length of the spring will be about 12 mm ($\frac{1}{2}$ inch). Refit the knobs.
- (9) Attach the pointer to the drive cord and adjust its position so that it reaches (or just passes) the 60 MHz and 124 MHz calibration marks :
 - (a) On 60 - 86 MHz range with both TUNE and FINE TUNE controls fully counter-clockwise.
 - (b) On 86 - 124 MHz range with both TUNE and FINE TUNE controls fully clockwise.
- (10) Refit scale plates, attenuator unit and case.

5.4 REPLACING TRANSFORMERS A16 T1 T2

If modulator transformers T1 or T2 are required to be replaced it is important that the replacement be connected, in the same way as the removed component. The required connections are shown in Fig. 5.2

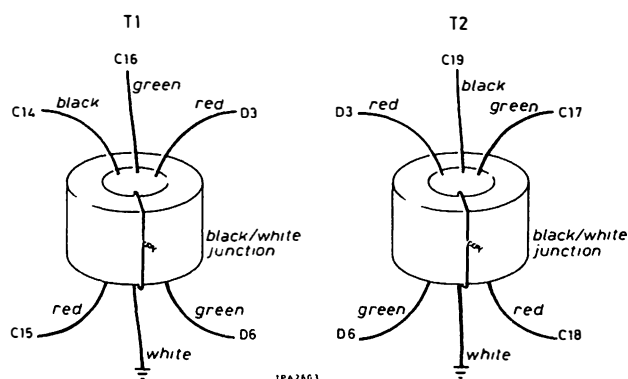


Fig. 5.2

5.5 ADDITIONAL INFORMATION

If further information is required please write or telephone Marconi Instruments Limited, Service Division - see address on back cover - or contact nearest representative, quoting the type and serial number on the data plate on rear of instrument.

If the instrument is being returned for repair please indicate clearly the nature of the fault or the work you require to be done.

Replaceable parts

Introduction

Each sub-assembly or printed circuit board in this instrument has been allocated a unit identification in the sequence A0 to A12 and A16 to A23.

The complete component reference carries its unit number as a prefix e.g. A1C1 but for convenience in the text and on circuit diagrams the prefix is not used.

However, when ordering replacements or in correspondence the complete component reference must be quoted.

One or more of the components fitted in this instrument may differ from those listed in this chapter for any of the following reasons:

- Components indicated by † have their value selected during test to achieve particular performance limits.
- Owing to supply difficulties, components of different value or type may be substituted provided the overall performance of the instrument is maintained.
- As part of a policy of continuous development, components may be changed in value or type to obtain detail improvements in performance.

When there is a difference between the component fitted and the one listed, always use as a replacement the same type and value as found in the instrument.

Ordering

When ordering replacements, address the order to our Service Division (address on rear cover) or nearest agent and specify the following for each component required.

- Type* and serial number of instrument
- Complete circuit reference
- Description
- MI code number

* as given on the serial number label at the rear of the instrument; if this is superseded by a model number label, quote the model number instead of the type number.

Component references

The components are listed in alpha-numerical order and the following abbreviations are used:

C	:	capacitor
Carb	:	carbon
Cer	:	ceramic
Cerm	:	cermet
D	:	semiconductor diode
Elec	:	electrolytic
FS	:	fuse
IC	:	integrated circuit (package)
L	:	inductor
Max	:	maximum
ME	:	meter
Met	:	metal
Mic	:	mica
Min	:	minimum value
Ox	:	oxide
PL	:	plug
Plas	:	plastic dielectric
R	:	resistor
S	:	switch
SK	:	socket
T	:	transformer
TP	:	terminal
TR	:	transistor
WW	:	wirewound
X	:	crystal oscillator
†	:	value selected during test; nominal value listed
Ø	:	feed-through component
W	:	watts at 70°C

TUNING DIODES

When ordering replacement diodes D1 and D2 for oscillator units A1 to A11 it is necessary to ensure that diodes of the correct voltage/capacitance characteristic are supplied by following the instructions given below.

For instruments with serial numbers 116903/01 and onwards there is a label on Unit A12 bearing a letter and a number to identify the particular group of diodes used. To obtain the correct replacement you order should call for :

- Type and serial number of instrument.
- Complete circuit reference e.g. A1D2.

- (iii) Description, i.e. Diode BB105A.
 (iv) MI code number 44529-003 plus Group identification code e.g. 44529-003/D3.

Circuit
reference

Description

M.I. code

Unit **A0**

When ordering, prefix circuit reference with A0

DETECTOR DIODES

Older instruments with serial numbers 116904/100 onwards may be fitted with either diodes type CG92H or HP5082-2835 matched pairs in Units A16 and A17. These may be replaced by the diodes specified for the current production series, i.e. serial numbers 116970 onwards. The diodes now fitted require no special selection and may be ordered as direct replacements. Units A16 and A17 D1, D2 are fitted with type HP 5082-2811 Code No. 28349-008. Unit A16 D9, D10 and Unit A17 D4, D5 are fitted with HP 5082-2835 Code No. 28349-006.

C1	Elec 2200 μ F +50-10% 40V	26426-086
C2		
to	Cer \emptyset 0.001 μ F +80-20% 300V	26373-733
C25		
C26	Cer \emptyset 50pF 10% 300V	26333-229
C27	Cer \emptyset 50pF 10% 300V	26333-229
C28	Cer \emptyset 50pF 10% 300V	26333-229
C29		
to	Cer \emptyset 500pF +80-20% 300V	26373-732
C35		
C36	Cer \emptyset 50pF 10% 300V	26333-229
C37	Cer \emptyset 500pF +80-20% 300V	26373-732
C38	† Elec 22 μ F \pm 20% 15V	26486-583
D1	LED (On-Off indicator)	28624-103
FS1 & FS3	160 mA slow-blow (190-264 V)	23411-054
for	250 mA slow-blow (95-132 V)	23411-055
	Holder for FS1, FS2 & FS3	23416-191
	Cover for FS1 & FS3	23416-198
FS2	500mA slow-blow	23411-056
L1	Choke 100 μ H	23642-561
L2	Choke 100 μ H	23642-561
L3	Choke 100 μ H	23642-561
L4	Choke 100 μ H	23642-561
L5	Choke 100 μ H	23642-561
L6	Choke 100 μ H	23642-561
L7	Choke 100 μ H	23642-561
L8	Choke 100 μ H	23642-561
L9	Choke 100 μ H	23642-561
L10	Choke 100 μ H	23642-561
L11	Choke 10 μ H	23642-555
L12	Choke 10 μ H	23642-555
L13	Choke 100 μ H	23642-561
L14	Choke 100 μ H	23642-561
L15	Choke 10 μ H	23642-555

Circuit reference	Description	M.I. code	Circuit reference	Description	M.I. code
L16	Choke 10 μ H	23642-555	R31	Met film 200 Ω 2% $\frac{1}{4}$ W	24773-256
L17	Choke 100 μ H	49116-909	R32	Met film 180 Ω 2% $\frac{1}{4}$ W	24773-255
L18	Choke 100 μ H	49116-909	R33	Met film 160 Ω 2% $\frac{1}{4}$ W	24773-254
			R34	Met film 130 Ω 2% $\frac{1}{4}$ W	24773-252
ME1	Meter	44559-011	R35	Met film 120 Ω 2% $\frac{1}{4}$ W	24773-251
			R36	Met film 100 Ω 2% $\frac{1}{4}$ W	24773-249
R1	Cerm 1k Ω 10% 2W	25725-403	R17 to R36 (inclusive) mounted on TUNE switch SG		
R2	Cerm 1k Ω 10% 2W	25725-403	R37	WW 100k Ω 10% 10-turn 0.8W	25885-031
R3	Met film 1k Ω 2% $\frac{1}{4}$ W	24773-273	R38	WW 10k Ω 10% $\frac{1}{2}$ W	25812-696
R4	Cerm 1k Ω 10% 2W	25725-403	R39	Met film 50 Ω 1% $\frac{1}{4}$ W	24762-558
R5	Met film 2.2k Ω 2% $\frac{1}{4}$ W	24773-281	R40	Met film 200 Ω 2% $\frac{1}{4}$ W	24773-256
R6	Met film 1.5k Ω 2% $\frac{1}{4}$ W	24773-277	R41	Met film 820 Ω 2% $\frac{1}{4}$ W	24773-271
R7	Met film 1.1k Ω 2% $\frac{1}{4}$ W	24773-274	R42	† Met film 2.2k Ω 2% $\frac{1}{4}$ W	24773-281
R8	Met film 750 Ω 2% $\frac{1}{4}$ W	24773-270	R43	Met film 470 Ω 2% $\frac{1}{4}$ W	24773-265
R9	Met film 510 Ω 2% $\frac{1}{4}$ W	24773-266	SA	Function switch	44340-022
R10	Met film 360 Ω 2% $\frac{1}{4}$ W	24773-262	SB	Carrier switch 4-pole 3-pos.	23462-267
R11	Met film 240 Ω 2% $\frac{1}{4}$ W	24773-258	SC	Deviation multiplier switch SPDT	23462-252
R12	Met film 180 Ω 2% $\frac{1}{4}$ W	24773-255	SD1	Front wafer of carrier range switch	44340-031
R13	Met film 120 Ω 2% $\frac{1}{4}$ W	24773-251	SD2	Rear wafer of carrier range switch	44340-030
R14	Met film 130 Ω 2% $\frac{1}{4}$ W	24773-252	SE	Supply switch DPDT	23462-258
R15	Met film 150 Ω 2% $\frac{1}{4}$ W	24773-253	SF	Voltage selector switch 230V/115V	23467-155
R5 to R15 (inclusive) mounted on RANGE switch SD			SG	Tune switch	44340-015
R16	Cerm 10k Ω 10% 2W	25725-404	SKA	Bulgin P580	23423-159
R17	Met film 1.1k Ω 2% $\frac{1}{4}$ W	24773-274	SKB	BNC 50 Ω (Ext mod in)	23443-443
R18	Met film 750 Ω 2% $\frac{1}{4}$ W	24773-270	SKC	BNC 50 Ω (Int mod out)	23443-443
R19	Met film 680 Ω 2% $\frac{1}{4}$ W	24773-269	SKD	BNC 50 Ω (Sync in)	23443-443
R20	Met film 560 Ω 2% $\frac{1}{4}$ W	24773-267	SKE	DIN speaker type (IF probe supply)	23435-252
R21	Met film 510 Ω 2% $\frac{1}{4}$ W	24773-266	SKF	TNC 50 Ω (counter out)	23444-741
R22	Met film 430 Ω 2% $\frac{1}{4}$ W	24773-264	SKH	BNC 50 Ω (RF out)	43129-029
R23	Met film 430 Ω 2% $\frac{1}{4}$ W	24773-264			
R24	Met film 390 Ω 2% $\frac{1}{4}$ W	24773-263	T1	Mains transformer	43490-010
R25	Met film 360 Ω 2% $\frac{1}{4}$ W	24773-262	TP1	Battery terminal + input	23235-176
R26	Met film 330 Ω 2% $\frac{1}{4}$ W	24773-261	TP2	Battery terminal - input	23235-176
R27	Met film 300 Ω 2% $\frac{1}{4}$ W	24773-260			
R28	Met film 300 Ω 2% $\frac{1}{4}$ W	24773-260			
R29	Met film 240 Ω 2% $\frac{1}{4}$ W	24773-258			
R30	Met film 220 Ω 2% $\frac{1}{4}$ W	24773-257			

For symbols and abbreviations see introduction to this chapter

Circuit reference	Description	M.I. code
TR1	Transistor 2N3055	28456-567
X1 to X40	Ferrite bead	41372-006

Unit (A1) oscillator range 1*When ordering, prefix circuit reference with A1*

C1	Cer 0.01 μ F +80-20% 100V	26383-055
C2 †	Cer 10pF \pm 0.5pF 500V	26343-121
C3	Cer 220pF 20% 500V	26383-134
C4	Cer var. 0.5 - 5pF	26845-141

D1	Tuning varactor BB105A	} See p.41 tuning diodes
D2	Tuning varactor BB105A	

R1	Met film 300k Ω 2% $\frac{1}{4}$ W	24773-321
R2	Met film 300k Ω 2% $\frac{1}{4}$ W	24773-321
R3	Met film 1k Ω 2% $\frac{1}{4}$ W	24773-273
R4	Met film 10k Ω 2% $\frac{1}{4}$ W	24773-297
R5	Met film 100 Ω 2% $\frac{1}{4}$ W	24773-249
R6 †	Met film 22k Ω 2% $\frac{1}{4}$ W	24773-305

T1	Coil assembly	44290-079
----	---------------	-----------

TR1	Transistor WN428	28459-025
-----	------------------	-----------

Unit (A2) oscillator range 2*When ordering, prefix circuit reference with A2*

C1	Cer 0.01 μ F +80-20% 100V	26383-055
C2 †	12pF 10% 500V	26343-125
C3	Cer 220pF 20% 500V	26383-134
C4	Cer var. 0.5 - 5pF	26845-141

D1	Tuning varactor BB105A	} See p.41 tuning diodes
D2	Tuning varactor BB105A	

R1	Met film 300k Ω 2% $\frac{1}{4}$ W	24773-332
R2	Met film 300k Ω 2% $\frac{1}{4}$ W	24773-332

Circuit reference	Description	M.I. code
R3	Met film 1k Ω 2% $\frac{1}{4}$ W	24773-273
R4	Met film 10k Ω 2% $\frac{1}{4}$ W	24773-297
R5	Met film 100 Ω 2% $\frac{1}{4}$ W	24773-249
R6 †	Met film 22k Ω 2% $\frac{1}{4}$ W	24773-305

T1	Coil assembly	44290-080
----	---------------	-----------

TR1	Transistor WN428	28459-025
-----	------------------	-----------

Unit (A3) oscillator range 3*When ordering, prefix circuit reference with A3*

C1	Cer 0.01 μ F +80-20% 100V	26385-055
C2 †	Cer 15pF \pm 0.5pF 500V	26343-127
C3	Cer 220pF 20% 500V	26383-134
C4	Cer var. 0.5 - 5pF	26845-141

D1	Tuning varactor BB105A	} See p.41 tuning diodes
D2	Tuning varactor BB105A	

R1	Met film 300k Ω 2% $\frac{1}{4}$ W	24773-332
R2	Met film 300k Ω 2% $\frac{1}{4}$ W	24773-332
R3	Met film 1k Ω 2% $\frac{1}{4}$ W	24773-273
R4	Met film 10k Ω 2% $\frac{1}{4}$ W	24773-297
R5	Met film 100 Ω 2% $\frac{1}{4}$ W	24773-249

T1	Coil assembly	44290-081
----	---------------	-----------

TR1	Transistor WN428	28459-025
-----	------------------	-----------

Unit (A4) oscillator range 4*When ordering, prefix circuit reference with A4*

C1	Cer 0.001 μ F +80-20% 500V	26383-242
C2 †	Cer 10pF \pm 0.5pF 500V	26343-121
C3	Cer 220pF 20% 500V	26383-134
C4	Cer var. 0.5 - 5pF	26845-141

D1	Tuning varactor BB105A	} See p.41 tuning diodes
D2	Tuning varactor BB105A	

For symbols and abbreviations see introduction to this chapter

Circuit reference	Description	M.I. code	Circuit reference	Description	M.I. code
R1	Met film 300k Ω 2% $\frac{1}{4}$ W	24773-332	C3	Cer 220pF 20% 500V	26383-134
R2	Met film 300k Ω 2% $\frac{1}{4}$ W	24773-332	C4	Cer var. 0.5 - 5pF	26845-141
R3	Met film 1k Ω 2% $\frac{1}{4}$ W	24773-273			
R4	Met film 10k Ω 2% $\frac{1}{4}$ W	24773-297	D1	Tuning varactor BB105A	See p.41 tuning diodes
R5	Met film 100 Ω 2% $\frac{1}{4}$ W	24773-249	D2	Tuning varactor BB105A	
T1	Coil assembly	44290-082	R1	Met film 300k Ω 2% $\frac{1}{4}$ W	24773-332
TR1	Transistor WN428	28459-025	R2	Met film 300k Ω 2% $\frac{1}{4}$ W	24773-332
Unit (A5) oscillator range 5			R3	Met film 1k Ω 2% $\frac{1}{4}$ W	24773-273
When ordering, prefix circuit reference with A5			R4	Met film 10k Ω 2% $\frac{1}{4}$ W	24773-297
C1	Cer 0.001 μ F +80-20% 500V	26383-242	R5	Met film 100 Ω 2% $\frac{1}{4}$ W	24773-249
C2	† Cer 10pF \pm 0.5pF 500V	26343-121	T1	Coil assembly	44290-084
C3	Cer 220pF 20% 500V	26383-134	TR1	Transistor WN428	28459-025
C4	Cer var. 0.5 - 5pF	26845-141	Unit (A7) oscillator range 7		
			When ordering, prefix circuit reference with A7		
D1	Tuning varactor BB105A	See p.41 tuning diodes	C1	Cer 680pF +40-20% 500V	26383-141
D2	Tuning varactor BB105A		C2	† Cer 7.5pF \pm 0.5pF 500V	26343-117
R1	Met film 300k Ω 2% $\frac{1}{4}$ W	24773-332	C3	Cer 220pF 20% 500V	26383-134
R2	Met film 300k Ω 2% $\frac{1}{4}$ W	24773-332	C4	Cer var. 0.5 - 5pF	26845-141
R3	Met film 1k Ω 2% $\frac{1}{4}$ W	24773-273			
R4	Met film 10k Ω 2% $\frac{1}{4}$ W	24773-297	D1	Tuning varactor BB105A	See p.41 tuning diodes
R5	Met film 100 Ω 2% $\frac{1}{4}$ W	24773-249	D2	Tuning varactor BB105A	
T1	Coil assembly	44290-083	R1	Met film 300k Ω 2% $\frac{1}{4}$ W	24773-332
TR1	Transistor WN428	28459-025	R2	Met film 300k Ω 2% $\frac{1}{4}$ W	24773-332
Unit (A6) oscillator range 6			R3	Met film 1k Ω 2% $\frac{1}{4}$ W	24773-273
When ordering, prefix circuit reference with A6			R4	Met film 10k Ω 2% $\frac{1}{4}$ W	24773-297
C1	Cer 0.001 μ F +80-20% 500V	26383-242	R5	Met film 100 Ω 2% $\frac{1}{4}$ W	24773-249
C2	† Cer 7.5pF \pm 0.5pF 500V	26343-117	T1	Coil assembly	44290-085
			TR1	Transistor WN428	28459-025

For symbols and abbreviations see introduction to this chapter

Circuit reference	Description	M.I. code
Unit (A8) oscillator range 8		
<i>When ordering, prefix circuit reference with A8</i>		
C1	Cer 470pF +40-20% 500V	26383-139
C2	† Cer 12pF 10% 500V	26343-125
C3	Cer 220pF 20% 500V	26383-134
C4	Cer var. 0.5 - 5pF	26845-141
D1	Tuning varactor BB105A	See p. 41 tuning diodes
D2	Tuning varactor BB105A	
R1	Met film 300kΩ 2% ¼W	24773-332
R2	Met film 300kΩ 2% ¼W	24773-332
R3	Met film 1kΩ 2% ¼W	24773-273
R4	Met film 10kΩ 2% ¼W	24773-297
R5	Met film 100Ω 2% ¼W	24773-249
T1	Coil assembly	44290-086
TR1	Transistor WN428	28459-025

Unit (A9) oscillator range 9

When ordering, prefix circuit reference with A9

C1	Cer 330pF 20% 500V	26383-136
C2	† Cer 10pF ±0.5pF 500V	26343-121
C3	Cer 220pF 20% 500V	26383-134
C4	Cer var. 0.5 - 5pF	26845-141
D1	Tuning varactor BB105A	See p. 41 tuning diodes
D2	Tuning varactor BB105A	
R1	Met film 300kΩ 2% ¼W	24773-332
R2	Met film 300kΩ 2% ¼W	24773-332
R3	Met film 1kΩ 2% ¼W	24773-273
R4	Met film 10kΩ 2% ¼W	24773-297
R5	Met film 100Ω 2% ¼W	24773-249

Circuit reference	Description	M.I. code
T1	Coil assembly	44290-087

TR1	Transistor WN428	28459-025
-----	------------------	-----------

Unit (A10) oscillator range 10

When ordering, prefix circuit reference with A10

C1	Cer 220pF 20% 500V	26383-134
C2	Cer 2.2pF ±0.5% 500V	26343-110
C3	Cer 100pF 20% 500V	26343-167
C4	Cer var. 0.5 - 5pF	26845-141
C5	Cer 68pF 20% 500V	26343-163
C6	Cer 2.2pF ±0.25% 750 V	26324-011
D1	Tuning varactor BB105A	See p. 41 tuning diodes
D2	Tuning varactor BB105A	
D3	Diode 1N4148	
R1	Met film 4.7kΩ 2% ¼W	24773-289
R2	Met film 10kΩ 2% ¼W	24773-297
R3	Met film 10kΩ 2% ¼W	24773-297
R4	Met film 2.2kΩ 2% ¼W	24773-281
R5	Met film 10kΩ 2% ¼W	24773-297
R6	Met film 100Ω 2% ¼W	24773-249
R7	Carb 22Ω 5% ¼W	24312-788
L1	Oscillator inductor	
TR1	Transistor BFR90	28452-167

Unit (A11) oscillator range 11

When ordering, prefix circuit reference with A11

C1	Cer 100pF 20% 500V	26343-167
C2	† Cer 47pF 20% 500V	26343-113
C3	Cer 100pF 20% 500V	26343-167
C4	Cer var. 0.5 - 5pF	26845-141
C5	Cer 68pF 20% 500V	26343-163

For symbols and abbreviations see introduction to this chapter

Circuit reference	Description	M.I. code
D1	Tuning varactor BB105A	See p. 41 tuning diodes
D2	Tuning varactor BB105A	
R1	Met film 4.7k Ω 2% $\frac{1}{4}$ W	24773-289
R2	Met film 10k Ω 2% $\frac{1}{4}$ W	24773-297
R3	Met film 10k Ω 2% $\frac{1}{4}$ W	24773-297
R4	Met film 1k Ω 2% $\frac{1}{4}$ W	24773-273
R5	Met film 10k Ω 2% $\frac{1}{4}$ W	24773-297
R6	Met film 100 Ω 2% $\frac{1}{4}$ W	24773-249
R7	Carb 22 Ω 5% $\frac{1}{4}$ W	24312-788
L1	Oscillator inductor	-
TR1	Transistor BFR90	28452-167

Unit (A12) mother board*When ordering, prefix circuit reference with A12*

C1	Cer 0.01 μ F +80-20% 100V	26383-055
C2	Cer 0.01 μ F +80-20% 100V	26383-055
C3	Cer 0.01 μ F +80-20% 100V	26383-055
C4	Cer 0.001 μ F +80-20% 500V	26383-242
C5	Cer 0.001 μ F +80-20% 500V	26383-242
C6	Cer 0.001 μ F +80-20% 500V	26383-242
C7	Cer 0.001 μ F +80-20% 500V	26383-242
C8	Cer 100pF 20% 500V	26343-167
C9	Cer 68pF 20% 500V	26343-163
C10	Cer 470pF +40-20% 500V	26383-139
C11	Cer 100pF 20% 500V	26343-167
C12	Cer 0.01 μ F +80-20% 100V	26383-055
C13	Cer 0.01 μ F +80-20% 100V	26383-055
C14	Cer 0.001 μ F +80-20% 500V	26383-242
C15	Cer 0.001 μ F +80-20% 500V	26383-242
C16	Cer 0.001 μ F +80-20% 500V	26383-242
C17	Cer 0.001 μ F +80-20% 500V	26383-242
C18	Cer 0.001 μ F +80-20% 500V	26383-242
C19	Cer 470pF +40-20% 500V	26383-139
C20	Cer 470pF +40-20% 500V	26383-139

For symbols and abbreviations see introduction to this chapter

Circuit reference	Description	M.I. code
D1	Diode 1N3062	28336-248
D2	Diode 1N3062	28336-248
D3	Diode 1N3062	28336-248
D4	Diode 1N3062	28336-248
D5	Diode 1N3062	28336-248
D6	Diode 1N3062	28336-248
D7	Diode 1N3062	28336-248
D8	Diode 1N3062	28336-248
D9	Diode 1N3062	28336-248
D10	Diode 1N3062	28336-248
D11	Diode 1N3062	28336-248
D12	Diode 1N3062	28336-248
D13	Diode 1N4148	28336-076

R1	Met film 100k Ω 2% $\frac{1}{4}$ W	24773-321
R2	Met film 1.8k Ω 2% $\frac{1}{4}$ W	24773-279
R3	Met film 100 Ω 2% $\frac{1}{4}$ W	24773-249
R4	Met film 100 Ω 2% $\frac{1}{4}$ W	24773-249
R5	Met film 100 Ω 2% $\frac{1}{4}$ W	24773-249
R6	Met film 100 Ω 2% $\frac{1}{4}$ W	24773-249
R7	Met film 100 Ω 2% $\frac{1}{4}$ W	24773-249
R8	Met film 100 Ω 2% $\frac{1}{4}$ W	24773-249
R9	Met film 100 Ω 2% $\frac{1}{4}$ W	24773-249
R10	Met film 100 Ω 2% $\frac{1}{4}$ W	24773-249
R11	Met film 100 Ω 2% $\frac{1}{4}$ W	24773-249
R12	Met film 100 Ω 2% $\frac{1}{4}$ W	24773-249
R13	Met film 100 Ω 2% $\frac{1}{4}$ W	24773-249

X1	Ferrite bead	41372-006
X2	Ferrite bead	41372-006

Unit (A16) pre-amplifier, modulator, counter amplifier, wide band amplifier*When ordering, prefix circuit reference with A16*

C1	Cer 0.001 μ F +80-20% 500V	26383-242
C2	Cer 0.01 μ F +80-20% 100V	26383-055
C3	Cer 0.001 μ F +80-20% 500V	26383-242
C4	Cer 0.001 μ F +80-20% 500V	26383-242

Circuit reference	Description	M.I. code	Circuit reference	Description	M.I. code
C5	Cer 10pF 20% 500V	26343-121	C42	Cer 0.01μF +80-20% 100V	26383-055
C6	Cer 47pF 20% 500V	26343-113	C43	Cer 10pF 20% 500V	26343-121
C7	Cer 0.01μF +80-20% 100V	26383-055	C44	Cer 18pF 20% 500V	26343-468
C8	Cer 0.01μF +80-20% 100V	26383-055	C45	† Cer 2.2pF 10% 63V	26582-418
C9	Cer 0.001μF +80-20% 500V	26383-242	C46	†	
C10	Cer 0.01μF +80-20% 100V	26383-055	to C49	† Cer 0.001μF +80-20% 500V	26383-242
C11	Cer 0.01μF +80-20% 100V	26383-055	C50	Cer 2.7pF ±0.5pF 500V	26343-109
C12	Cer 1pF ±0.5pF 500V	26343-101	C51	† Cer 3.3pF ±0.5% 500V	26343-111
C13	Cer 0.01μF +80-20% 100V	26383-055			
C14	Cer 0.001μF +80-20% 500V	26383-242	D1, D2	See p.42, detector diodes	
C15	Cer 0.001μF +80-20% 500V	26383-242	D3-D6	} Matched set of eight diodes	44529-007
C16	Cer 0.001μF +80-20% 500V	26383-242	D11-D14		
C17	Cer 0.001μF +80-20% 500V	26383-242	D7, D8	PIN diode	28383-999
C18	Cer 0.001μF +80-20% 500V	26383-242	D9, D10	See p.42, detector diodes	
C19	Cer 0.001μF +80-20% 500V	26383-242			
C20	Cer 0.1μF +50-25% 30V	26383-031	L1	Inductor 100μH 10%	23642-561
C21	† Cer 3.3pF ±0.5pF 63V	26343-459	L2	Inductor 100μH 10%	23642-561
C22	Cer 0.001μF +80-20% 500V	26383-242	L4	Inductor 33μH 10%	23642-558
C23	Cer 0.01μF +80-20% 100V	26383-055			
C24	Cer 0.01μF +80-20% 100V	26383-055	R1	Met film 82Ω 2% ¼W	24773-247
C25	Cer 0.001μF +80-20% 500V	26383-242	R2	Met film 43Ω 1% ¼W	24762-533
C26	Cer 0.01μF +80-20% 100V	26383-055	R3	Met film 100Ω 2% ¼W	24773-249
C27	Cer 0.001μF +80-20% 500V	26383-242	R4	Met film 6.8Ω 2% ¼W	24773-221
C28	Cer 220pF 20% 500V	26383-134	R5	Met film 270Ω 2% ¼W	24773-259
C29	Cer 0.001μF +80-20% 500V	26383-242	R6	Met film 200Ω 2% ¼W	24773-256
C30	Cer 0.01μF +80-20% 100V	26383-055	R7	Met film 250Ω 2% ¼W	24773-259
C31	Cer 0.001μF +80-20% 500V	26383-242	R8	Met film 200Ω 2% ¼W	24773-256
C32	Cer 0.01μF +80-20% 100V	26383-055	R9	† Met film 39Ω 2% ¼W	24773-239
C33	Cer 0.001μF +80-20% 500V	26383-242	R10	Met film 100Ω 2% ¼W	24773-249
C34	Cer 0.001μF +80-20% 500V	26383-242	R11	Met film 22Ω 2% ¼W	24773-233
C35	Cer 0.001μF +80-20% 500V	26383-242	R12	Met film 270Ω 2% ¼W	24773-259
C36	Cer 68pF 20% 500V	26343-163	R13	Met film 120Ω 2% ¼W	24773-251
C37	Cer 82pF 20% 500V	26383-134	R14	Met film 270Ω 2% ¼W	24773-259
C38	Cer 0.001μF +80-20% 500V	26383-242	R15	Met film 47Ω 2% ¼W	24773-241
C39	Cer 18pF 20% 500V	26343-129	R16	Met film 150Ω 2% ¼W	24773-253
C40	Cer 18pF 20% 500V	26343-129	R17	Met film 15kΩ 2% ¼W	24773-301
C41	Cer 0.001μF +80-20% 500V	26383-242	R18	Met film 15kΩ 2% ¼W	24773-301

For symbols and abbreviations see introduction to this chapter

Circuit reference	Description	M.I. code	Circuit reference	Description	M.I. code
R19	Met film 15Ω 2% ¼W	24773-229	Unit (A17) ALC and AM driver		
R20	Met film 82Ω 2% ¼W	24773-247	<i>When ordering, prefix circuit reference with A17</i>		
R21	Met film 200Ω 2% ¼W	24773-256			
R22 †	Met film 68kΩ 2% ¼W	24773-317	C1	Cer 0.01μF +80-20% 100V	26383-055
R23	Met film 1kΩ 2% ¼W	24773-273	C2	Cer 0.1μF +50-20% 30V	26383-031
R24	Met film 470Ω 2% ¼W	24773-265	C3	Elec 22μF +100-20% 25V	26415-805
R25	Met film 5.6kΩ 2% ¼W	24773-291	C4	Elec 47μF +100-20% 40V	26415-810
R26	Met film 6.8kΩ 2% ¼W	24773-293	C5	Elec 47μF +100-20% 40V	26415-810
R27	Met film 200Ω 2% ¼W	24773-256	C6	Elec 10μF +100-20% 63V	26415-802
R28	Met film 390Ω 2% ¼W	24773-263	C7	Plas 2.2μF 10% 63V	26582-418
R29	Met film 15Ω 2% ¼W	24773-229	C8	Cer 100pF 20% 500V	26343-167
R30 †	Met film 56kΩ 2% ¼W	24773-315	C9	Cer 100pF 20% 100V	26343-167
R31	Met film 1kΩ 2% ¼W	24773-273	C10	Cer 0.01μF +80-20% 100V	26383-055
R32	Met film 82Ω 2% ¼W	24773-247	C11	Elec 22μF 20% 15V	26486-583
R33	Met film 200Ω 2% ¼W	24773-256	C12	Cer 100pF 20% 500V	26343-167
R34 †	Met film 12kΩ 2% ¼W	24773-299	C13	Cer 100pF 20% 500V	26343-167
R35	Met film 430Ω 2% ¼W	24773-264	C14 †	Plas 5500pF 2% 125V	26516-666
R36	Met film 82Ω 1% ¼W	24762-569			
R37	Met film 1kΩ 2% ¼W	24773-273	D1 } D2 }	See p.42, detector diodes	
R38	Met film 560Ω 2% ¼W	24773-267	D3	Diode 1N4148	28336-676
R40	Met film 22Ω 2% ¼W	24773-233	D4 } D5 }	See p.42, detector diodes	
R41 †	Met film 68Ω 2% ¼W	24773-245			
R42	Met film 390Ω 2% ¼W	24773-263			
T1	Transformer	43590-009			
T2	Transformer	43590-009	IC1	μA741 (operational amplifier)	28461-304
TR1	Transistor BFR90	28452-167			
TR2	Transistor BFR90	28452-167	R1	Met film 1kΩ 2% ¼W	24773-273
TR3	Transistor BFY90	28452-157	R2	Met film 1kΩ 2% ¼W	24773-273
TR4	Transistor BFY90	28452-157	R3	Met film 4.7kΩ 2% ¼W	24773-289
TR5	Transistor BFR90	28452-167	R4	Met film 10kΩ 2% ¼W	24773-297
TR6	Transistor BFY90	28452-157	R5	Carb var. 220Ω 10% ½W	25711-546
TR7	Transistor BFY90	28452-157	R6 †	Met film 560Ω 2% ¼W	24773-267
TR8	Transistor BFY90	28452-157	R7 †	Met film 390Ω 2% ¼W	24773-261
			R9	Met film 22kΩ 2% ¼W	24773-305
X3	Ceramic bead	23213-146	R10	Met film 10kΩ 2% ¼W	24773-297

For symbols and abbreviations see introduction to this chapter

[illegible]

For symbols and abbreviations see introduction to this chapter

Circuit reference	Description	M.I. code	Circuit reference	Description	M.I. code
R19	Met film 2.2k Ω 2% $\frac{1}{4}$ W	24773-281	R15	Met film 42k Ω 2% $\frac{1}{4}$ W	24773-319
R20	Met film 8.2k Ω 2% $\frac{1}{4}$ W	24773-295	R16	Met film 220k Ω 2% $\frac{1}{4}$ W	24773-329
R21	Met film 10k Ω 2% $\frac{1}{4}$ W	24773-297	R17	Met film 10k Ω 2% $\frac{1}{4}$ W	24773-297
R22	Carb var 220 Ω 10% $\frac{1}{2}$ W	25711-546	R18	Met film 100 Ω 2% $\frac{1}{4}$ W	24773-249
R23	Carb var 1k Ω 10% $\frac{1}{2}$ W	25711-544	R19	Met film 100 Ω 2% $\frac{1}{4}$ W	24773-249
R24	Met film 15k Ω 2% $\frac{1}{4}$ W	24773-301	R20	Met film 100 Ω 2% $\frac{1}{4}$ W	24773-249
R25	Met film 10k Ω 2% $\frac{1}{4}$ W	24773-297	R21	Met film 100 Ω 2% $\frac{1}{4}$ W	24773-249
R26	Met film 2.2k Ω 2% $\frac{1}{4}$ W	24773-281	R22 †	Met film 240 Ω 2% $\frac{1}{4}$ W	24773-258
TR1	Transistor BC108	28452-787	R23 †	Met film 22k Ω 2% $\frac{1}{4}$ W	24773-305
TR2	Transistor BC109	28452-777	R25	Met film 220 Ω 2% $\frac{1}{4}$ W	24773-257
Unit (A19) modulation oscillator and FM drive			R26	Met film 9.1k Ω 2% $\frac{1}{4}$ W	24773-296
When ordering, prefix circuit reference with A19			R27	Met film 10k Ω 2% $\frac{1}{4}$ W	24773-297
C1	Plas 0.018 μ F 2% 125V	26516-786	R28	Met film 2.2k Ω 2% $\frac{1}{4}$ W	24773-281
C2	Plas 0.018 μ F 2% 125V	26516-786	R29 †	Met film 220 Ω 2% $\frac{1}{4}$ W	24773-257
C3	Elec 22 μ F +100-20% 25V	26415-805	R30 †	Met film 270 Ω 2% $\frac{1}{4}$ W	24773-259
C4	Cer 0.047 μ F -50-20% 30V	26383-018	TR1	Transistor BC108	28452-787
C5	Elec 22 μ F +100-20% 25V	26415-805	TR2	Transistor BCY71	28435-235
C6	Plas 0.47 μ F 10% 63V	26582-410	TR3	Transistor BCY71	28435-235
C7	Elec 100 μ F 20% 10V	26486-606	TR4	Transistor BC108	28452-787
C8	Elec 100 μ F 20% 10V	26486-606	TR5	Transistor BC108	28452-787
C9	Elec 22 μ F 20% 15V	26486-583	Unit (A20) power supply		
R1	Met film 18k Ω 2% $\frac{1}{4}$ W	24773-303	When ordering, prefix circuit reference with A20		
R2	Met film 18k Ω 2% $\frac{1}{4}$ W	24773-303	C2	Elec 100 μ F +100-20% 25V	26423-244
R3	Met film 2.2k Ω 2% $\frac{1}{4}$ W	24773-281	C3	Cer 0.0047 μ F -80-20% 100V	26383-321
R4	Met film 680 Ω 2% $\frac{1}{4}$ W	24773-269	C4	Tant 4.7 μ F 20% 35V	26486-219
R5	Met film 22k Ω 2% $\frac{1}{4}$ W	24773-305	C5	Elec 100 μ F +100-20% 25V	26423-243
R6	Met film 9.1k Ω 2% $\frac{1}{4}$ W	24773-296	C6	Cer 0.01 μ F +100-20% 100V	26383-055
R7	Thermistor 20k Ω (RA54) 20%	25683-387	C7	Plas 1 μ F 10% 63V	26582-414
R8	Met film 1k Ω 2% $\frac{1}{4}$ W	24773-273	C8	Plas 2.2 μ F 10% 63V	26582-418
R9	Met film 100k Ω 2% $\frac{1}{4}$ W	24773-321	C9	Cer 0.1 μ F -50-20% 30V	26383-031
R10	Met film 560 Ω 2% $\frac{1}{4}$ W	24773-267	D1	Diode 1N4004	28357-028
R11	Met film 6.8k Ω 2% $\frac{1}{4}$ W	24773-293	D2	Diode 1N4004	28357-028
R12	Car var. 2.5k Ω 20% 0.21W	25541-322	D3	Diode 1N4004	28357-028
			D4	Diode 1N4004	28357-028

For symbols and abbreviations see introduction to this chapter

[illegible]

For symbols and abbreviations see introduction to this chapter

<i>Circuit reference</i>	<i>Description</i>	<i>M.I. code</i>	<i>Circuit reference</i>	<i>Description</i>	<i>M.I. code</i>
SD	Microswitch UHF	23483-131	Control knob		
SE	Microswitch UHF	23483-131	Function		41145-407
SF	Microswitch UHF	23483-131	Carrier range		41145-407
SG	Microswitch UHF	23483-131	Fine tune		41141-708
SH	Microswitch UHF	23483-131	Tune		41149-014
SJ	Microswitch UHF	23483-131	Extra fine tune		41149-016
SK	Microswitch UHF	23483-131	Set mod		41149-002
Unit (A23) FM predistortion—temperature compensation			Deviation		41149-002
<i>When ordering, prefix circuit reference with A23</i>			AM depth		41149-002
			Stepped r.f. output		41145-407
			Fine r.f. output		41149-002
C1	Elec 4.7 μ F 20% 35V	26486-219	Cursor (pointer assembly)		41179-898
C2	Elec 4.7 μ F 20% 35V	26486-219	Drive cord		16410-604
			Drive cord spring		31119-017
D1	Diode 1N4148	28336-676	Drive cord pin		33900-110
D2	Diode 1N4148	28336-676	Handle (strap)		37587-925
			Handle (attachment)		37588-110
R1	Carb 680k Ω 5% 1/8W	24311-941	Handle (end caps)		22315-573
R2	Met film 10k Ω 2% 1/4W	24773-297	Scale 10-14.3 MHz		31759-004
R3	Met film 100k Ω 2% 1/4W	24773-321	14.3-20.5 MHz		31759-005
R4	Met film 56k Ω 2% 1/4W	24773-315	20.5-29.9 MHz		31759-006
R5	Met ox 820k Ω 2% 1/2W	24573-143	29.4-42 MHz		31759-007
R6	Met ox 330k Ω 2% 1/2W	24573-133	42-60 MHz		31759-008
R7	Resistor assembly 270 Ω	44359-003	60-86 MHz		31759-009
R8	Met film 220 Ω 2% 1/4W	24773-257	86-124 MHz		31759-010
R9	Met film 560 Ω 2% 1/4W	24773-321	124-177 MHz		31759-011
R10	Thermistor 1.5k Ω (CZ3)	25683-644	177-254 MHz		31759-012
R11	Met film 820 Ω 2% 1/4W	24773-271	254-363 MHz		31759-014
			363-520 MHz		31759-021
Miscellaneous			Scale window		37490-020
Cap and chain (TNC)			Spiral bevel gears	} pair	{ 31318-406 31318-407
		23444-898	(carrier range switch)		

For symbols and abbreviations see introduction to this chapter



Index to Units

<i>Unit number</i>	<i>M.I. code</i>	<i>Description</i>	<i>Parts list page</i>	<i>Circuit diagram Fig.</i>
A0	-	Chassis and panel components	42	All
A1	44827-137	Oscillator range 1	44	7.1
A2	44827-138	Oscillator range 2	44	7.1
A3	44827-139	Oscillator range 3	44	7.1
A4	44827-140	Oscillator range 4	44	7.1
A5	44827-141	Oscillator range 5	45	7.1
A6	44827-142	Oscillator range 6	45	7.1
A7	44827-143	Oscillator range 7	45	7.1
A8	44827-144	Oscillator range 8	46	7.1
A9	44827-145	Oscillator range 9	46	7.1
A10	44827-146	Oscillator range 10	46	7.1
A11	44827-147	Oscillator range 11	46	7.1
A12	44827-148	Mother board	47	7.1
A16	44827-152	Pre-amplifier, modulator, counter amplifier, wide band amplifier	47	7.2
A17	44827-153	ALC and AM driver circuits	49	7.2
A18	44827-154	Monitors	50	7.2
A19	44827-155	Modulation oscillator and FM drive	51	7.3
A20	44827-105	Power supply	51	7.4
A21	44827-222	Fine tuning circuits	52	7.3
A22	44429-004	Coarse RF output (attenuator)	52	7.4
A23	44827-366	Predistortion circuits	53	7.3

Circuit notes

1. COMPONENT VALUES

Resistors: No suffix = ohms, k = kilohms, M = megohms.

Capacitors : No suffix = microfarads, p = picofarads.

Inductors : No suffix = henrys, m = millihenrys, μ = microhenrys.

† value selected during test, nominal value shown.

2. VOLTAGES

Shown in *italics* adjacent to the point to which the measurement refers. See Sect 5.2 for conditions.

These symbols indicate the method used for voltage measurements at various points.

- * Use 4.7k Ω resistor in series with meter.
Position resistor at test point.

- Use 100 V meter range

 
- see Table 5.2.

3. SYMBOLS

Symbols are based on the provisions of B. S. 3939

 arrow indicates clockwise rotation of knob.


 etc., external front or rear panel marking.

 tag on printed board.

 preset control.

 unit identification number.

These symbols are used to identify branches of the power supply circuitry but have no particular physical reality on the printed boards.

 point marked with this symbol is connected to and receives power from point marked with this symbol.



4. CIRCUIT REFERENCES

These are, in general, given in abbreviated form.
See also introduction to Chap. 6.

5. SWITCHES

Rotary switches are drawn schematically.


Letters or figures indicate control knob settings.

1F = 1st section (front panel), front.

1B = 1st section, back


2F = 2nd section, front.

etc.

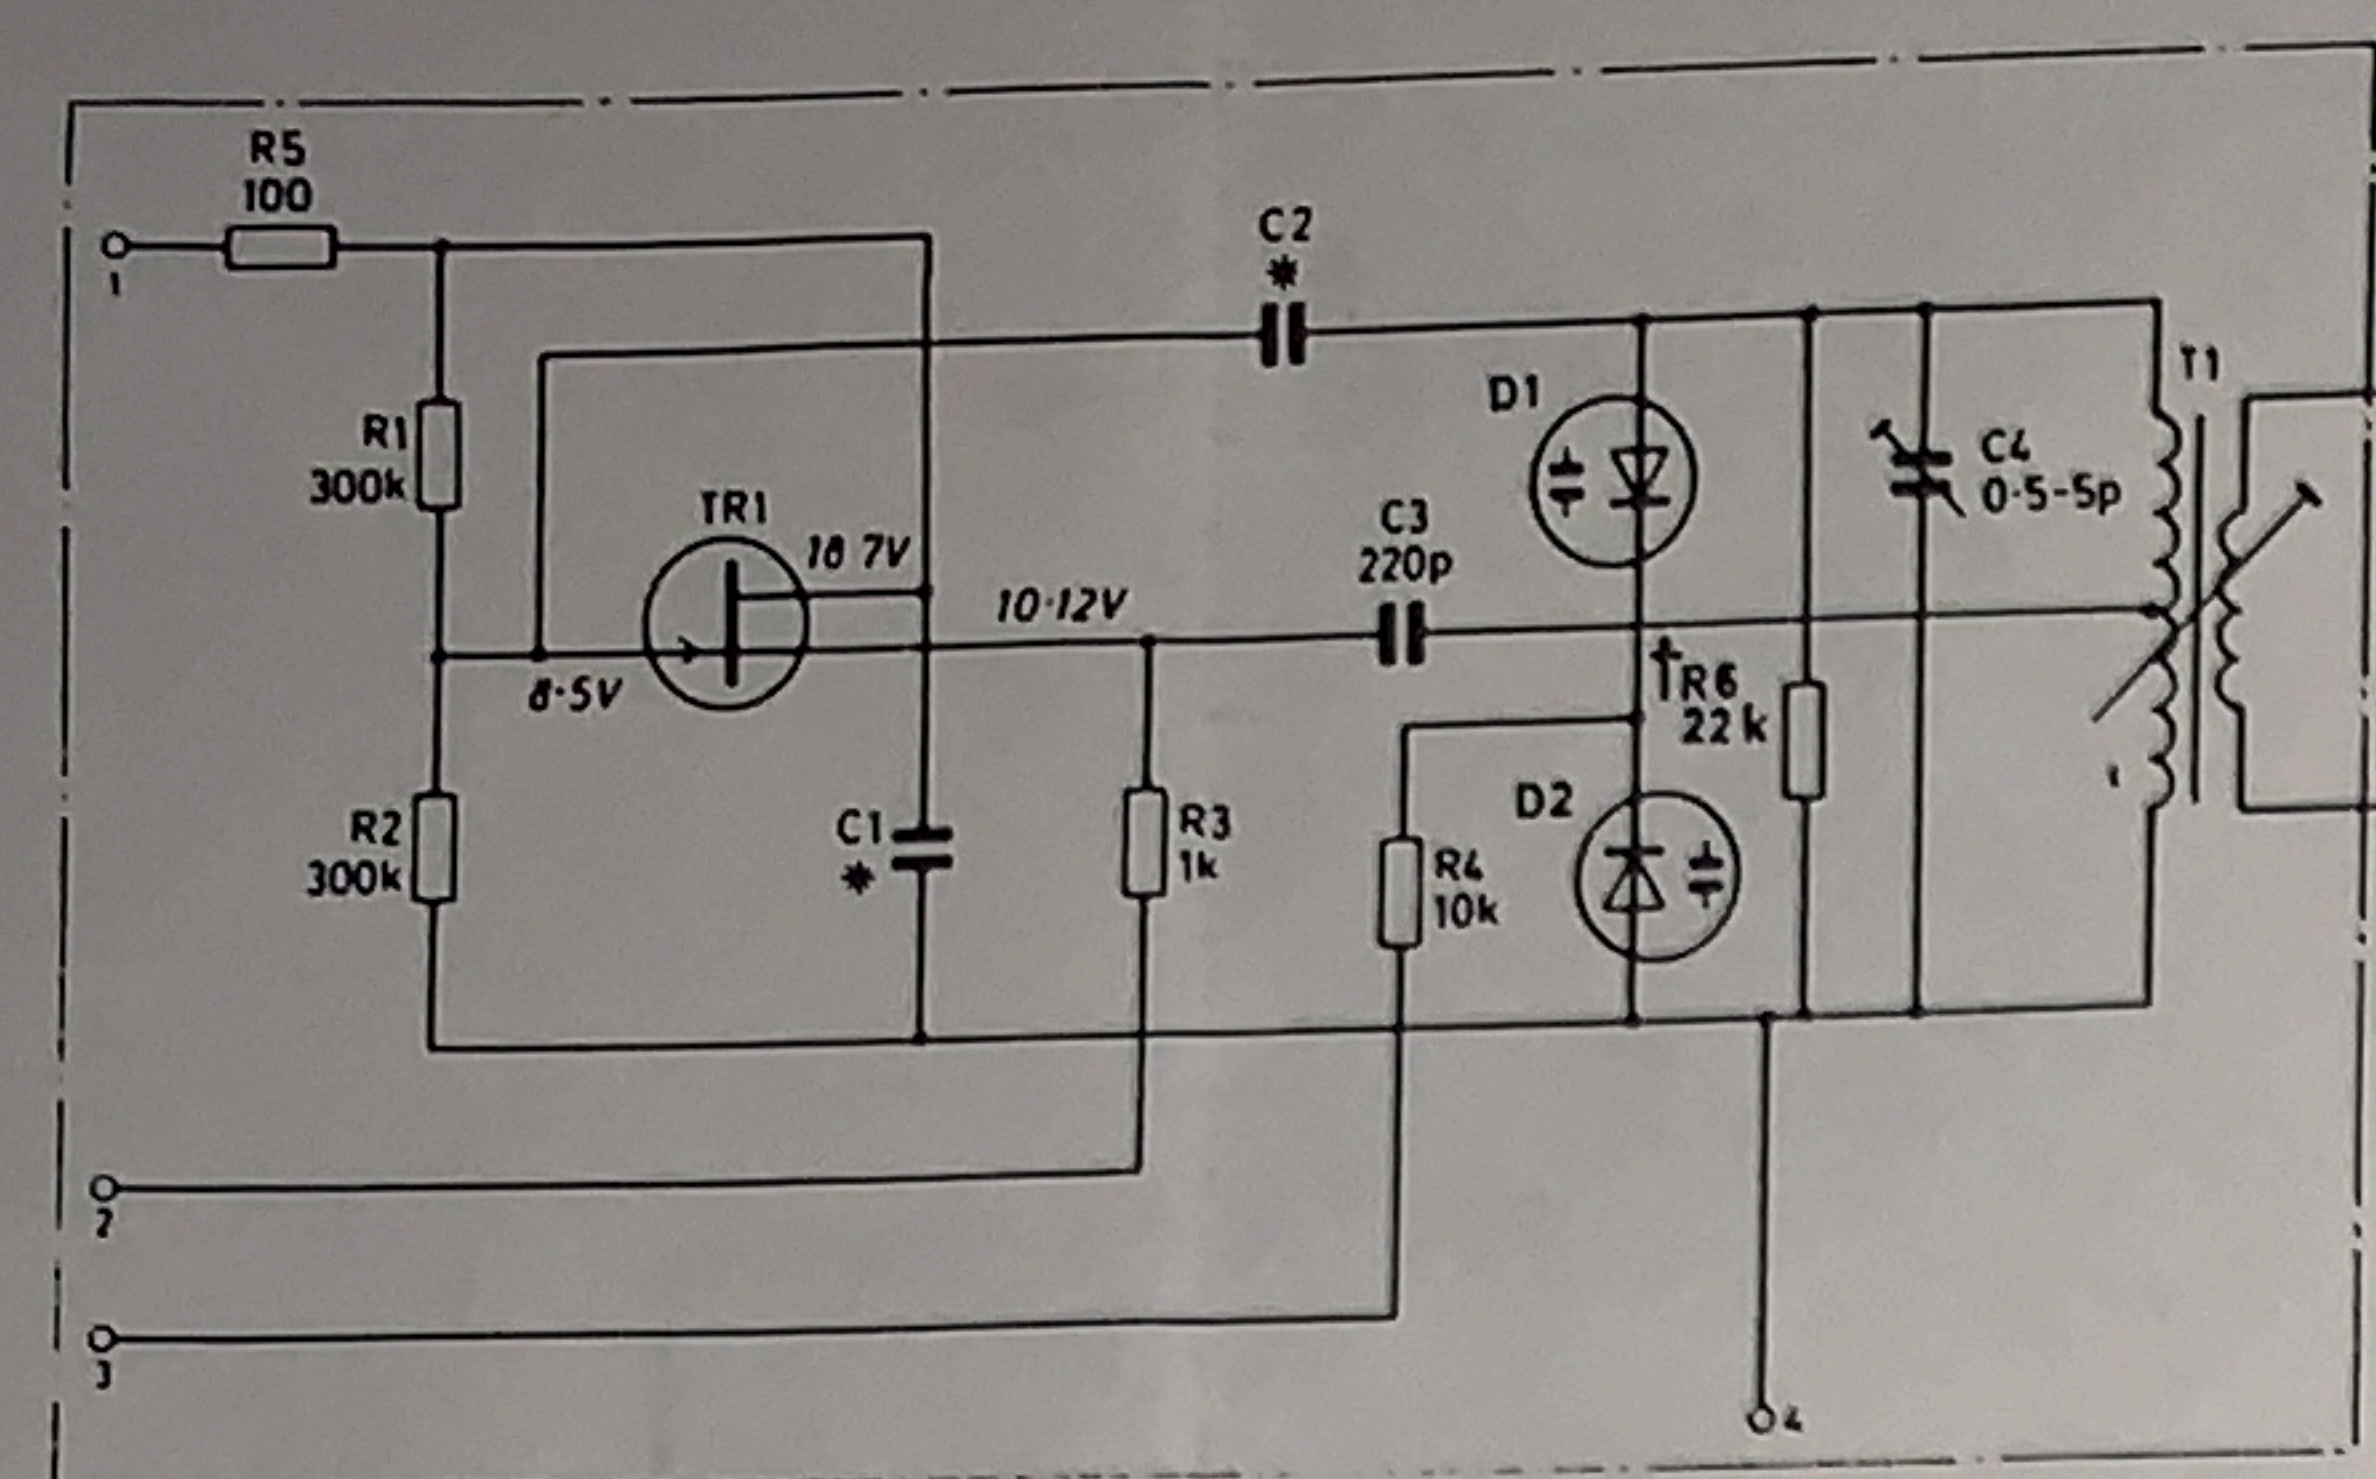

Circuit diagram of Boards A1 to A9

* See table

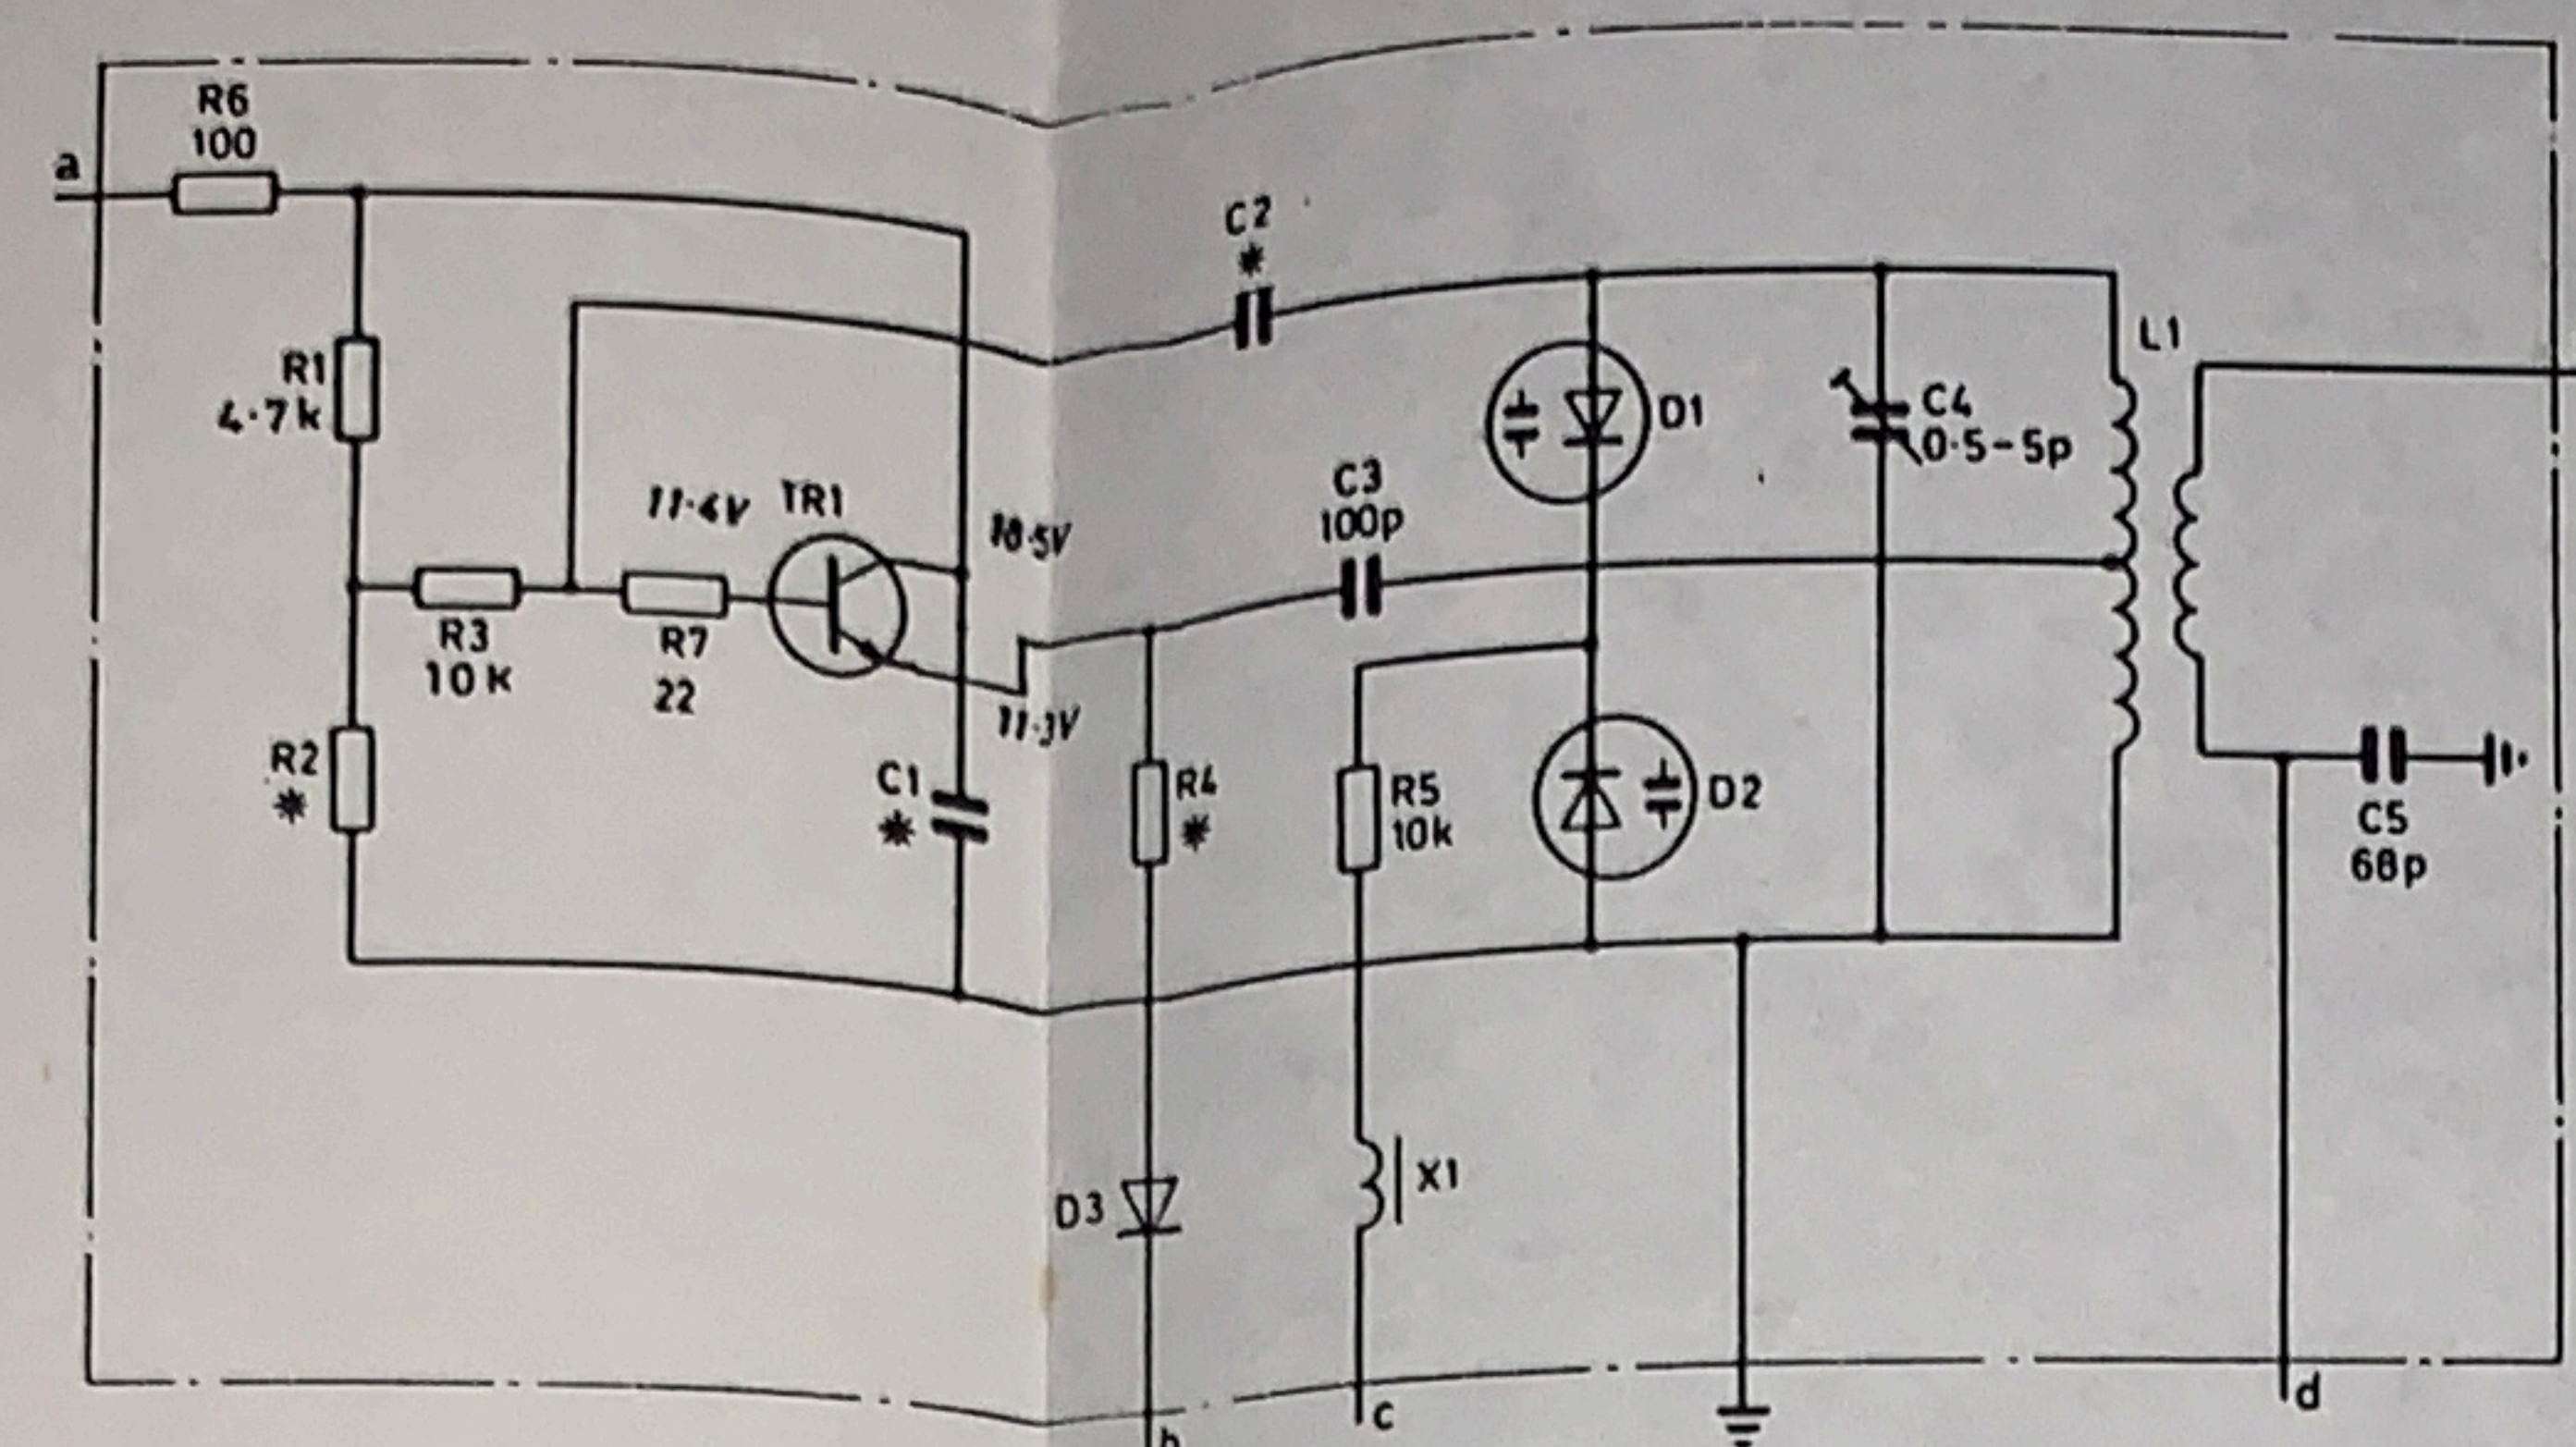

Circuit diagram of Boards A10 and A11

* See table

BOARD	COMPONENT			
	C1	C2	R2	R4
A1	.01	10p	†	
A2	.01	12p	†	
A3	.001	15p	†	
A4	.001	10p	†	
A5	.001	10p	†	
A6	.001	5.6p	†	
A7	680p	18p	†	
A8	470p	12p	†	
A9	330p	10p	†	
A10	220p	2.2p	10k	2.2k
A11	100p	3.3p	3.3k	1k

SB CARRIER

- Ⓐ ON
- Ⓑ OFF
- Ⓒ +6dB

Key to switch positions

SD CARRIER RANGE

- ① 10
- ② 14.3
- ③ 20.5
- ④ 20.4
- ⑤ 42
- ⑥ 60
- ⑦ 86
- ⑧ 124
- ⑨ 177
- ⑩ 254
- ⑪ 363
- ⑫ 520

MHZ

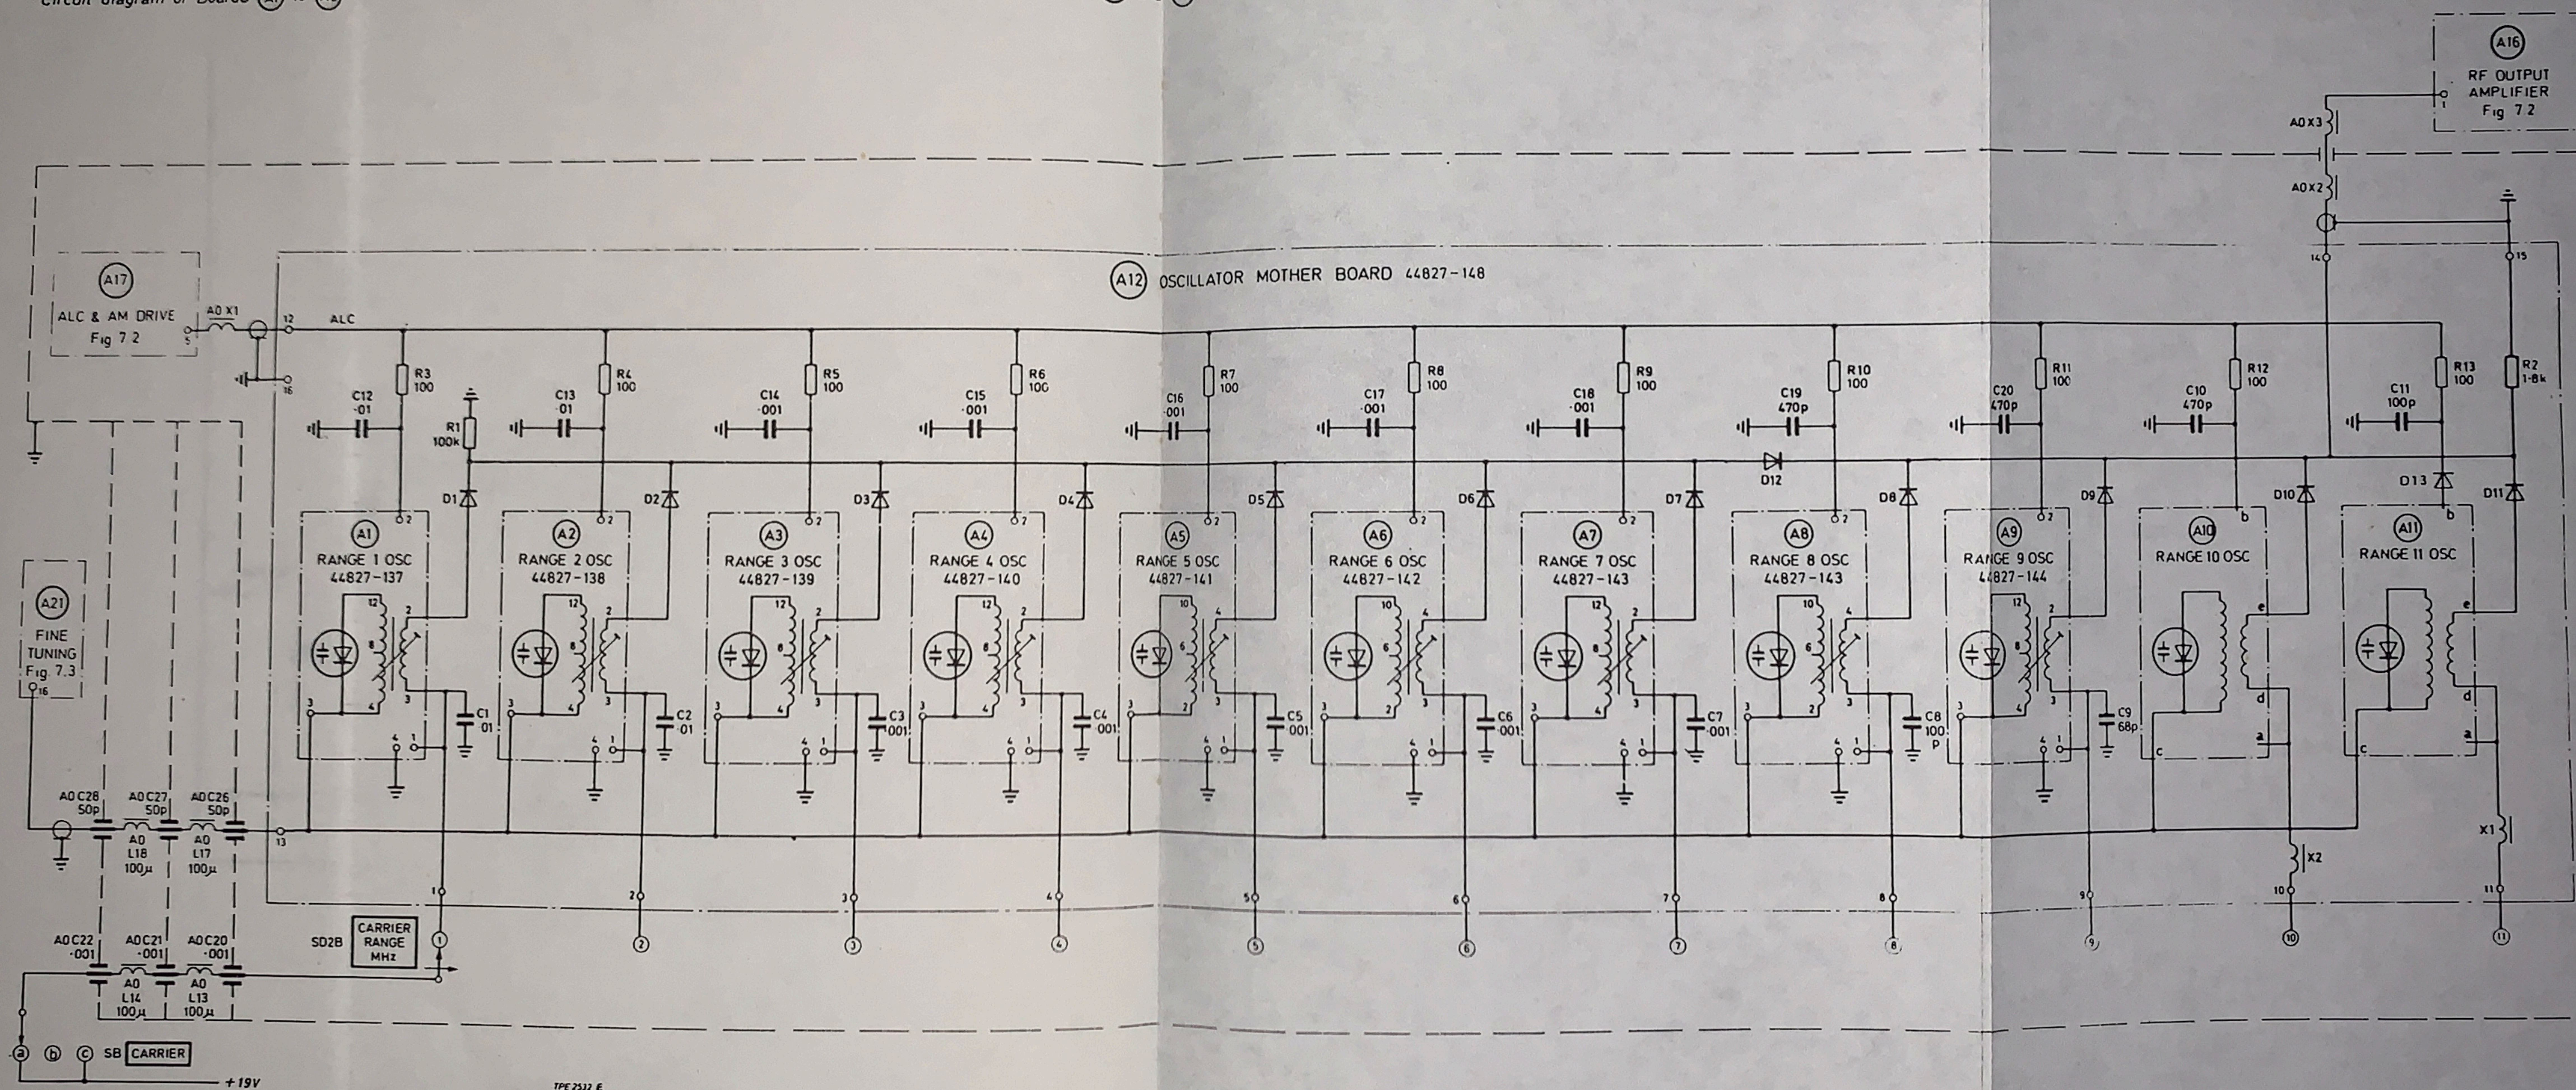


Fig. 7.1 Oscillator mother board

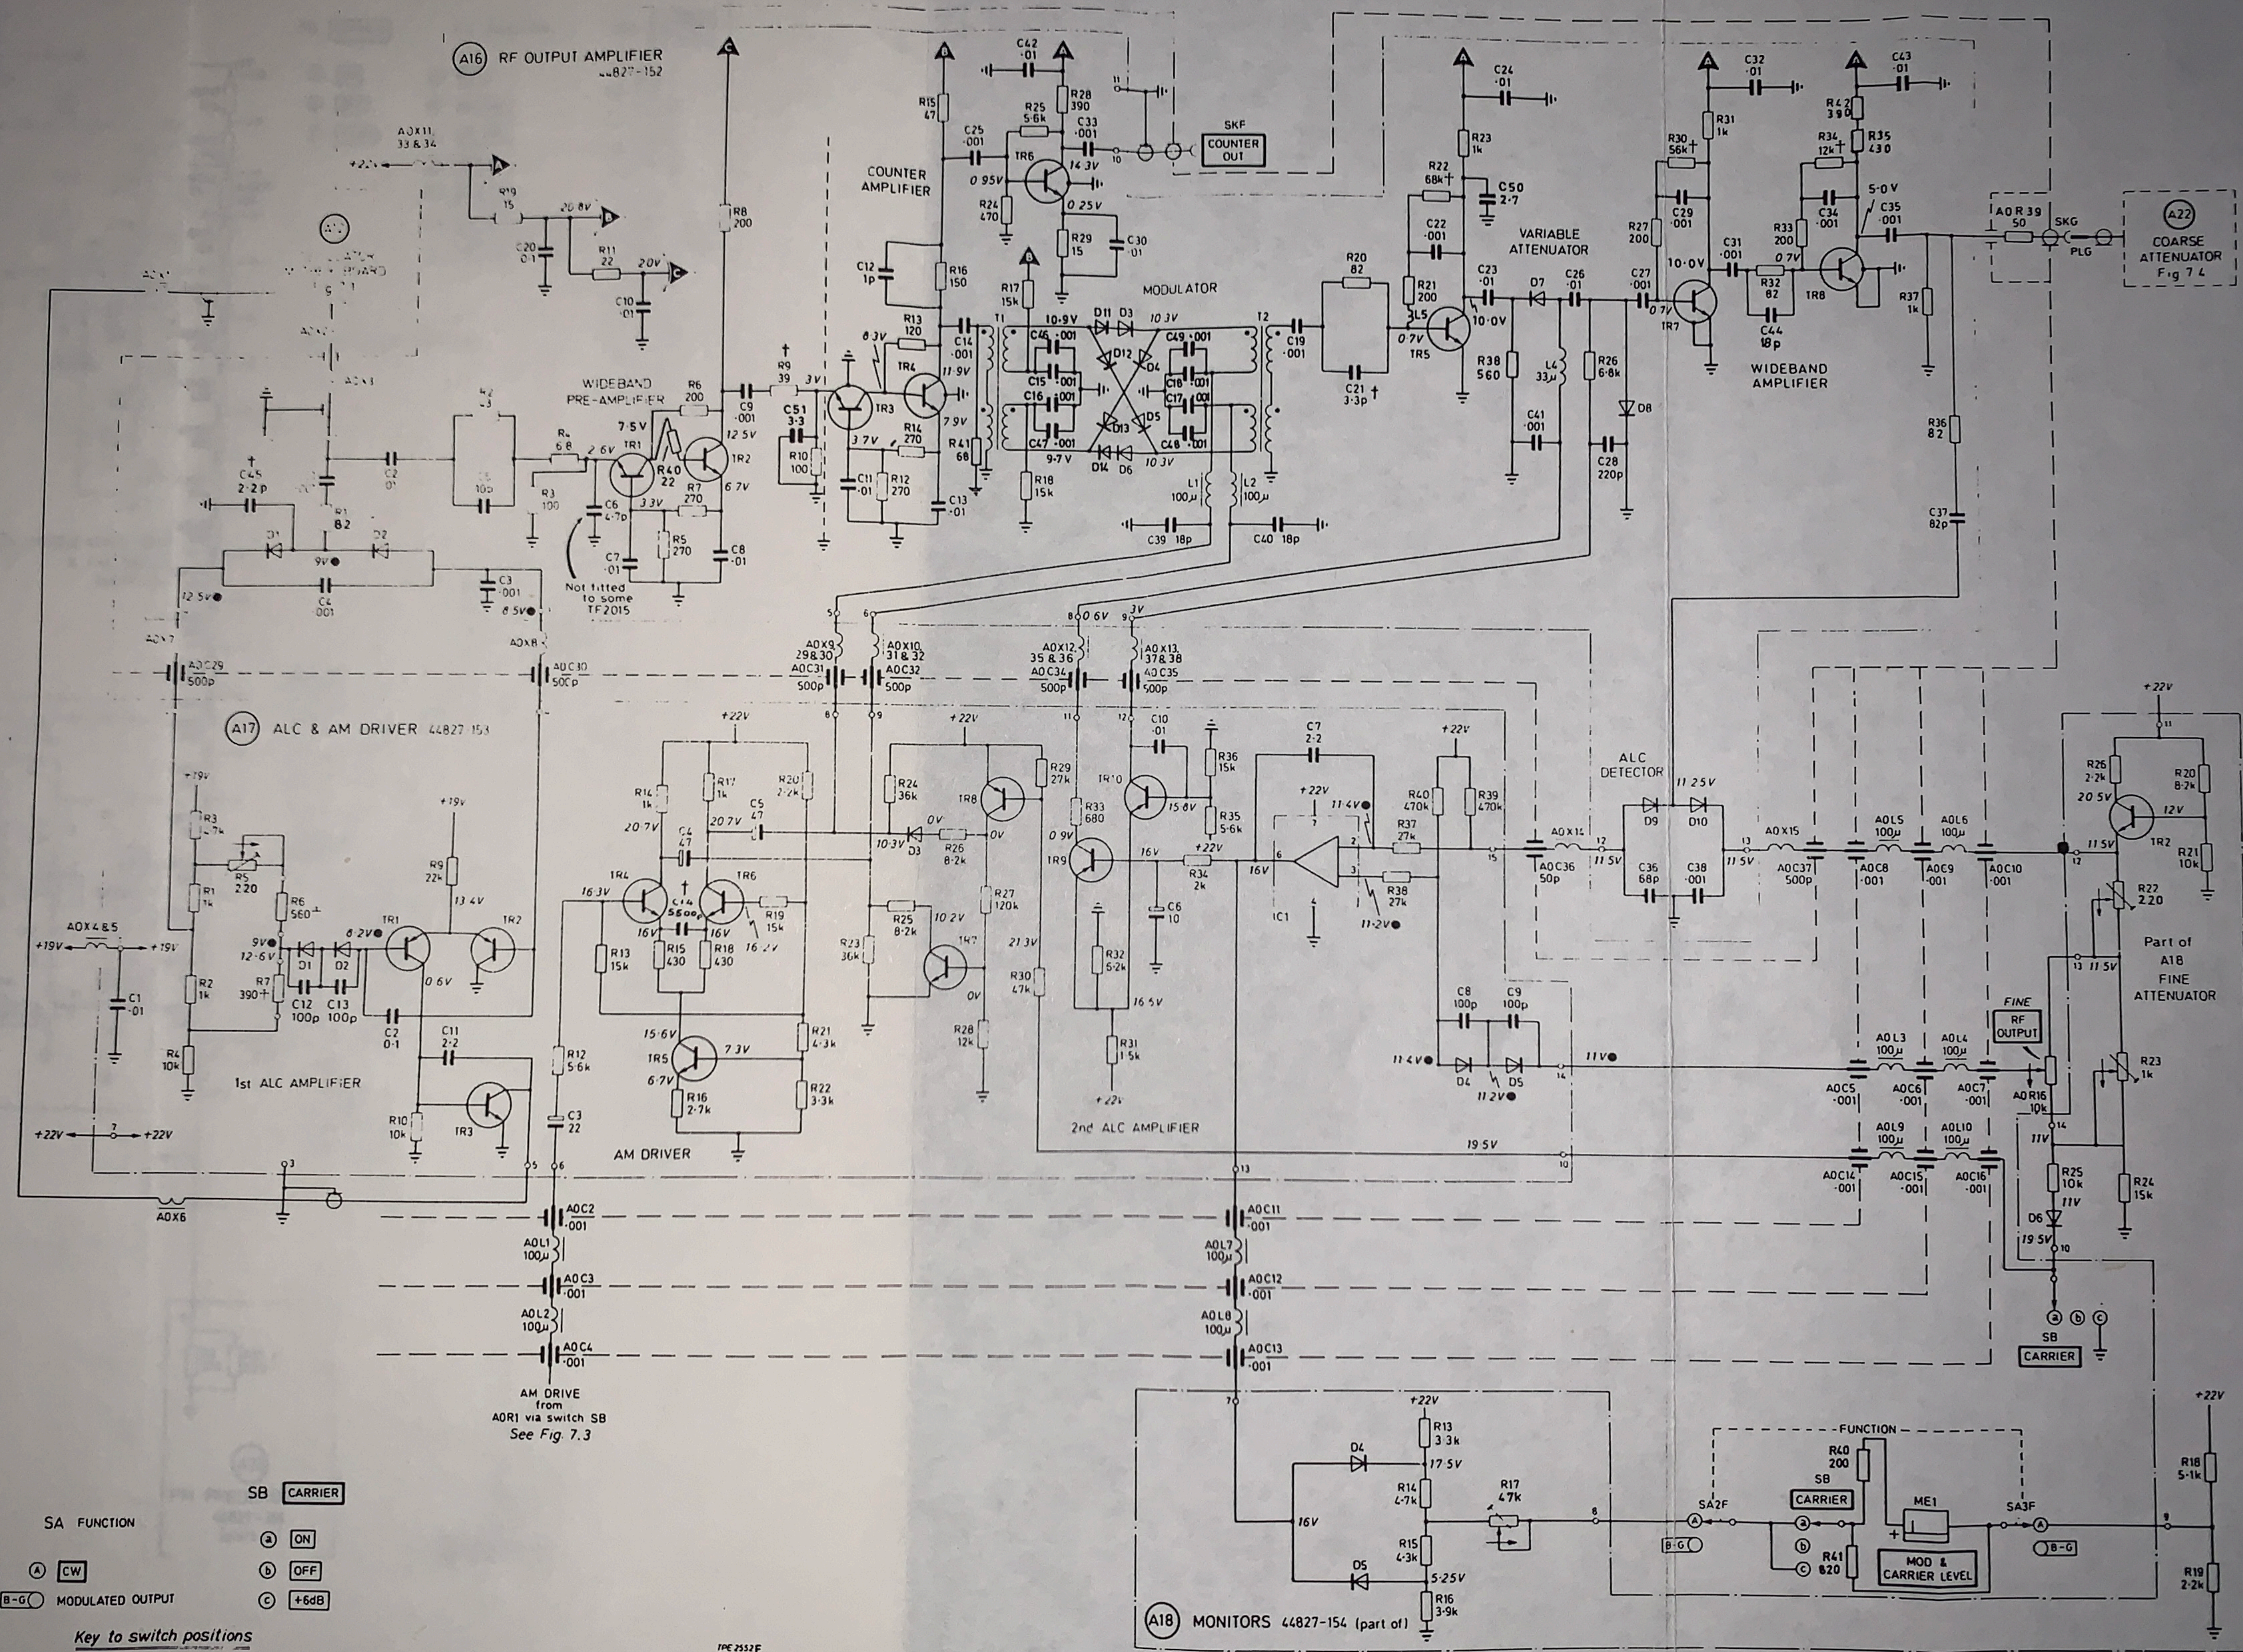


Fig. 7.2 RF Amplifier, ALC and AM

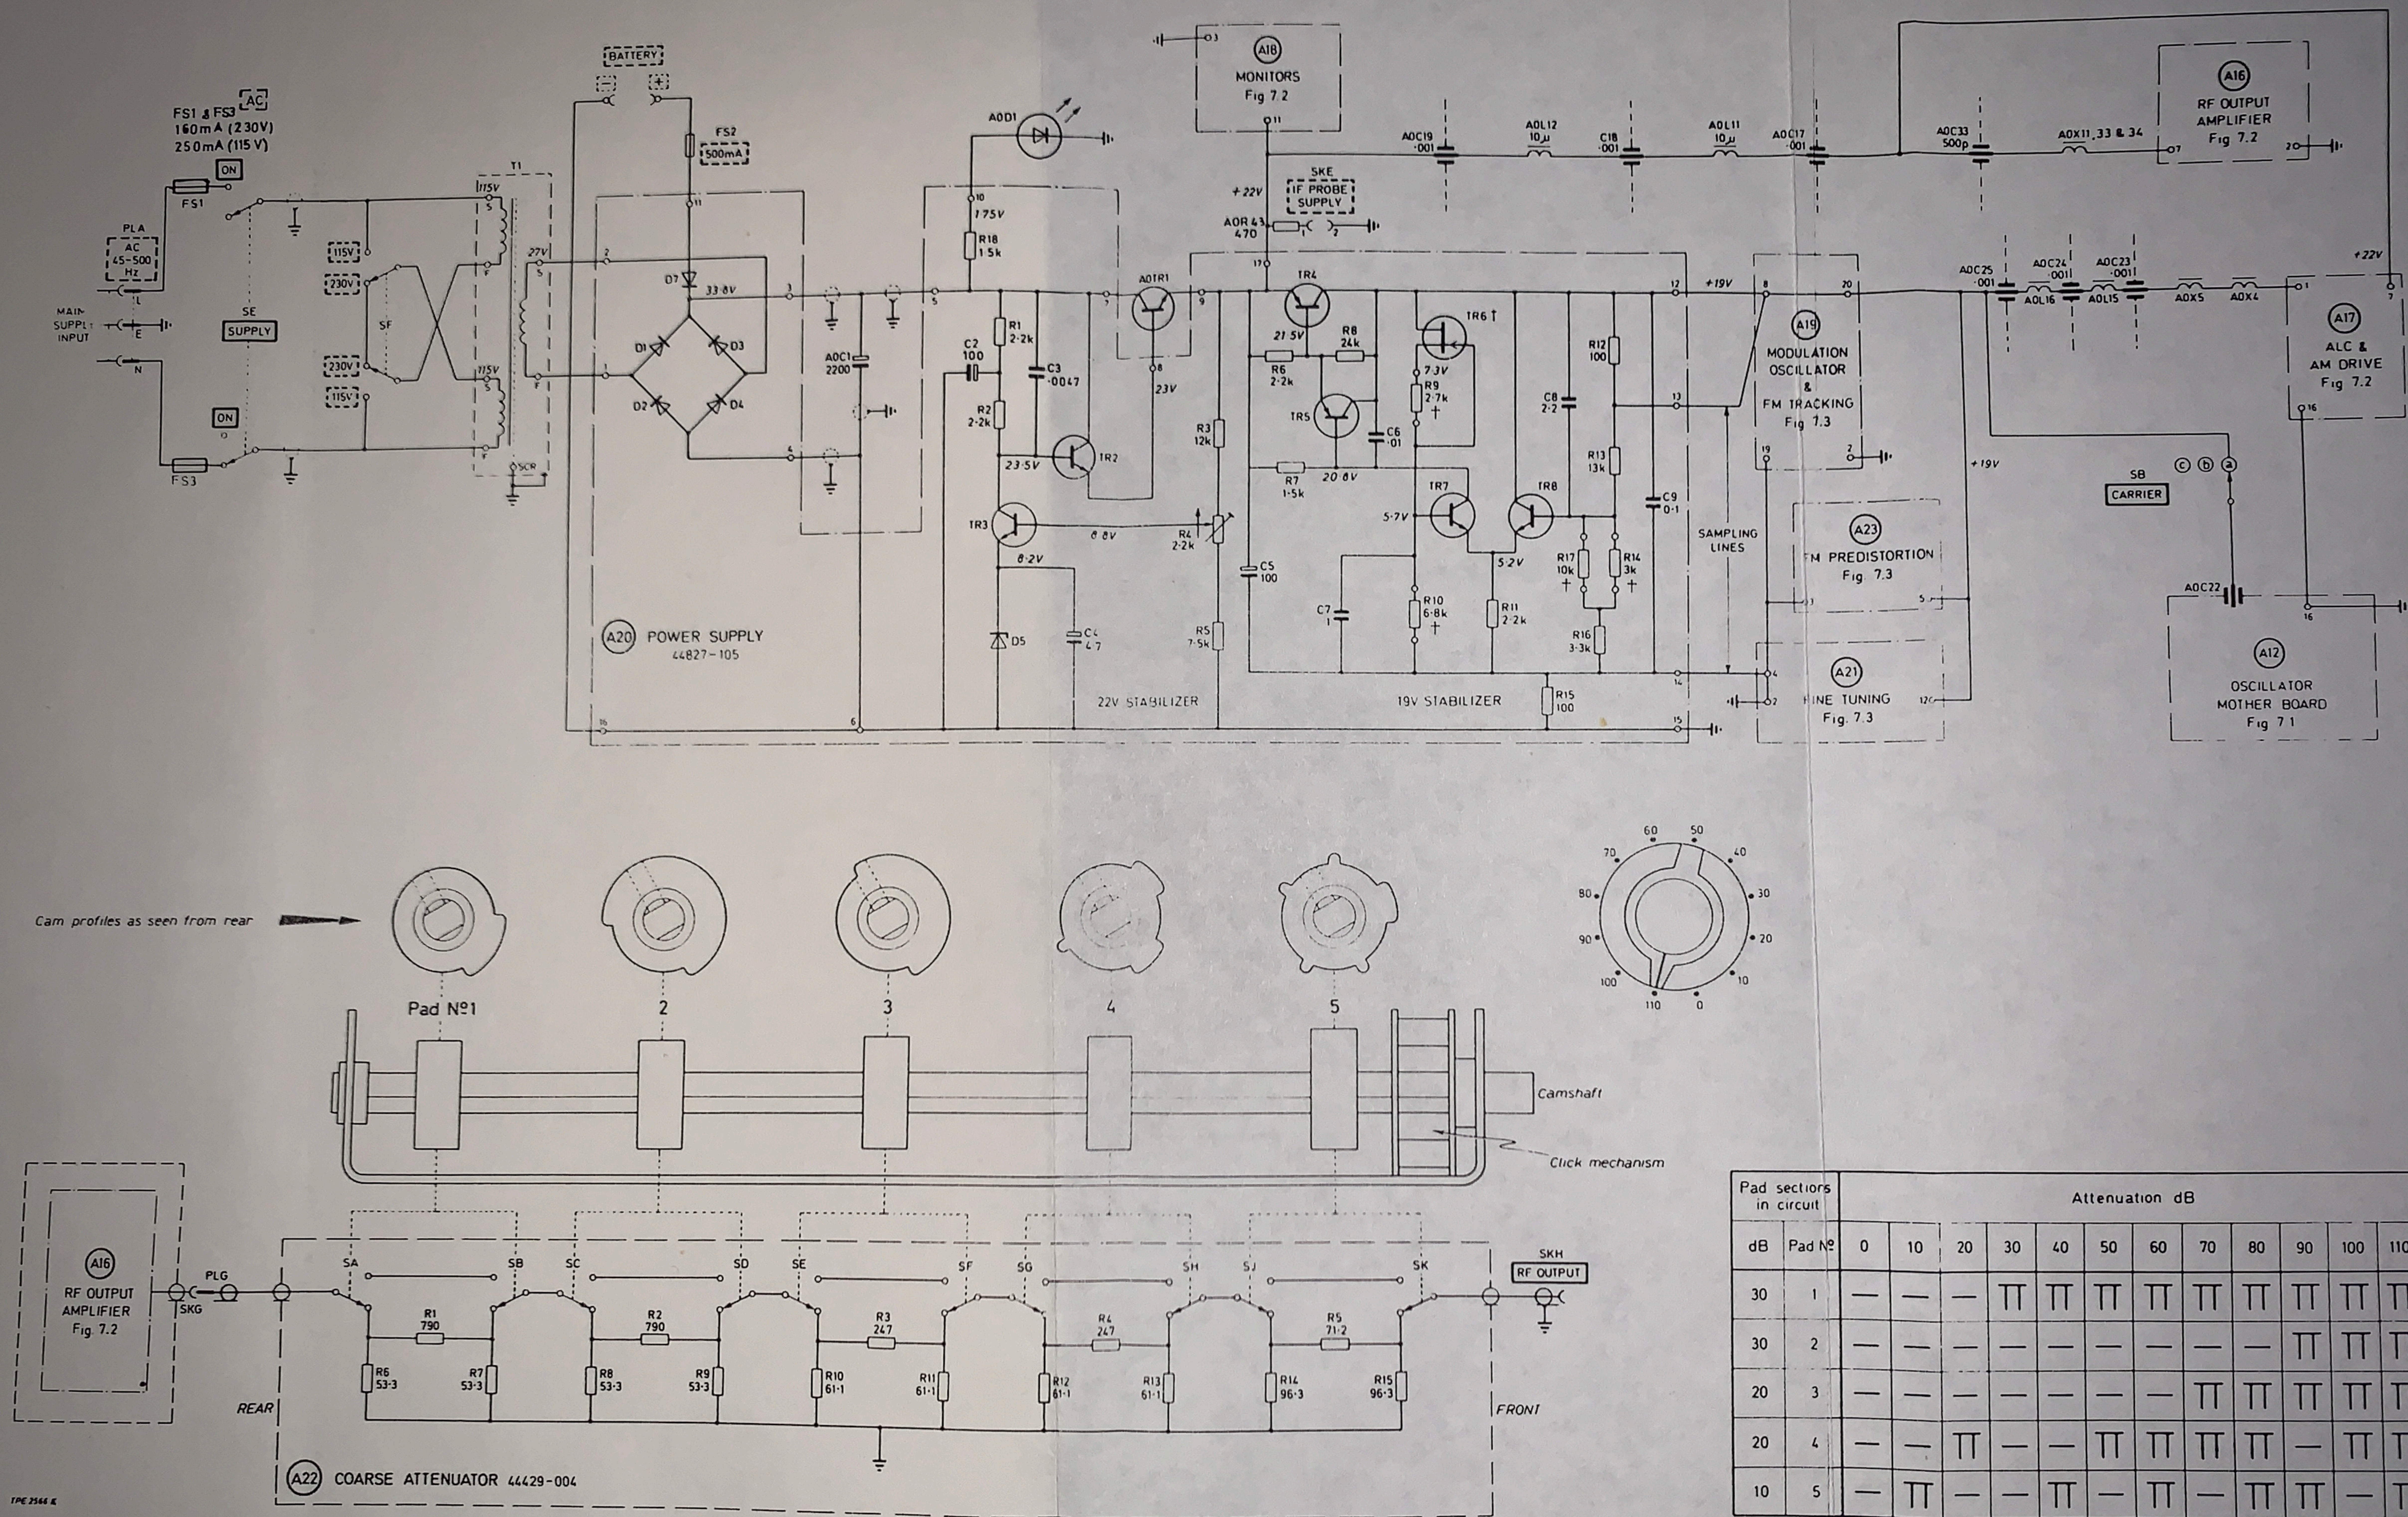


Fig. 7.4 Power supply and coarse attenuator

MARCONI INSTRUMENTS LIMITED

UK

Service Division
The Airport

LUTON

Bedfordshire LU2 9NS
Telephone: (0582) 33866
Telex: 825248

Head Office:
Longacres

ST. ALBANS

Hertfordshire AL4 0JN
Telephone: (0727) 59292
Telex: 23350
Fax: (0727) 57481 (Gp.3)

FRANCE

MARCONI INSTRUMENTS
18 Rue du Plessis-Briard, Le Canal
Courcouronnes

91023 EVRY

Telephone: (16) 077 90 66
Telex: 690428
Fax: (16) 077 69 22

WEST GERMANY

MARCONI MESSTECHNIK GmbH
Landsberger Strasse 65
Postfach 1929

8034 GERMERING

Telephone: (089) 84 93 60
Telex: 5212642
Fax: (089) 8419142 (Gp.3)

SPAIN

MARCONI INSTRUMENTOS S.A.
General Yague 6 bis-5

28020 MADRID

Telephone: (1) 4550391
4550585

Fax: (1) 4551922 (Gp. 3)

USA

MARCONI INSTRUMENTS
3 Pearl Court
Allendale Park

ALLENDALE

New Jersey 07401
Telephone: (201) 934 9050
Telex: 6853077 MIUSA
Twx: (710) 991 9752
Fax: (201) 934 9229